

READY TO GO PEUGEOT 308



EXTERIOR

Remote control key



- A. Unlocking the vehicle.
- B. Locking the vehicle.
- C. Guide-me-home lighting (remotely).

Keyless Entry and Starting



Electronic key - Remote control



- A. Unlocking the vehicle.
- B. Locking the vehicle.
- C. Unlocking the boot and the vehicle.

Unlocking - opening

- i** Unlocking is confirmed by rapid flashing of the direction indicators for a few seconds. Depending on version, the door mirrors unfold, the alarm is deactivated

Back-up key



Unlocking / Locking using the integral key with Keyless Entry and Starting

The integral key is used to lock and unlock the vehicle when the electronic key cannot operate :

- ☞ Maintain a pull on button **1**, to extract the integral key **2**.



Locking

- i** Locking is confirmed by fixed lighting of the direction indicators for a few seconds. Depending on your version, the door mirrors fold, the alarm is activated.

Boot

Opening using the key



Opening using the "Keyless Entry and Starting" remote control



Opening using the "Keyless Entry and Starting" system



☞ With the electronic key on your person in the recognition zone **A**, press the opening control then raise the tailgate.

AdBlue® for BlueHDi Diesel engines

Range and top-up alert



Once the UREA warning lamp comes on, have the AdBlue® topped-up as soon as possible (the driving range indicates how far you can travel before restarting is prevented).



☞ **If you are going to top-up the additive yourself, you must first refer to the handbook.**

Fuel tank

Capacity of the tank: approximately **53** litres (or **45** litres according to version).



Reversing camera



The blue lines represent the general direction of the vehicle (the difference corresponds to the width of your vehicle without the mirrors).


The red lines represent a distance of about 30 cm beyond the edge of your vehicle's rear bumper.

The green lines represent distances of about 1 and 2 metres beyond the edge of your vehicle's rear bumper.

The turquoise blue curves represent the maximum turning circle.

Spare wheel

Access to the spare wheel

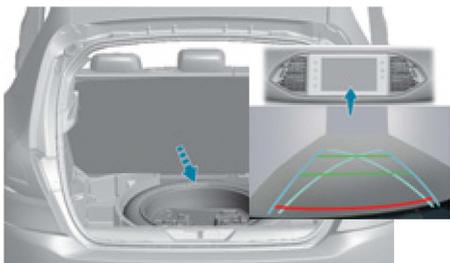


Temporary puncture repair kit

Access to the kit




Bonnet

Opening

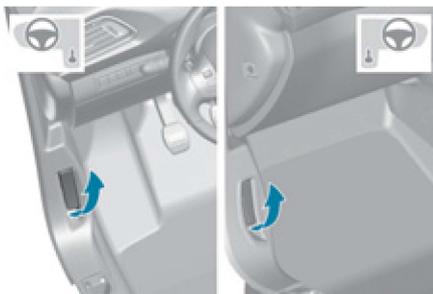

- ☞ Open the door.
- ☞ Pull the release lever, located at the bottom of the door aperture, towards you.

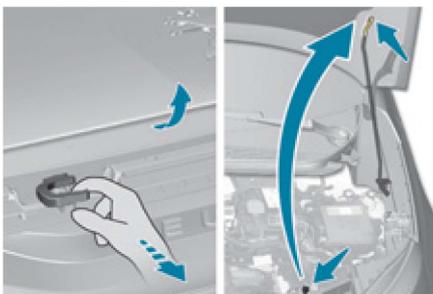

- ☞ Pull the safety catch towards you, then raise the bonnet.
- ☞ Unclip the stay from its housing and place it in the support slot to hold the bonnet open.

Closing

- ☞ Take the stay out of its support slot.
- ☞ Clip the stay back into its housing.
- ☞ Lower the bonnet and release it at the end of its travel.
- ☞ Pull on the bonnet to check that it has latched correctly.


"ISOFIX" mountings

Two rings **A**, located between the vehicle seat back and cushion, indicated by an ISOFIX marking.


These rings are located behind covers (hatchback) or clear closures (SW).



☞ Unclip the covers by pulling them forward then pivot them upward (hatchback).

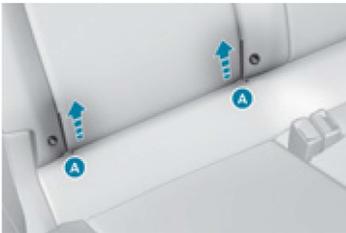


☞ Pull the clear closures up to open them (SW).

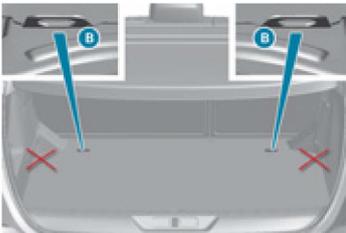

A ring **B** located in the boot (indicated by a marking), referred to as the **TOP TETHER** for fixing the upper strap.

Child lock

The control is located on the edge of each rear door and locking is independent for each door.

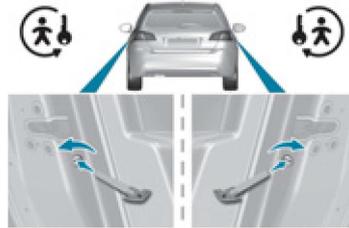


Rear seats (hatchback)

Folding the backrest



Repositioning the seat backrest

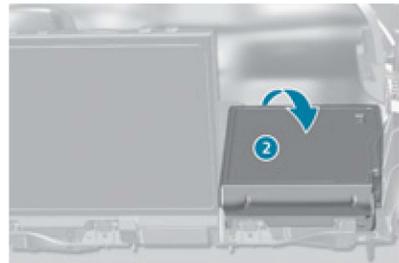


! When repositioning the seat backrest, take care not to trap the seat belts.

Rear seats (SW)


1/3 - 2/3 split rear seats which can be folded to vary the boot load space.

Folding the seat from the boot

Each section of the seat (1/3 or 2/3) has its own control to release the seat back from inside the boot.

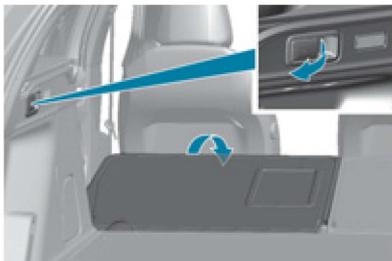


- ☞ Check that nothing is preventing the seat back from folding (seat belts, ...) and that no object might interfere with the seat manoeuvre (above as well as below).
- ☞ Place the head restraints in the low position.

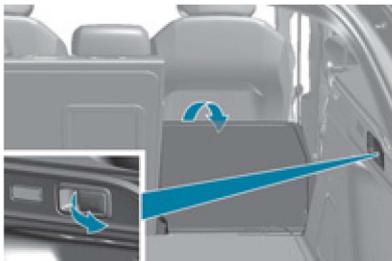

- ☞ Pull the control from inside the boot, the seat backrest folds onto the cushion.

Folding the seat from the rear

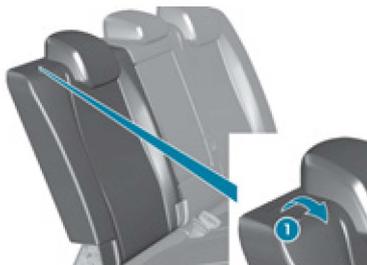


- ☞ Check that nothing is preventing the seat backrest folding and that no object might interfere with the seat manoeuvre (above as well as below).
- ☞ Move the corresponding front seat forwards if necessary.
- ☞ Check that the seat belt is positioned correctly on the side of the seat back.
- ☞ Place the head restraints in the low position.



- ☞ Pull the control **1** forwards, the seat backrest folds onto the cushion.

Returning the seat back to its original position

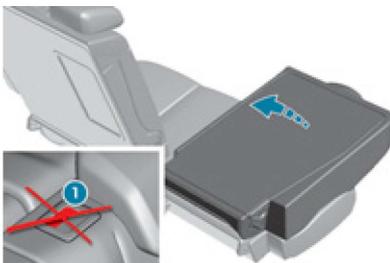


- ☞ Put the seat back in the upright position and secure it.
- ☞ Check that the red indicator, located at the control **1**, is no longer visible.
- ☞ Refit the head restraints or put them back in place.

! When returning the rear seat back to its original position, take care not to trap the seat belts and ensure that their buckles are positioned correctly.


Load space cover, roller blind (SW)

To reel in

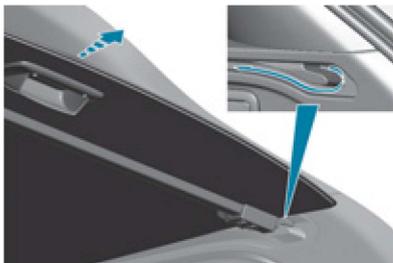


- ☞ Remove the roller guide from the rails in the boot pillars.
- ☞ Release the roller blind, it reels in automatically.

To remove

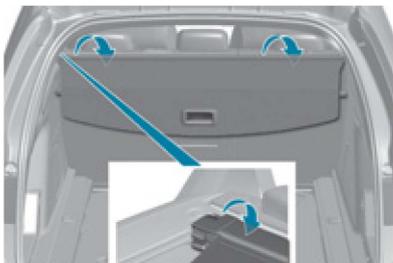

- ☞ Place a hand on the left **under** the luggage cover.
- ☞ Turn the end of the reel towards the front (clockwise) to release it.
- ☞ Repeat the operation on the right (anti-clockwise).

Storage

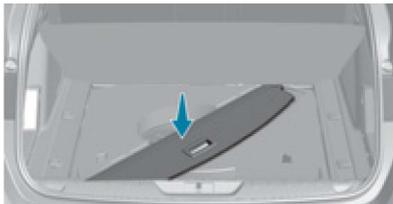

A recess in the floor well, under the boot carpet, allows the luggage cover to be stowed diagonally.



This recess is not available with the bass woofer unit.

To install



- ☞ Position the left and then right hand ends of the luggage cover in their respective housings.
- ☞ Place your hands **on** the roller then turn the assembly to the rear to secure it.
- ☞ Unreel the roller blind until it locks on the rear pillar.

Panoramic sunroof


Electric blind

Opening




- ☞ Press the back of the control without going beyond the point of resistance. The blind stops when you release the control.


Closing

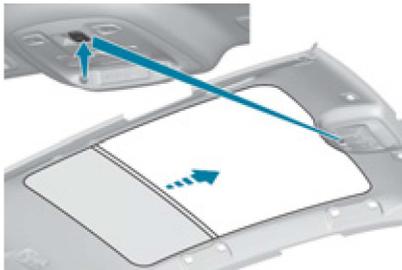

- ☞ Press the front of the control without going beyond the point of resistance. The blind stops when you release the control.

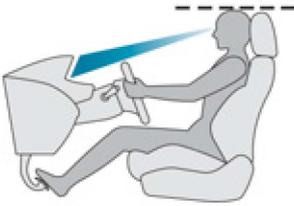

Head restraint height adjustment

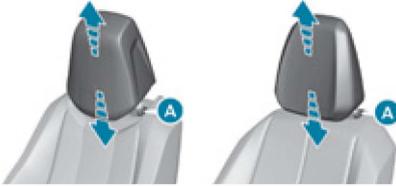

- ☞ To raise the head restraint, pull it upwards.
- ☞ To lower the head restraint, press the lug **A** and the head restraint at the same time.

Front seats with manual adjustments




Electric driver's seat



1. Longitudinal.
2. Cushion height.
3. Backrest angle.

Steering wheel adjustment

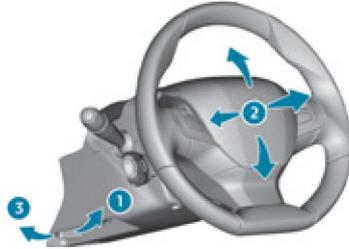

- ☞ **When stationary**, lower the control lever to release the steering wheel adjustment mechanism.
- ☞ Adjust the height and reach to suit your driving position.
- ☞ Pull the control lever to lock the steering wheel adjustment mechanism.


Door mirrors



Adjustment

- A.** Selection of the mirror to adjust.
- B.** Adjustment of the mirror in four directions.
- C.** De-selection of the mirror (in the middle).

Rear view mirror

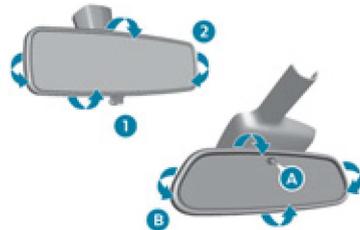

Manual model

1. Selection of the "day" position of the mirror.
2. Adjustment of the mirror.

Automatic electrochromic model

- A.** Brightness detection in automatic day/night mode.
- B.** Adjustment of the mirror.

Manual air conditioning



Temperature adjustment



Air flow adjustment



Air conditioning On / Off

Air distribution adjustment



Windscreen and side windows.



Central and side vents.



Footwells.



Front demist - defrost



Rear screen demist - defrost




Air intake / Air recirculation

Air conditioning




Select the " **Air conditioning** " menu in the touch screen to display the controls page for the system.

Manual air conditioning (Touch screen)

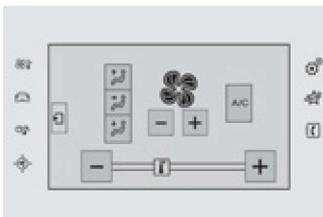


Temperature adjustment

 

Air flow adjustment

Dual-zone digital air conditioning (Touch screen)

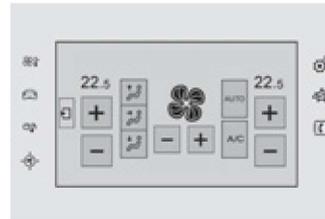

Air distribution adjustment



Windscreen.



Footwells.



Centre and side vents.

A/C Air conditioning On/Off

AUTO Automatic comfort programme

230 V / 50 Hz power socket



Storing driving positions

M **2** **1** Storing a position Using buttons **M** / **1** / **2**

- ☞ Switch on the ignition.
- ☞ Adjust your seat.
- ☞ Press button **M**, then press button **1** or **2** within four seconds.

Recalling a stored position Ignition on or engine running

- ☞ Press button **1** or **2** to recall the corresponding position.

An audible signal confirms that adjustment is complete.

Heated seats

- ☞ Use the adjustment thumbwheel to switch on and select the desired level of heating:



- 0** : Off.
- 1** : Low.
- 2** : Medium.
- 3** : High.

Massage function



On / Off.




Adjustment of intensity.

Electric lumbar adjustment



Front airbags

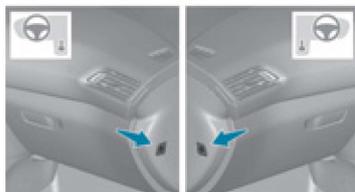

Deactivating the passenger's front airbag

Only the passenger's front airbag can be deactivated.

- ☞ **With the ignition off**, insert the key in the passenger airbag deactivation switch.
- ☞ Turn it to the **"OFF"** position.
- ☞ Remove the key keeping the switch in the new position.

Lighting control stalk



Ring A



- 0** Lighting off / daytime running lamps.
- AUTO** Automatic illumination of headlamps.
- Sidelamps.
- Dipped / main beam headlamps.

Ring B



- Rear foglamps only.
- Front and rear foglamps.

Wiper control stalk

Front



- 2** Fast wipe (heavy rain).
- 1** Normal wipe (moderate rain).
- Int** Intermittent wipe (proportional to the speed of the vehicle).
- 0** Park.
- Single wipe (press downwards or pull the stalk briefly towards you, then release).

or



- Automatic wiping (press down, then release).
- Single wipe (pull the stalk briefly towards you).

Starting and switching off the engine, "Keyless Entry and Starting"

Starting



☞ Place the electronic key inside the vehicle, in the recognition zone.

☞ If your vehicle has a manual gearbox, place the gear lever in neutral then fully depress the clutch pedal.

☞ If your vehicle has an automatic gearbox, place the selector at position **P** then press the brake pedal firmly.


☞ Press the "**START/STOP**" button.



The steering column unlocks and the engine starts more or less immediately.

Key not detected

Back-up starting

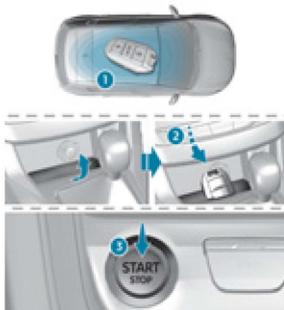

Switching off

☞ Immobilise the vehicle.

☞ With the electronic key inside the vehicle, press the "**START/STOP**" button.

The engine stops and the steering column is locked.

Electric parking brake



Automatic application / release

First ensure that the engine is running and that all doors are properly closed.

The parking brake is released automatically and progressively with the movement of the vehicle.

With the vehicle at rest, the parking brake is applied automatically on switching off the ignition.



If this warning lamp is on in the instrument panel, the **automatic application / release is deactivated**; apply and release the parking brake manually.



Before leaving the vehicle, check that the brake warning lamp in the instrument panel and the **P** warning lamp in the control lever are **on fixed (not flashing)**.

Manual application / release

Manual application of the parking brake is possible by briefly **pulling** the control lever.

With the ignition on or the engine running, press the brake pedal and while maintaining this pressure briefly **push** the control lever to **manually release** the parking brake.

Hill start assist



On an ascending slope, with the vehicle stationary, the vehicle is held for a momentarily when you release the brake pedal.

On a descending slope, with the vehicle stationary and reverse gear engaged, the vehicle is held momentarily when you release the brake pedal.

Gear shift indicator

System which reduces fuel consumption by recommending the most suitable gear.



The information appears in the instrument panel in the form of an arrow.

On vehicles with manual gearbox, the arrow may be accompanied by the recommended gear.

5-speed manual gearbox


Engaging reverse gear



- ☞ With the clutch pedal fully down, place the gear lever in neutral.
- ☞ Push the gear lever to the right then backwards.

6-speed manual gearbox


Engaging reverse gear

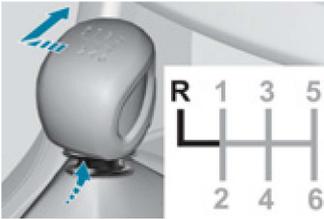

- ☞ Raise the ring under the knob and move the gear lever to the left then forwards.

Automatic gearbox

Gear selection gate

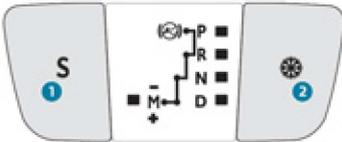

- P.** Park.
 - Immobilisation of the vehicle, parking brake on or off.
 - Starting the engine.
- R.** Reverse.
 - Reversing manoeuvres, vehicle stationary, engine at idle.
- N.** Neutral.
 - Immobilisation of the vehicle, parking brake on.
 - Starting the engine.
- D.** Automatic operation.
- M.+ / -** Manual operation
 - ☞ Pull towards the + sign and release to change up through the gears.
 - or
 - ☞ Push towards the - sign and release to change down through the gears.

1. "S" (sport) programme switch.
2. "❄" (snow) programme switch.

Steering mounted controls*



- Pull on the **right hand** steering mounted control paddle to change up.
- Pull on the **left hand** steering mounted control paddle to change down.

* Depending on version.

Dynamic pack (Driver Sport Pack)

This pack conditions:

- the visual ambience, with specific back-lighting for the instrument panel,
- the acoustic ambience of the engine,
- the power assistance for the steering,
- acceleration,
- information to the driver in the instrument panel on dynamic settings.



- ☞ Press and hold the button until the back-lighting in the instrument panel changes. The LED in the button stays on.



- ☞ Press the end of the wiper control stalk to display in the instrument panel the different information on dynamic settings.

Steering mounted controls



Speed limiter "LIMIT"

1. Select speed limiter mode.
2. Decrease programmed speed.
3. Increase programmed speed.
4. Speed limiter on / pause.
5. Display the list of memorised speeds (on versions with touch screen tablet).

Switching on the speed limiter requires a programmed speed of at least 20 mph (30 km/h).

Dynamic cruise control "CRUISE"

1. Select cruise control mode.
2. Set the current speed as the cruise speed setting / Reduce the cruise speed setting.
3. Set the current speed as the cruise speed setting / Increase the cruise speed setting.
4. Pause / resume cruise control.
5. Display the list of memorised speeds and adjust the inter-vehicle time.

Switching between the types of cruise control



If you want to use the "standard" cruise control, it is possible to deactivate the dynamic cruise control in the touch screen.



Press the button to change from dynamic cruise control to standard cruise control and vice-versa.

The dynamic cruise control is **switched on** manually, it requires that the speed of the vehicle be between 25 mph (40 km/h) and 90 mph (150 km/h).

With a manual gearbox, third or fourth gear (depending on engine) or higher must be engaged.

With an automatic gearbox, second gear or higher must be engaged.

Cruise control "CRUISE"

1. Select cruise control mode.
2. Set the current speed as the speed setting / Decrease the speed setting.
3. Set the current speed as the speed setting / Increase the speed setting.
4. Pause / resume cruise control.
5. Display the list of memorised speeds.

The cruise control is **switched on** manually; it requires a minimum vehicle speed of 25 mph (40 km/h).

With a manual gearbox, third or fourth gear (depending on engine) or higher must be engaged.

With an automatic gearbox, second gear or higher must be engaged.

Stop & Start

Going into engine STOP mode


- ECO** The "ECO" warning lamp comes on in the instrument panel and the engine goes into standby automatically:
- **With a manual gearbox**, with the speed below 12 mph (20 km/h) or with the vehicle stationary (depending on the engine), when you put the gear lever into neutral and release the clutch pedal.
 - **With an automatic gearbox**, vehicle stationary, when you press the brake pedal or place the gear selector lever in position **N**.

In some circumstances, STOP mode may not be available; the "ECO" warning lamp flashes for few seconds, then goes off.

Going into engine START mode

- ECO** The "ECO" warning lamp goes off and the engine starts automatically:
- **With a manual gearbox**, when you fully depress the clutch pedal.
 - **With an automatic gearbox:**
 - gear selector in position **D** or **M**, when you release the brake pedal,
 - or gear selector in position **N** and brake pedal released, when you place the gear selector in position **D** or **M**,
 - or when you engage reverse.

Blind spot sensors

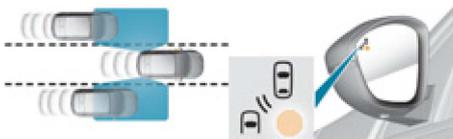


This driving assistance system warns the driver of the presence of another vehicle in the blind spot angle of their vehicle (areas masked from the driver's field of vision), as soon as this presents a potential danger.



☞ In the " **Driving assistance** " menu, press this button; its indicator lamp comes on.

Parking sensors

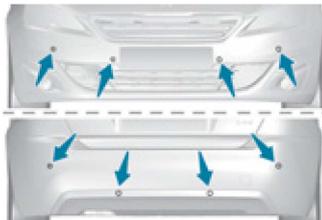

This system indicates the proximity of an obstacle (examples: pedestrian, vehicle, tree, gate) which comes within the field of detection of sensors located in the bumper.

Certain types of obstacle (examples: stake, roadworks cone) detected initially will no longer be detected at the end of the manoeuvre, if they are located in blind spots in the sensors' field of detection.

Park Assist

This system provides active assistance with parking, detecting a parking space then controlling the steering to park in the space.

It controls the steering while the driver manages the accelerator, brakes, gears and clutch (manual gearbox). During phases of entry into and exit from a parking space, the system provides visual and audible information to the driver in order to make the manoeuvres safe. It may be necessary to move forwards and backwards more than once.



- A. Entry into a parallel parking space
- B. Exit from a parallel parking space
- C. Bay parking

☞ When you have identified a parking space.



☞ Press this control.

or



☞ In the " **Driving assistance** " menu, press this button; its indicator lamp comes on.

Heated windscreen and washer jets*



☞ With the engine running, press this button; its indicator lamp comes on. The period of operation depends on the ambient temperature.

Pressing this button again switches the function off; its indicator lamp goes off.

* Depending on the country of sale.

Under-inflation detection



The system monitors the pressures in the four tyres, once the vehicle is moving.

The system triggers an alert as soon as it detects a drop in the inflation pressure of one or more tyres.

It is necessary to reinitialise the system every time one or more tyre pressures are adjusted, and after changing one or more wheels.



☞ Press this button

or

☞ Use the vehicle configuration menu.

7-inch touch screen




Air conditioning
Control of the settings for temperature and air flow.



Driving assistance
Access to the trip computer.
Activate, deactivate, adjust settings for certain vehicle functions.



Media
Select an audio source, a radio station, display photographs.

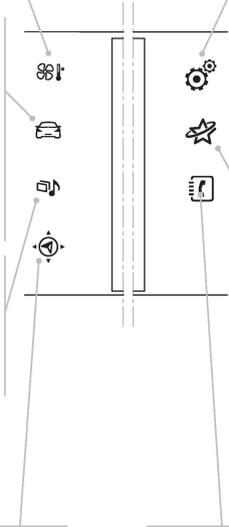

Configuration
Adjust settings for audio (balance, ambience, ...), colour scheme, brightness of the instruments and controls, display (language, units, date, time, ...) and access the interactive help for the vehicle's main systems and warning lamps.



Connected services
PEUGEOT CONNECT APPS
Connect to an applications portal to facilitate, make safe and personalise journeys by means of a connection key available on subscription from a PEUGEOT dealer.

(Depending on equipment)



Navigation
(Depending on equipment)
Enter navigation settings and choose a destination.

Telephone

Connect a telephone by Bluetooth®.



Use this button to go to the secondary page.



Use this button to return to the primary page.




Use this button for access to additional information and to the settings for certain functions.



Use this button to confirm.



Use this button to quit.

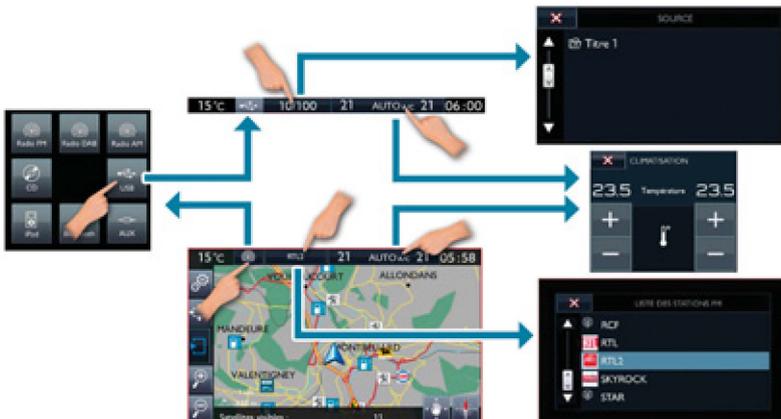

Steering mounted controls



Press : mute on / off.



Increase volume.



Decrease volume.

SRC

Change audio source : radio, media.



Radio, rotate : automatic search for the previous / next station.

Radio, press : preset stations.

Media, rotate : previous / next track.

Press : confirm a selection.

LIST

Telephone : start or answer a call.

Call in progress : telephone menu (end call, secret mode, hands-free mode).

Telephone, press and hold : reject an incoming call, end a call in progress ; other than call in progress, telephone menu.

Radio : display the list of stations.

Media : display the list of tracks.

Radio, press and hold : update the list of stations received.

Pairing a Bluetooth® telephone



Activate the telephone's Bluetooth function and ensure that it is "visible to all" (telephone configuration).



Press on **Telephone** to display the primary page.



Press on the secondary page.



Select "**Bluetooth connection**".



Select "**Search for devices**".

The list of telephones detected is displayed.

Select the name of the desired peripheral from the list and "**Confirm**".

 
Enter a code of at least 4 figures for the connection then "**Confirm**".



Enter this same code in the telephone then accept the connection.

The system offers to connect the telephone :

- in "**Telephone**" (hands-free kit, telephone only),
- in "**Audio streaming**" (streaming: wireless playing of audio files from the telephone),
- in "**Internet**" (internet browsing, only if your telephone is compatible with the "DUN" Dial-Up Networking Bluetooth standard).



The recognised telephone appears in the list.

Peugeot Connect Sound (RD5)



Steering mounted controls

Radio: automatic search for a higher frequency.
CD / MP3 / USB: select the next track.
CD / USB: continuous press: fast forward.
Move in the list.

Radio: select the previous/next pre-set station.


USB: select genre / artist / folder from the classification list.

Select the previous/next item in a menu.



Change audio source.
Confirm a selection.
Call/end call on the telephone.
Press for more than 2 seconds : telephone main menu.

Radio : automatic search for a lower frequency.
CD / MP3 / USB: select the previous track.
CD / USB: continuous press: fast back.
Move in the list.

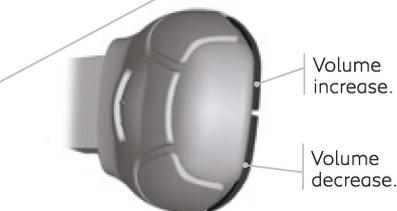

Volume increase.

Volume decrease.

Mute: press the volume increase and decrease buttons simultaneously.
The sound is restored by pressing one of the two volume buttons.

Emergency or assistance call

Peugeot Connect SOS



In an emergency, press this button for more than 2 seconds.

Flashing of the green LED and a voice message confirm that the call has been made to the "Peugeot Connect SOS" call centre*.

* Subject to the general conditions for the service available from dealers and subject to technological and technical limitations.

Peugeot Connect Assistance



Press this button for more than 2 seconds to request assistance if the vehicle breaks down.

A voice message confirms that the call has been made**.

** Depending on the geographical cover of "Peugeot Connect SOS", "Peugeot Connect Assistance" and the official national language selected by the owner of the vehicle.

The list of countries covered and PEUGEOT CONNECT services is available from dealers or at www.peugeot.co.uk.

Your vehicle will be fitted with only some of the equipment described in this document, depending on its trim level, version and the specification for the country in which it was sold.

This document is not a substitute for the detailed study of the handbook.



ANG.16308.P040