

# GPS HANDBOOK



PEUGEOT 208

## 7-inch touch screen

### GPS satellite navigation - Multimedia audio - Bluetooth® telephone



	Contents
First steps	226
Steering mounted controls	228
Menus	229
Navigation	230
Navigation - Guidance	238
Traffic	242
Radio Media	244
Radio	250
DAB (Digital Audio Broadcasting) radio	252
Media	254
Settings	258
Connected services	266
Internet browser	267
MirrorLink™	270
CarPlay®	274
Telephone	278
Frequently asked questions	286

**i** The system is protected in such a way that it will only operate in your vehicle.


**!** As a safety measure, the driver should only carry out operations which require prolonged attention while the vehicle is stationary. The display of an energy economy mode message signals that electrical systems operating are going into standby. Refer to the energy economy mode section.

# First steps


Use the buttons to the left of the touch screen for access to the menu carousels, then press the virtual buttons in the touch screen. Each menu is displayed in one or two pages (primary page and secondary page).



**i** In very hot conditions, the system may go into stand-by (screen and sound completely off) for a minimum period of 5 minutes.

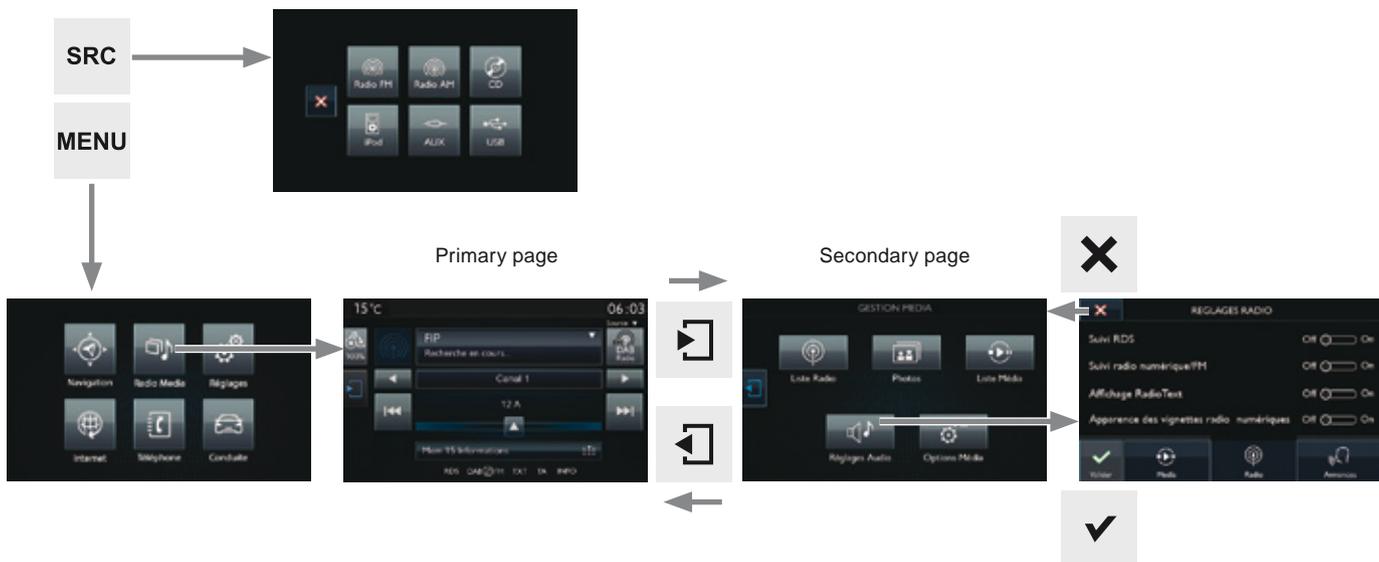


Short-cuts: using the touch buttons in the upper band of the touch screen, it is possible to go directly to the selection of audio source, the list of stations (or titles, depending on the source).

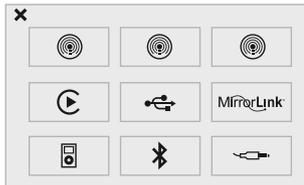

Selection of audio source (depending on version):

- FM /DAB\* /AM stations.
- USB memory stick.
- CD player (located in the glove box)\*.
- Smartphone via MirrorLink™ or CarPlay®.
- Telephone connected by Bluetooth\* and with Bluetooth\* audio streaming.
- Media player connected to the auxiliary socket (jack, cable not supplied).
- Jukebox\*, after first copying audio files to the internal memory of the system.

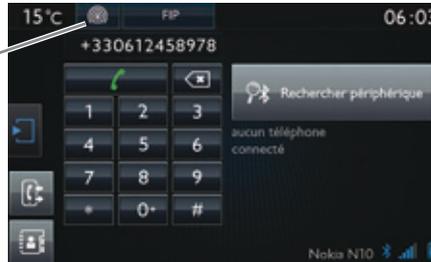

### MENU

Press on **Menu** to display the menu carousel.

### SRC

Press on **SRC** to display the audio sources carousel.

Volume adjustment (each source is independent, including traffic announcements (TA) and navigation instructions).



With the engine running, press to mute the sound.

With the ignition off, press to switch the system on.

**i** In very hot conditions, the volume may be limited to protect the system. The return to normal takes place when the temperature in the passenger compartment drops.

**i** The screen is of the "resistive" type, it is necessary to press firmly, particularly for "flick" gestures (scrolling through a list, moving the map...). A simple wipe will not be enough. Pressing with more than one finger is not recognised. The screen can be used when wearing gloves. This technology allows use at all temperatures.

**!** To clean the screen, use a soft non-abrasive cloth (spectacles cloth) without any additional product. Do not use pointed objects on the screen. Do not touch the screen with wet hands.

\* Depending on equipment.

# Steering mounted controls



Press: mute on / off.



Increase volume.



Decrease volume.

**SRC**

Change audio source: radio, media.



Radio, rotate: automatic search for the previous / next station.

Radio, press: preset stations.

Media, rotate: previous / next track.

Press: confirm a selection.



Telephone: start or answer a call.

Call in progress: telephone menu (end call, secret mode, hands-free mode).

Telephone, press and hold: reject an incoming call, end a call in progress; other than call in progress, telephone menu.

Radio: display the list of stations.

Media: display the list of tracks.

Radio, press and hold: update the list of stations received.

# Menus



## Navigation

(Depending on equipment)



Enter navigation settings and choose a destination.



## Radio Media



Select an audio source, a radio station, display photographs.



## Settings




Adjust the settings for sound (balance, ambience, ...) and the display (language, units, date, time, ...).



## Connected services


(Depending on equipment)

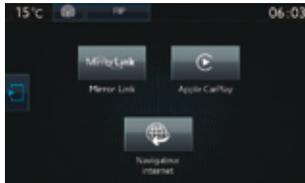

Connect using the "Internet browser". Operate certain applications on your smartphone via MirrorLink™ or CarPlay®.



## Telephone

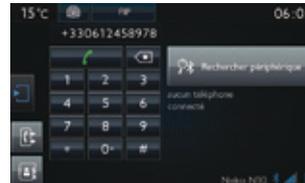

Connect a telephone by Bluetooth®. Access to the CarPlay® function after connection of your smartphone by USB cable.




## Driving




Access to the trip computer. Activate, deactivate or enter settings for certain vehicle functions.

# Navigation

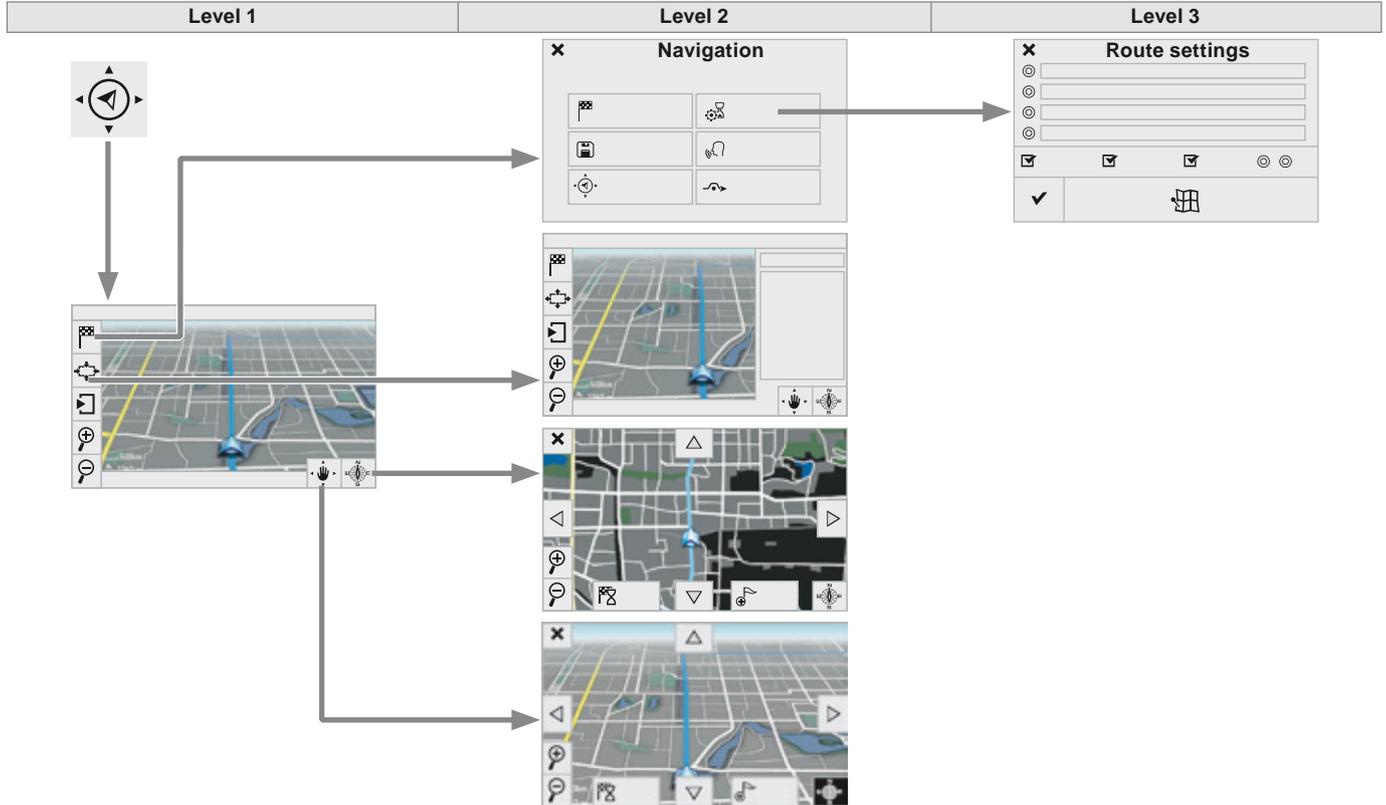

Level 1		Level 2		Level 3		Comments	
  <p style="text-align: center;"><b>Navigation</b> ↓ <b>Settings</b> <b>Navigation</b></p>	       	<b>Enter destination</b>				Display recent destinations	
		<b>Route settings</b>			Fastest	Choose the navigation criteria. The map displays the route chosen according to these criteria.	
					Shortest		
					Time/distance		
					Ecological		
					Tolls		
					Ferries		
					Traffic		
					Strict-Close		
					Show route on map	Display the map and start navigation.	
			Confirm	Save the options.			
		<b>Save current location</b>		Save the current address.			
		<b>Stop navigation</b>		Delete the navigation information.			
		<b>Voice synthesis</b>		Choose the volume for voice and announcement of street names.			
		<b>Diversion</b>		Detour from your initial route by a determined distance.			
	<p style="text-align: center;"><b>Navigation</b></p>				Display in text mode		
					Zoom in.		
					Zoom out.		
						Display in full screen mode. Use the arrows to move the map.	
					Switch to 2D map.		

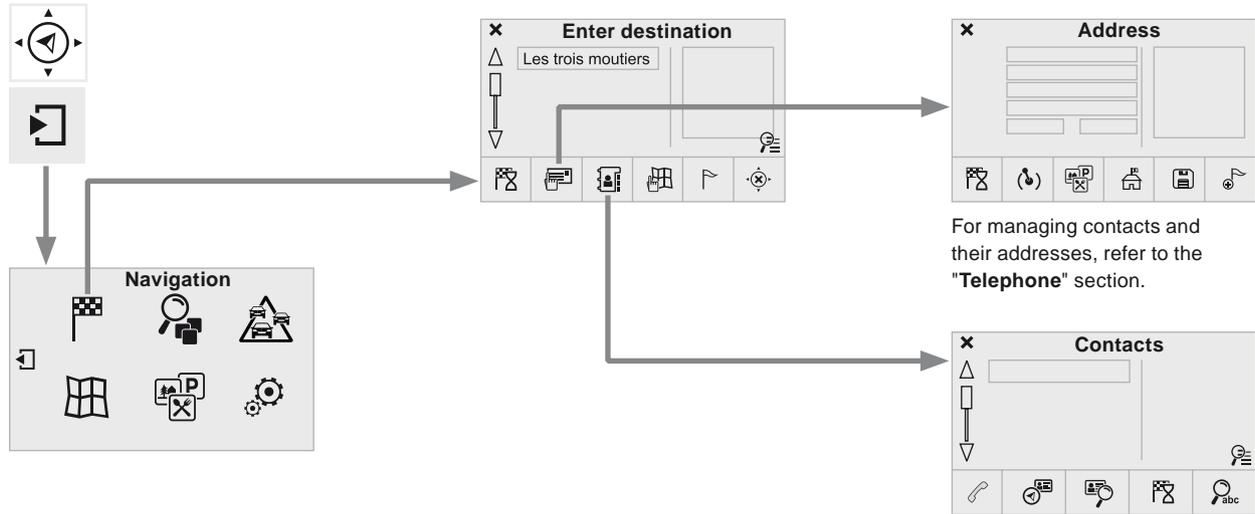


For managing contacts and their addresses, refer to the "Telephone" section.

To use the telephone functions, refer to the "Telephone" section.

Level 1		Level 2		Level 3		Comments
  	<p style="text-align: center;"> <b>Navigation</b>  ↓  <b>Secondary page</b>  ↓  <b>Enter destination</b> </p>	 <b>Address</b>	 Current loc.	Address settings	 Point of interest	Save the current address.
			 Town center			
			 Save			
			 Add waypoint	Add a waypoint to the route.		
			 Navigate to	Press to calculate the route.		
			 <b>Contacts</b>	 Addresses	Select a contact then calculate the route.	
		 View				
		 Navigate to				
		 Search for contact				
		 Call				
 <b>On the map</b>	Display the map and zoom to view the roads.					
 <b>Itinerary</b>	Create, add or delete a waypoint or view the itinerary.					
 <b>Stop</b>	Delete navigation information.					
 <b>Navigate to</b>	Press to calculate the route.					



Level 1	Level 2	Level 3
---------	---------	---------

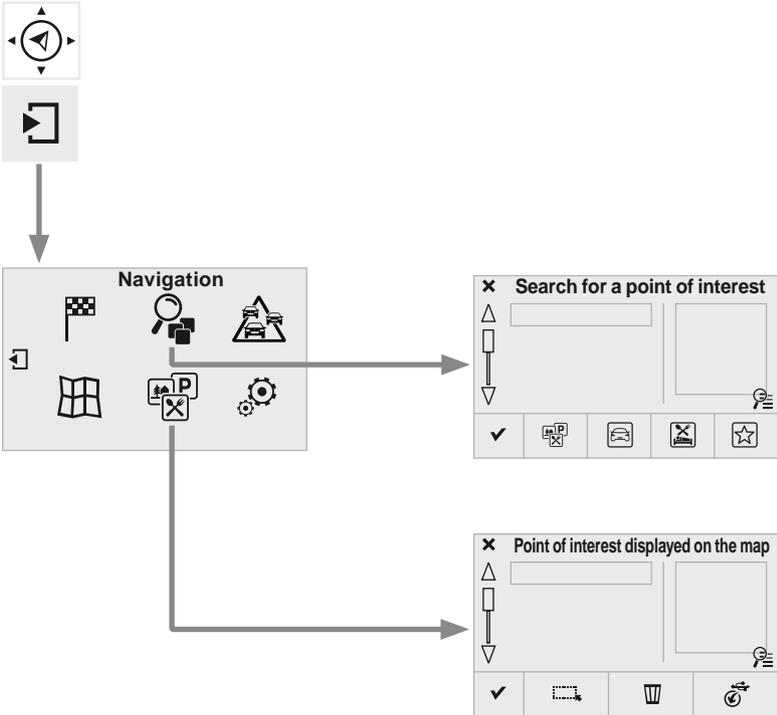



Level 1		Level 2		Level 3	Comments
  	Navigation	 All POIs		List of categories available. After choosing the category, select the points of interest.	
	↓	 Motor			
	Secondary page	 Dining/hotels			
	↓	 Personal			
	Search for POI	<input checked="" type="checkbox"/> Search		Save the settings.	
  	Navigation	 Select all		Choose the display settings for POIs.	
	↓	 Delete			
	Secondary page	 Import POIs			
	Show POIs	<input checked="" type="checkbox"/> Confirm		Save the options.	



Level 1		Level 2		Level 3		Comments	
  	Navigation ↓ Secondary page ↓ Traffic messages	 <b>On the route</b>				Settings for the choice of messages and the filter radius.	
		 <b>Around vehicle</b>					
		 <b>Near destination</b>					
		 <b>Detour</b>	<input type="radio"/>	Detour over a distance	<input type="radio"/>		Recalculate route
		<input checked="" type="checkbox"/> <b>Finish</b>					
  	Navigation ↓ Secondary page ↓ Map settings	 <b>Orientation</b>		<input type="radio"/>	Flat view north heading	Choose the display and orientation of the map.	
				<input type="radio"/>	Flat view vehicle heading		
				<input type="radio"/>	Perspective view		
		 <b>Maps</b>					
				<input type="radio"/>	"Day" map colour		
		 <b>Aspect</b>		<input type="radio"/>	"Night" map colour		
				<input type="radio"/>	Auomatic day/night		
<input checked="" type="checkbox"/> <b>Confirm</b>					Save the settings.		
  	Navigation ↓ Secondary page ↓ Settings	 <b>Route settings</b>				Enter settings and choose the volume for the voice and announcement of street names.	
		 <b>Voice</b>					
		 <b>Alarm!</b>					
		 <b>Traffic options</b>					
		<input checked="" type="checkbox"/> <b>Confirm</b>					Save your selections.

# Navigation - Guidance

## Choosing a new destination

### Towards a new destination



Press on **Navigation** to display the primary page.



 
Press on the secondary page.



Select "**Enter destination**".



Select "**Address**".



Select the "**Country**:" from the list offered, then in the same way the "**City**:" or its post code, the "**Road**:", the "**N**°:". Confirm each time.



Select "**Save**" to save the address entered as a contact entry. The system allows up to 200 entries.



Select "**Navigate to**".



Choose the navigation criteria: "**Fastest**" or "**Shortest**" or "**Time/distance**" or "**Ecological**".



Choose the restriction criteria: "**Tolls**", "**Ferries**", "**Traffic**", "**Strict**", "**Close**".



Select "**Confirm**".

Or



Press on "**Show route on map**" to start navigation.



To delete navigation information, press on "**Settings**".



Press on "**Stop navigation**".



To resume navigation press on "**Settings**".



Press on "**Resume guidance**".

## Towards a recent destination



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Enter destination**".



Select an address from the list offered.



Select "**Navigate to**".



Select the criteria then "**Confirm**" or press "**Show route on map**" to start navigation.

## Towards a contact



To be able to use navigation "towards a contact in the directory", it is first necessary to enter the address for your contact.



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Enter destination**".



Select "**Contacts**".



Select a destination from the contacts in the list offered.



Select "**Navigate to**".



Select the criteria then "**Confirm**" to start navigation.

## Towards GPS coordinates



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Enter destination**".



Select "**Address**".



Enter the "**Longitude**:" then the "**Latitude**:".



Select "**Navigate to**".



Select the criteria then "**Confirm**" or press "**Show route on map**" to start navigation.

## Towards a point on the map



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Enter destination**".



Select "**On the map**".

Zooming in on the map shows points with information.

A long press on a point opens its content.

## Towards points of interest (POI)

Points of Interest (POI) are listed in different categories.



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Search for POI**".



Select "**All POIs**".

Or



"**Motor**",

Or



"**Dining/hotels**".



**i** An annual mapping update allows new points of interest to be presented to you. You can also update the Risk areas / Danger areas every month. The detailed procedure is available on: <http://peugeot.navigation.com>.

## Risk areas / Danger zone alert settings



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Settings**".



Select "**Alarm!**" (Alert).

It is then possible to activate Risk areas alerts then:

- "Audible warning"
- "Alert only when navigating"
- "Alert only for overspeed"
- "Display speed limits"
- Timing: the choice of timing allows the time before giving a Risk areas alert to be defined.



Select "**Confirm**".

**!** This series of alerts and displays is only available if Risk areas have first been downloaded and installed on the system.

## Traffic

### Traffic information

#### Display of messages



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Traffic messages**".

Choose filter settings for:



"**On the route**",



"**Around**",



"**Near destination**", filters to fine-tune the list of messages.

Press again to remove the filter.



Select the message from the list offered.



Select the magnifying glass to have voice information.

**i** TMC (Traffic Message Channel) messages on GPS-Navigation contain traffic information transmitted in real time.

## Setting filters



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Settings**".



Select "**Traffic options**".



Select:  
- "**Be advised of new messages**",  
- "**Speak messages**".

Then enter the filter radius.



Select "**Confirm**".

**i** We recommend a filter radius of:

- 12 miles (20 km) in urban areas,
- 30 miles (50 km) on motorways.

## Receiving TA messages



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Settings**".



Select "**Voice**".




Activate / Deactivate "**Traffic (TA)**".

**i** The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.





Level 1		Level 2		Comments
 	Radio Media ↓ List		List of FM stations	Press on a radio station to select it.
 	Radio Media ↓ Source	 <b>FM Radio</b>  <b>DAB Radio</b>  <b>AM Radio</b>  <b>USB</b>  <b>CD</b>  <b>MirrorLink™</b>  <b>CarPlay®</b>  <b>iPod</b>  <b>Bluetooth</b>  <b>AUX</b>  <b>Jukebox</b>	Select change of source.	
 	Radio Media ↓ Save			Press an empty location to Save it.

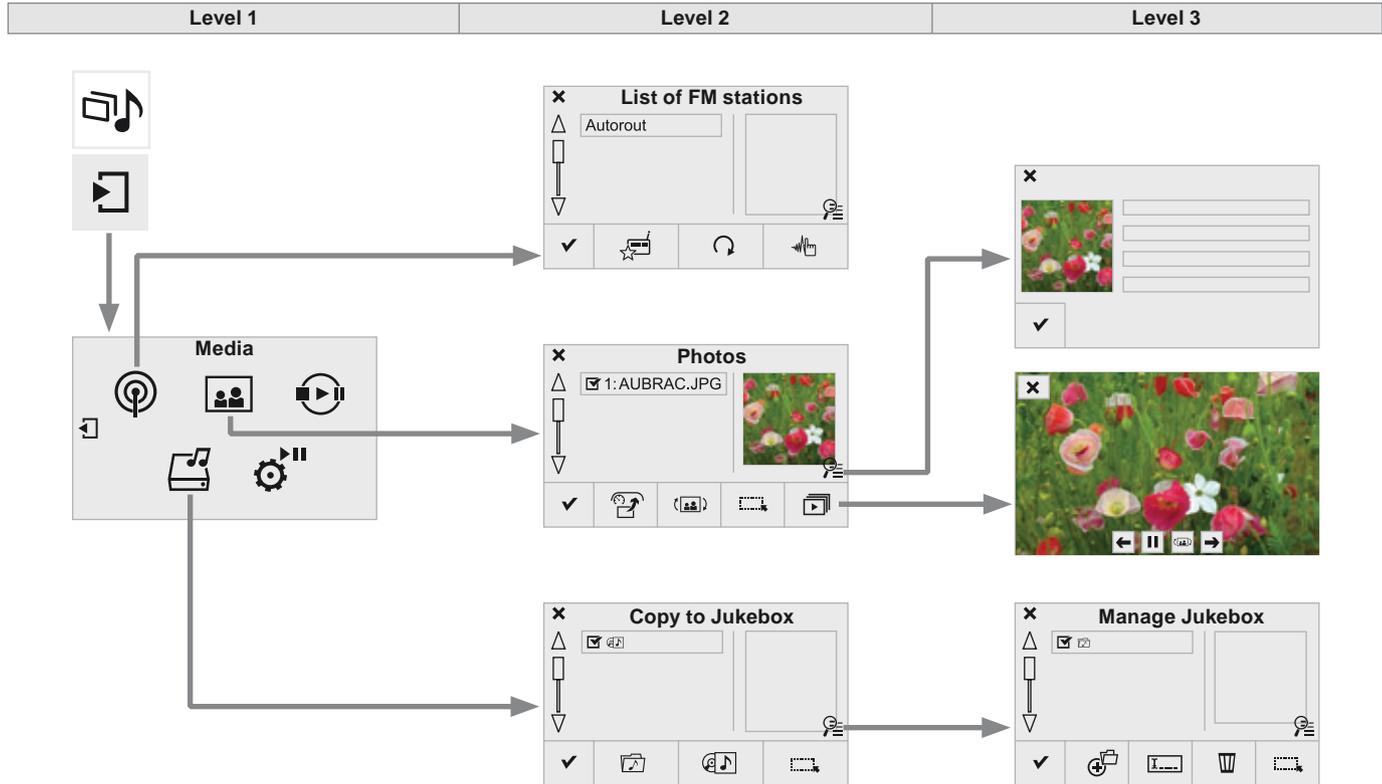

Level 1		Level 2		Level 3		Comments
  	Radio Media	   	Save			Press a radio station to select it.
	Secondary page		Update list			Update the list of stations received.
	Radio list		Frequency			Enter the desired radio frequency.
			Confirm			Save the settings.
  	Radio Media	    	Home screen			Display the selected photo in the home page.
	Secondary page		Rotate			Rotate the photo 90°.
	Photos		Select all			Select all the photos in the list. Press again to deselect.
			Slideshow	←	Previous photo.	Display the photos in sequence, full screen. The system supports the following image formats: .gif, .jpg, .bmp, .png.
				▶	Pause / Play.	
				→	Next photo.	
			Full screen			Display the selected photo full-screen.
  	Radio Media	    	Sort by folder			Choose a selection mode.
	Secondary page		Sort by album			
	Manage Jukebox		Select all			
			Copy			Copy files to the Jukebox.
			Magnifying glass	⊕	Create folder	Choose the desired function.
				⋮	Rename	
				🗑	Delete	
	☰	Select all				
		✓	Confirm			Save the settings.





Level 1		Level 2		Level 3		Comments
	Radio Media					
	Secondary page					
	Media list					Presentation of the last media used.
			Media ↓ Settings	<input type="checkbox"/> Shuffle (all tracks) <input type="checkbox"/> Shuffle (current album) <input type="checkbox"/> Repeat <input type="checkbox"/> Aux. amplification		Choose the play settings.
	Radio Media					
	Secondary page		Radio ↓ Settings	<input type="checkbox"/> RDS options <input type="checkbox"/> DAB/FM station tracking <input type="checkbox"/> Display Radio Text <input type="checkbox"/> Digital radio slideshow display		Activate or deactivate the settings.
	Settings		Announcements ↓ Settings	<input type="checkbox"/> Traffic announcements (TA) <input type="checkbox"/> News - Weather <input type="checkbox"/> Sport - Programm info <input type="checkbox"/> Flash - Unforeseen events		Activate or deactivate the settings.
			Confirm			Save the settings.

# Radio

## Selecting a station



Press on **Radio Media** to display the primary page.



Select "**List**" in the primary page.

Or



 
Press on **Radio Media** to display the primary page.



Press on the secondary page.



Select "**Radio list**" in the secondary page.



Select a radio station from the list offered.



Select "**Update list**" to refresh the list.

To select a preset radio station.



Press on **Radio Media** to display the primary page.



Select "**Save**".



Select a preset radio station in the list.



If necessary, select change of source.



Select "**FM Radio**".

Or



"**AM Radio**".

**!** Radio reception may be affected by the use of electrical equipment not approved by PEUGEOT, such as a USB charger connected to the 12 V socket. The exterior environment (hills, buildings, tunnel, car park, below ground...) may prevent reception, even in RDS station tracking mode. This phenomenon is normal in the propagation of radio waves and is in no way indicative of a fault with the audio system.

## Changing a radio frequency



Press on **Radio Media** to display the primary page.



**By automatic frequency search**



Press **←** or **→** to move the cursor for an automatic search down or up for a radio frequency.

**THEN**



Select change source.



Select "**FM Radio**".

Or



"**AM Radio**".

OR



Press on **Radio Media** to display the primary page.



Press on the secondary page.



Press on **Frequency**.

THEN



Enter the frequency in full (e.g.: 92.10 MHz) using the keypad then **"Confirm"**.

FRANCE BLEU

### Changing radio station

Pressing the name of the current radio station brings up a list.

To change radio station press the name of the desired station.

## Presetting a station

Select a radio station or frequency (refer to the corresponding section).



Press on **"Save"** (preset).

Mémoire 1

Select a number in the list to preset the previously chosen radio station.

A long press on a number saves (presets) the station.

Or



A press on this button presets all of the stations one after the other.

## Recalling preset stations



Press on **Radio Media** to display the primary page.



Select **"Save"** (preset).

## Activating / Deactivating RDS



Press on **Radio Media** to display the primary page.



Press on the secondary page.



Select **"Settings"**.



Select **"Radio"**.

Off  On

Activate/deactivate **"RDS options"**.



RDS, if activated, allows you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the entire country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

# DAB (Digital Audio Broadcasting) radio

15°C

06:03

Source ▾

FIP

Recherche en cours...

FM DAB Radio

Canal 1

12 A

Mem 15 Informations

RDS DAB FM TXT TA INFO

Annotations:

- Display of the name of the current station.
- Short-cut: access to the choice of audio source and the list of stations (or titles, depending on the source).
- Select the radio station.
- Select the audio source. Display the "DAB" band.
- Display of "Radiotext" for the current station.
- Next "Multiplex". Next radio station.
- Preset stations, buttons 1 to 15. Short press: select the preset radio station. Long press: preset a radio station.
- Display of options: if active but not available, the display will be greyed out, if active and available, the display will be blank.
- Any thumbnail broadcast by the station.
- Manage the Jukebox. Display current action.
- Secondary page.
- Previous "Multiplex". Previous radio station.
- Display the name and number of the multiplex service being used.

**i** If the "DAB" radio station being listened to is not available on "FM", the "DAB FM" option is greyed out.

**!** Journaline® is a text-based information service designed for digital radio systems. It provides text-based information structured around topics and sub-topics. This service is available from the "LIST OF DAB STATIONS" page.



## Digital radio

- ! Digital radio provides higher quality reception and also the graphical display of current information on the radio station being listened to. Select "List" in the primary page.  
The range of multiplexes available is displayed in alphabetical order.



Press on **Radio Media** to display the primary page.



Select change of source.



Select "**DAB Radio**".



Select "**List**" in the primary page.

or



Select "**Radio list**" in the secondary page.

Select the radio station from the list offered.

## DAB / FM auto tracking

- i "DAB" does not cover 100% of the territory.  
When the digital radio signal is poor, "DAB/FM station tracking" allows you to continue listening to the same station, by automatically switching to the corresponding "FM" analogue station (if there is one).



Press on **Radio Media** to display the primary page.



Press on the secondary page.



Select "**Settings**".



Select "**Radio**".




Select "**Digital/FM auto tracking**" then "**Confirm**".

- i If "DAB/FM station tracking" is activated, there is a difference of a few seconds when the system switches to "FM" analogue radio with sometimes a variation in volume.  
When the digital signal is restored, the system automatically changes back to "DAB".

- ! If the "DAB" station being listened to is not available on "FM" ("**DAB/FM**" option greyed out), or "DAB/FM station tracking" is not activated, the sound will cut out while the digital signal is too weak.

# Media

## USB player

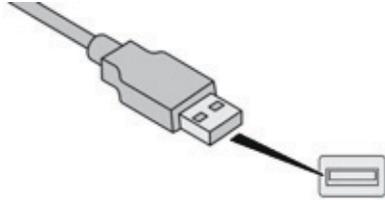

Insert the USB memory stick into the USB port or connect the USB device to the USB port using a suitable cable (not supplied).

The system builds playlists (in temporary memory), an operation which can take from a few seconds to several minutes at the first connection.

Reduce the number of non-music files and the number of folders to reduce the waiting time.

The playlists are updated every time the ignition is switched off or connection of a USB memory stick. The lists are memorised: if they are not modified, the subsequent loading time will be shorter.

## Auxiliary (AUX) socket



Connect the portable device (MP3 player...) to the auxiliary Jack socket using an audio cable (not supplied).

First adjust the volume of your portable device (to a high level). Then adjust the volume of your audio system.

Display and management of the controls are via the portable device.

## CD player

Insert the CD in the player.

## Selecting the source



Press on **Radio Media** to display the primary page.



Select change of source.



Choose the source.

### SRC

The steering mounted **SRC** (source) button can be used to go to the next media source, available if the source is active.



Press on **OK** to confirm the selection.

## Information and advice

The audio equipment will only play audio files with ".wma, .aac, .flac, .ogg and. mp3" file extensions and with a bit rate of between 32 Kbps and 320 Kbps.

It also supports VBR (Variable Bit Rate) mode.

No other type of file (.mp4, ...) can be played.

".wma" files must be of the standard wma 9 type.

The sampling rates supported are 32, 44 and 48 KHz.

It is advisable to restrict file names to 20 characters, without using of special characters (e.g.: " " ? ; ù) to avoid any playing and displaying problems.

In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select the ISO 9660 level 1, 2 or Joliet standard.

If the disc is recorded in another format it may not be played correctly.

It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet standard is recommended.

Use only USB memory sticks formatted FAT 32 (file allocation table).



The system does not support the simultaneous connection of two identical devices (two memory sticks, two Apple® players) but it is possible to connect one memory stick and one Apple® player at the same time.



It is recommended that the USB cable for the portable device is used.



The system supports USB mass storage devices, BlackBerry® devices or Apple® players via USB ports. The adaptor cable is not supplied. Control of the peripheral device is with the audio system controls. Other peripherals, not recognised on connection, must be connected to the auxiliary socket using a Jack cable (not supplied).

## Bluetooth® audio streaming

Streaming allows audio files on your telephone to be played through the vehicle's speakers.


Connect the telephone: see the "**Telephone**" section, then "**Bluetooth**".  
Choose the "**Audio**" or "**All**" profile.

If play does not start automatically, it may be necessary to start the audio playback from the telephone.

Control is from the peripheral device or by using the audio system buttons.

- ! Once connected in streaming mode, the telephone is considered to be a media source.  
It is recommended that you activate "**Repeat**" on the Bluetooth peripheral.

## Connecting Apple® players

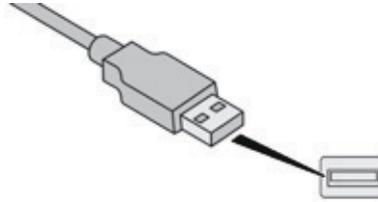

Connect the Apple® player to the USB port using a suitable cable (not supplied).  
Play starts automatically.

Control is via the audio system.

- i The classifications available are those of the portable device connected (artists / albums / genres / playlists / audiobooks / podcasts).  
The default classification used is by artist. To modify the classification used, return to the first level of the menu then select the desired classification (playlists for example) and confirm to go down through the menu to the desired track.

The version of software in the audio system may not be compatible with the generation of your Apple® player.

## Managing the Jukebox

Connect the device (MP3 player...) to the USB port or auxiliary Jack socket using a suitable audio cable.

**i** When no audio file is copied to the system, which has a capacity of 8 GB, all of the Jukebox function symbols are greyed and are not available.



Select "**Media list**".



Select copy "**Copy Jukebox**".



Select "**Sort by folder**".

Or



"**Sort by album**".



Select the magnifying glass to enter the folder or album and select audio file by audio file.



Select "**Confirm**" then "**Copy**".



Select "**New folder**" to create a folder structure in the Jukebox.

Or



Select "**Keep structure**" to retain the structure from the device.



While copying the system returns to the primary page; you can go back to the copy view at any time by selecting this button.



Level 1		Level 2		Level 3	Comments
 	<b>Settings</b> ↓ <b>Audio settings</b>		<b>Ambience</b>		Choose the sound ambience.
			<b>Balance</b>		Sound distribution using the Arkamys® system.
			<b>Sound effects</b>		Set the volume or activate the link to vehicle speed.
			<b>Ringtones</b>		Set the telephone ringtone and volume.
			<b>Voice</b>		Set the volume and voice for speaking street names
			<b>Confirm</b>		Save your settings.
 	<b>Settings</b> ↓ <b>Turn off screen</b>				Function that turns off the display. Pressing the screen reactivates it.



Level 1		Level 2		Comments
  	<b>Settings</b> ↓ <b>Secondary page</b> ↓ <b>System Settings</b>		<b>Units</b>	Set the units used to display distance, fuel consumption and temperature.
			<b>Delete data</b>	Select the desired data in the list then press Delete.
			<b>Factory settings</b>	Return to factory settings.
			<b>Confirm</b>	Save the settings.
  	<b>Settings</b> ↓ <b>Secondary page</b> ↓ <b>Time/Date</b>		<b>Confirm</b>	Set the date and time then confirm.
  	<b>Settings</b> ↓ <b>Secondary page</b> ↓ <b>Screen settings</b>	<input checked="" type="checkbox"/>	<b>Activate automatic text scrolling</b>	Activate or deactivate the setting then confirm.
	<input checked="" type="checkbox"/>	<b>Activate animations</b>		
		<b>Confirm</b>		





10

Level 1		Level 2		Comments
  	<b>Settings</b> ↓ <b>Secondary page</b> ↓ <b>Languages</b>	✓	Confirm	Select the language then confirm.
  	<b>Settings</b> ↓ <b>Secondary page</b> ↓ <b>Calculator</b>			Select the calculator.
  	<b>Settings</b> ↓ <b>Secondary page</b> ↓ <b>Calendar</b>			Select the calendar.

## Audio settings



Press on **Settings** to display the primary page.



Select "**Audio settings**".



Select "**Ambience**".

Or



"**Balance**"

Or



"**Sound effects**"

Or



"**Ringtones**"

Or



"**Voice**".

**!** The distribution (or spatialisation using the Arkamys® system) of sound is an audio process that allows the audio quality to be adapted to the number of passengers in the vehicle. Available only with the 6-speaker configuration.

**i** The audio settings (**Ambience**, **Bass**, **Treble**: and **Loudness**) are different and independent for each sound source. The settings for **Distribution** and **Balance** are common to all sources.

- i**
- "**Ambience**" (choice of 6 musical ambiances)
  - "**Bass**:"
  - "**Treble**:"
  - "**Loudness**" (Activate/Deactivate)
  - "**Distribution**" ("**Driver**", "**All passengers**", "**Front only**")
  - "**Audible response from touch screen**"
  - "**Volume linked to speed**" (Activate/Deactivate)

**i** On-board audio: Arkamys® Sound Staging optimises sound distribution in the the passenger compartment.

## Modifying system settings



-  Press on **Settings** to display the primary page.
-  Press on the secondary page.
-  Select "**System Settings**".
-  Select "**Units**" to change the units of distance, fuel consumption and temperature.
-  Select "**Delete data**" to delete the list of recent destinations, personal points of interest, contacts in the list.
-  Choose the item then select "**Delete**".
-  Select "**Factory settings**" to return to the original settings.

-  Press on **Settings** to display the primary page.
-  Press on the secondary page.
-  Select "**Screen settings**".
-  Activate or deactivate "**Activate automatic text scrolling**" and "**Activate animations**".

-  Press on **Settings** to display the primary page.
-  Press on the secondary page.
-  Select "**Time/Date**" to change the time zone, synchronisation with GPS, the time and its format, then the date.
-  Select "**Languages**" to change language.
-  Select "**Calculator**" to display a calculator.
-  Select "**Calendar**" to display a calendar.



# Connected services

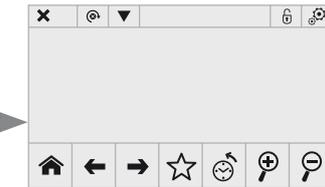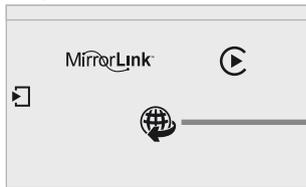

## Internet browser



Press on **Connected services** to display the primary page.



Press on "**Internet browser**" to display the browser home page; first connect your smartphone by Bluetooth, "Internet" option, see the "**Telephone**" section.

Authentication for Internet browsing via a smartphone is done using the Dial-Up Networking (DUN) standard.




Some smartphones of the latest generation do not support this standard.



Level 1		Level 2		Comments
  	<b>Connected services</b> ↓ <b>Secondary page</b> ↓ <b>Bluetooth connections</b>	 <b>Search</b>	Start the search for a device to connect.	
		 <b>Connect /Disconnect</b>	Start or end the Bluetooth connection to the selected device.	
		 <b>Update</b>	Import contacts from the selected telephone to save them in the audio system.	
		 <b>Delete</b>	Delete the selected telephone.	
		 <b>Confirm</b>	Save the settings.	
  	<b>Connected services</b> ↓ <b>Secondary page</b> ↓ <b>Transfer rate</b>	<b>Reset</b>	Reset the usage monitor, then confirm.	
		 <b>Confirm</b>		
  	<b>Connected services</b> ↓ <b>Secondary page</b> ↓ <b>Wi-Fi connection</b>	 <b>All</b>	Display all Wi-Fi networks.	
		 <b>Secure</b>	Display secure Wi-Fi networks.	
		 <b>Remember</b>	Memorise the selected Wi-Fi network(s).	
		 <b>Add</b>	Add a new Wi-Fi network.	
		 <b>On/ Off</b>	Activate or deactivate a Wi-Fi network.	
		 <b>Connect</b>	Select a Wi-Fi network found by the system and connect to it.	



# MirrorLink™

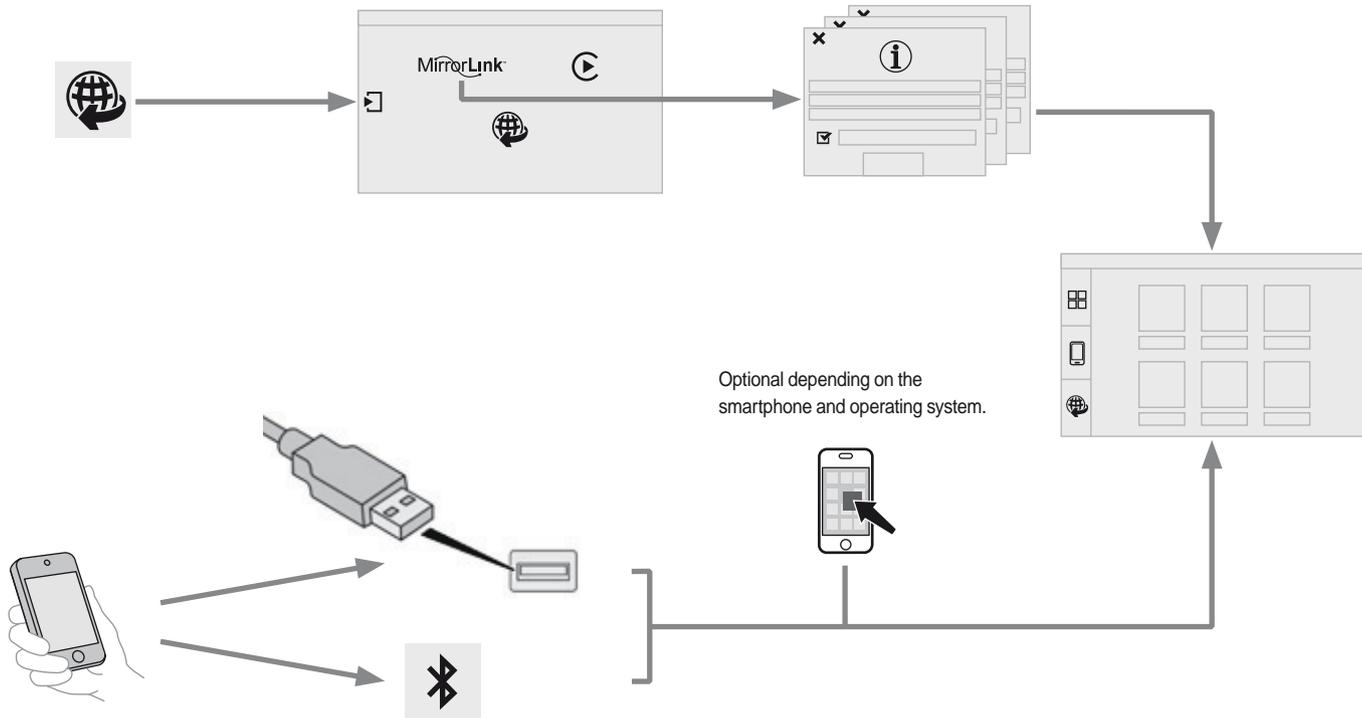

## MirrorLink™ smartphone connection

**!** As a safety measure and because it requires sustained attention by the driver, using a smartphone when driving is prohibited. All operations must be done with the **vehicle stationary**.

**i** The synchronisation of a smartphone allows applications on a smartphone that are adapted to the MirrorLink™ technology to be displayed in the vehicle's screen. The principles and standards are constantly evolving. For the communication process between the smartphone and the system to work correctly, the smartphone must be unlocked; update the operating system of your smartphone as well as the date and time in the smartphone and the system. For the list of eligible smartphones, connect to the brand's internet website in your country.

**!** As a safety measure, applications can only be viewed with the vehicle stationary; display is interrupted once the vehicle is moving.

**i** Please note:

- if your smartphone is supported, to make it "MirrorLink™" compatible, some phone manufacturers nevertheless invite you to first download a dedicated application.



When connecting a smartphone to the system, it is recommended that Bluetooth® be started on the smartphone.



Connect a USB cable. The smartphone charges when connected by a USB cable.



From the system, press on "**Connected services**" to display the primary page.



Press on "**MirrorLink™**" to start the application in the system.



Start the application on the smartphone (optional, depending on the smartphone and operating system).

**OK**

During the procedure, several screen pages relating to certain functions are displayed. Accept to start and end the connection.


Once connection is established, an page is displayed with the applications already downloaded to your smartphone and adapted to MirrorLink™ technology. If only one application has been downloaded to the smartphone, it starts automatically.

Access to the different audio sources remains accessible in the margin of the MirrorLink™ display, using touch buttons in the upper bar. Access to the menus for the system is possible at any time using the dedicated buttons

### Voice recognition

Press the end of the lighting control stalk to start voice recognition of your smartphone via the system.

Voice recognition requires a compatible smartphone connected to the vehicle by Bluetooth.

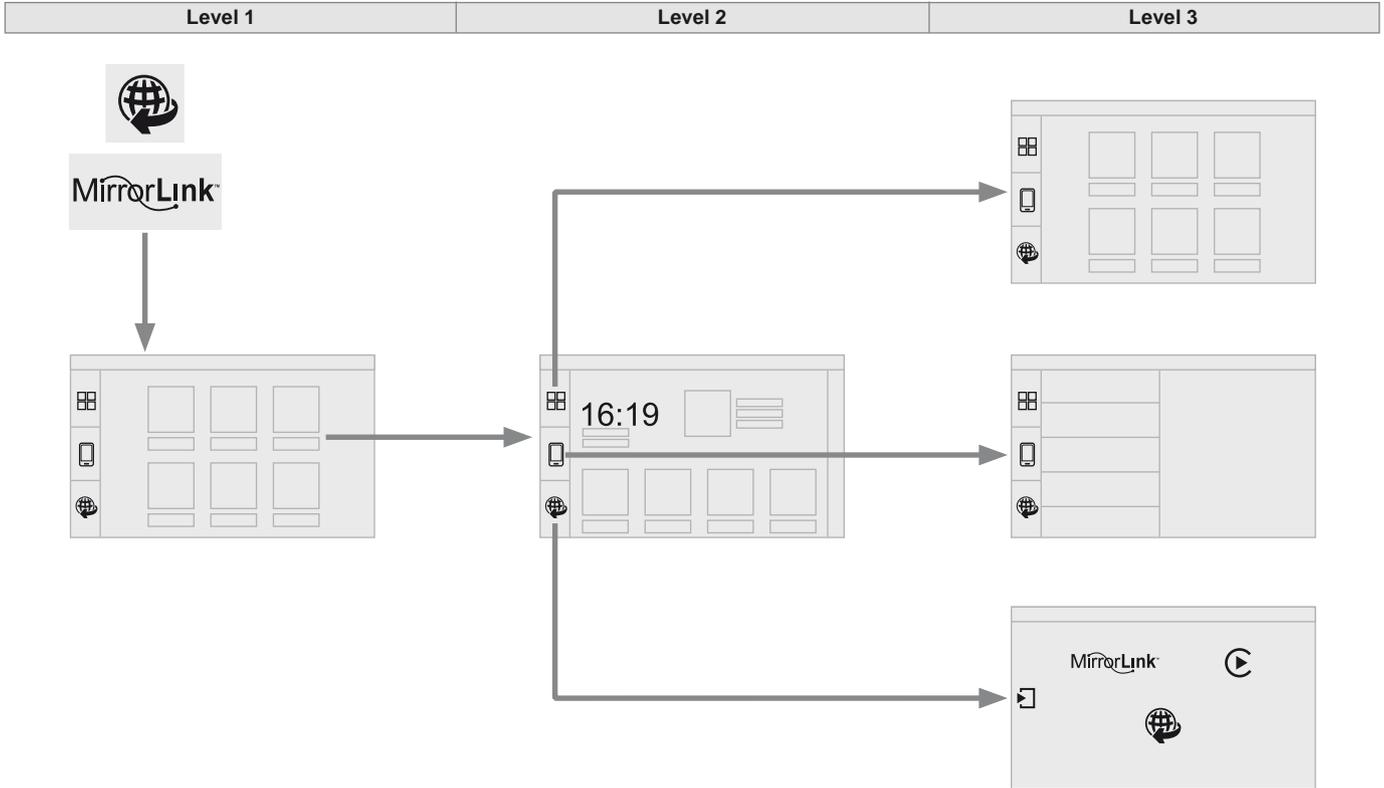




Level 1		Level 2		Level 3		Comments
 	<p><b>Connected services</b></p> <p>↓</p> <p><b>MirrorLink™</b></p>					Access or return to the applications already downloaded to your smartphone and adapted to MirrorLink™ technology.
						Access to a menu list depending on the application chosen. "Back": abandon the current operation, go up one level. "Home": access or return to the "Car mode" page.
						Access to the "Connected services" primary page.



# CarPlay®

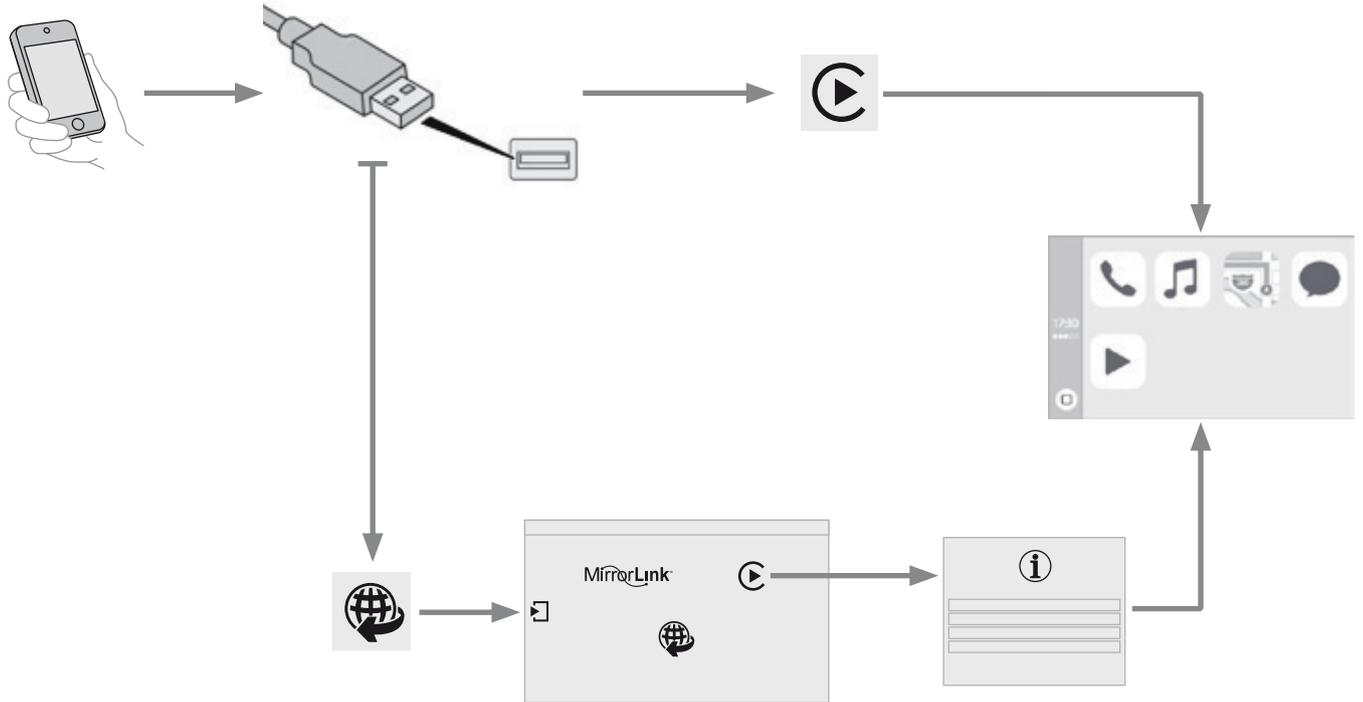

## CarPlay® smartphone connection

**!** As a safety measure and because it requires sustained attention by the driver, using a smartphone when driving is prohibited. All operations must be done with the **vehicle stationary**.

**i** The synchronisation of a smartphone allows applications on a smartphone that are adapted to the CarPlay® technology to be displayed in the vehicle's screen. As the principles and standards are constantly evolving, it is recommended that you update the operating system of your smartphone. For the list of eligible smartphones, connect to the brand's internet website in your country.

**i** As a safety measure, applications can only be viewed with the vehicle stationary; display is interrupted once the vehicle is moving.



Connect a USB cable. The smartphone charges when connected by a USB cable.



On connecting the USB cable, the "**Telephone**" function changes to "**CarPlay**" in the menu carousel. Press on "**CarPlay**" to display the CarPlay® interface.

Or



Connect the USB cable. The smartphone is charged while connected by the USB cable.



From the system, press on "**Connected services**" to display the primary page.



Press on "**CarPlay**" to display the CarPlay® interface.

**i** During the procedure, one or more screen pages relating to certain functions are displayed on connection.

## Voice recognition


Press the end of the lighting control stalk to start voice recognition of your smartphone via the system.



Level 1		Level 2		Level 3		Comments	
 <b>Connected services</b>  <b>Apple® CarPlay®</b>	 <b>Telephone</b>		☆ <b>Favourites</b>			<p>The "Telephone" function is placed automatically in "Siri" voice mode. Press on "Display contacts" for access to the telephone menus.</p>	
			⏪ <b>Calls</b>				
			👤 <b>Contacts</b>				
			☰ <b>Keypad</b>				
			💬 <b>Messages</b>				
	 <b>Music</b>			📁 <b>Lists</b>			<p>Press on "Music" to browse and select the tracks on your smartphone. Press on "Playing" for access to the track currently playing.</p>
				👤 <b>Artists</b>			
				🎵 <b>Tracks</b>			
				📀 <b>Albums</b>			
	 <b>Plan</b>			> <b>Destinations</b>			<p>Press on "Destinations" to search for an address by "Siri" voice command or by using the keypad. The GPS function is through the telephone's 3G, 4G or Wi-Fi internet connection.</p>
				 <b>Messages</b>			
	▶ <b>Playing</b>						Access to the track currently playing.



# Telephone

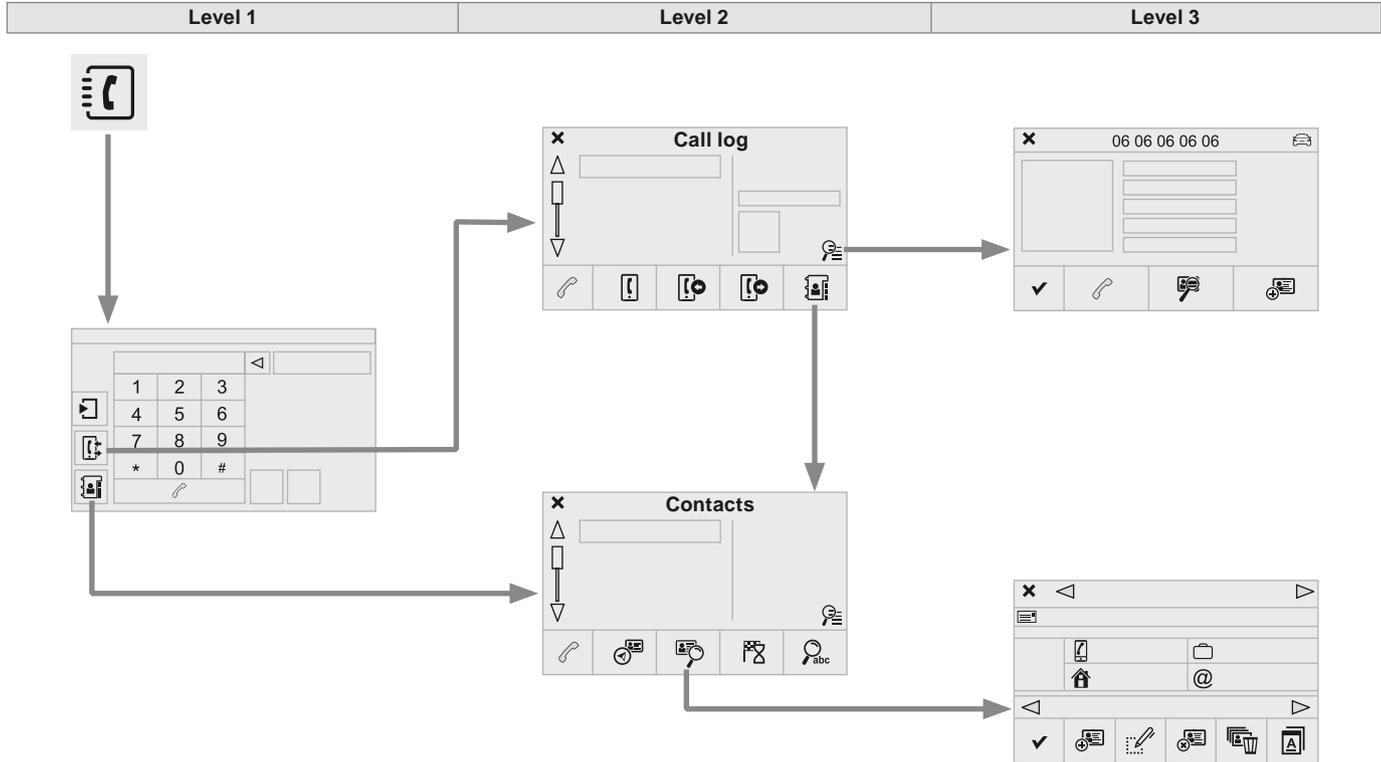

Level 1		Level 2		Level 3		Comments
 	<b>Telephone</b> ↓ <b>Call log</b>	 <b>All calls</b>				After making choices, start the call.
		 <b>Incoming calls</b>				
		 <b>Outgoing calls</b>				
		 <b>Contacts</b>				
		 <b>Magnifying glass</b>	 View			
			 Create			
 <b>Call</b>						
 	<b>Telephone</b> ↓ <b>Contacts</b>	 <b>Addresses</b>				After making choices, start the call.
		 <b>View</b>	 Create			
			 Modify			
			 Delete			
			 Delete all			
			 By name			
			 Confirm			
		 <b>Navigate to</b>				
		 <b>Search for contact</b>				
 <b>Call</b>						



Level 1		Level 2		Level 3		Comments
  	Telephone connection ↓ Secondary page ↓ Bluetooth connection	 Search				Start the search for another peripheral device to connect.
		 Connect / Disconnect				Start or stop the Bluetooth connection to the selected peripheral device.
		 Update				Import the contacts from the selected telephone to store them in the audio system.
		 Delete				Delete the selected telephone.
		 Confirm				Save the settings.
  	Telephone connection ↓ Secondary page ↓ Search for devices			<input checked="" type="checkbox"/> Telephone		Start the search for peripheral devices.
		Devices detected		<input checked="" type="checkbox"/> Audio streaming		
				<input checked="" type="checkbox"/> Internet		
  	Telephone connection ↓ Secondary page ↓ Telephone Options	 Put on hold				Cut the microphone temporarily so that the contact cannot hear your conversation with a passenger.
		 Update				Import the contacts from the selected telephone to save them in the audio system.
		 Ringtones				Choose the telephone ringtone and volume.
		 Memory info.				Contact records used and free, percentage of storage space used by internal contacts and Bluetooth contacts.
		 Confirm				Save the settings.

## Pairing a Bluetooth® telephone

**!** For reasons of safety and because they require prolonged attention on the part of the driver, the operations for pairing the Bluetooth mobile telephone to the hands-free system of the audio system must be carried out with the **vehicle stationary**.

### Procedure (short) from the telephone

In the Bluetooth menu of your device, select the system name in the list of devices detected.

Enter a code of at least 4 figures in the device and confirm.

**✓** Enter this same code in the system, select **"OK"** and confirm.

### Procedure from the system

Activate the telephone's Bluetooth function and ensure that it is "visible to all" (telephone configuration).



Press on **Telephone** to display the primary page.



Press on the secondary page.



Select **"Bluetooth connection"**.



Select **"Search for devices"**.  
The list of telephones detected is displayed.



If the telephone is not detected, it is recommended that you switch the Bluetooth function on your telephone off and then on again.



Select the name of the desired peripheral from the list and **"Confirm"**.



Enter a code of at least 4 figures for the connection then **"Confirm"**.

Enter this same code in the telephone then accept the connection.

The system offers to connect the telephone:

- in **"Telephone"** (hands-free kit, telephone only),
- in **"Audio streaming"** (streaming: wireless playing of audio files from the telephone),
- in **"Internet"** (internet browsing, only if your telephone is compatible with the "DUN" Dial-Up Networking Bluetooth standard).

Select one or more profiles and confirm.

! The services available depend on the network, the SIM card and the compatibility of the Bluetooth telephone used. Check the telephone manual and with your network provider for details of the services available to you.

! The ability of the system to connect with only one profile depends on the telephone. The three profiles may all connect by default.

Visit [www.peugeot.co.uk](http://www.peugeot.co.uk) for more information (compatibility, additional help, ...).



The recognised telephone appears in the list.

Depending on your telephone, you may be asked to accept automatic connection every time the ignition is switched on.

! Depending on the type of telephone, the system will ask you to accept or not the transfer of your contacts.



If not, select "**Update**".

On return to the vehicle, if the last telephone connected is present again, it is reconnected automatically and within around 30 seconds after switching on the ignition the pairing is done without any action on your part, with (Bluetooth activated).

To modify the automatic connection mode, select the telephone in the list then select the desired profile.

## Connecting a Bluetooth® peripheral device

### Automatic reconnection

On switching on the ignition, the telephone connected when the ignition was last switched off is automatically reconnected, if this connection mode had been activated during the pairing procedure.

The connection is confirmed by the display of a message and the name of the telephone.

### Manual connection



Press on **Telephone** to display the primary page.



Press on the secondary page.



Select "**Bluetooth**" to display the list of paired peripherals.

Select the peripheral to connect.



Press on "**Search for devices**".

The connection is confirmed by the display of a message and the name of the telephone.

## Managing paired telephones

**i** This function allows the connection or disconnection of a peripheral device as well as the deletion of a pairing.



Press on **Telephone** to display the primary page.



Press on the secondary page.



Select "**Bluetooth**" to display the list of paired peripheral devices.

Select the peripheral in the list.



Select "**Search for devices**"

Or



"**Connect / Disconnect**" to start or end the Bluetooth connection with the selected device.

Or



"**Delete**" to delete the pairing.

## Receiving a call

An incoming call is announced by a ring and a superimposed display in the screen.



Make a short press on the steering mounted **TEL** button to accept an incoming call.



Make a long press



on the steering mounted **TEL** button to reject the call.

Or



Select "**End call**".

## Making a call

**!** Using the telephone is not recommended while driving. Park the vehicle. Make the call using the steering mounted controls.

### Calling a new number



Press on **Telephone** to display the primary page.



Enter the phone number using the digital keypad. Press "**Call**" to start the call.

### Calling a contact



Press on **Telephone** to display the primary page.



Or make a long press



on the steering mounted **TEL** button.



Select "**Contacts**".

Select the desired contact from the list offered.



Select "**Call**".

### Calling a recently used number



Press on **Telephone** to display the primary page.



Select "**Call log**".

Select the desired contact from the list offered.



It is always possible to make a call directly from the telephone; park the vehicle first as a safety measure.

## Managing contacts / entries



Press on **Telephone** to display the primary page.



Select "**Contacts**".



Select "**View**".



Select "**Create**" to add a new contact.

Or



"**Modify**" to edit the selected contact.

Or



"**Delete**" to delete the selected contact.

Or



"**Delete all**" to delete all information for the selected contact.



Select "**By name**" to view the list of contacts.

## Frequently asked questions

The following table groups together the answers to the most frequently asked questions concerning your audio system.

### Navigation

QUESTION	ANSWER	SOLUTION
The route calculation is not successful.	The route settings may conflict with the current location (exclusion of toll roads on a toll motorway).	Check the route settings in the "Navigation" menu.
The POIs do not appear.	The POIs have not been selected.	Select the POIs in the list of POIs.
The Risk areas audible warning does not work.	The audible warning is not active.	Activate audible warnings in the "Navigation" menu.
The system does not suggest a detour around an incident on the route.	The guidance criteria do not take account of TMC messages.	Select the "Information" function in the list of route settings.
I receive a Risk areas alert which is not on my route.	Other than guidance, the system announces all Risk areas positioned in a cone located in front of the vehicle. It may provide an alert for Risk areas located on nearby or parallel roads.	Zoom in on the map to view the exact position of the Risk areas. Select "On the route" to no longer receive alerts other than navigation instructions or to reduce the time for the announcement.

QUESTION	ANSWER	SOLUTION
Certain traffic jams along the route are not indicated in real time.	On starting, it is several minutes before the system begins to receive the traffic information.	Wait until the traffic information is being received correctly (display of the traffic information icons on the map).
	The filters are too restrictive.	Modify the settings.
	In certain countries, only major routes (motorways...) are listed for the traffic information.	This phenomenon is normal. The system is dependent on the traffic information available.
The altitude is not displayed.	On starting, the initialisation of the GPS may take up to 3 minutes to receive more than 4 satellites correctly.	Wait until the system has started up completely so that there is GPS coverage by at least 4 satellites.
	Depending on the geographical environment (tunnel...) or the weather, the conditions of reception of the GPS signal may vary.	This phenomenon is normal. The system is dependent on the GPS signal reception conditions.

## Radio

QUESTION	ANSWER	SOLUTION
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the "RDS" function by means of the short-cut menu to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a fault with the audio system.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a PEUGEOT dealer.
I cannot find some radio stations in the list of stations received.	The station is not received or its name has changed in the list.	Press and hold the "List" button at the steering mounted controls to update the list of stations received or press on the system update function: "Update list".
The name of the radio station changes.	Some radio stations send other information in place of their name (the title of the song for example).	
	The system interprets this information as the name of the station.	

## Media

QUESTION	ANSWER	SOLUTION
Playback of my USB memory stick starts only after a very long wait (around 2 to 3 minutes).	Some files supplied with the memory stick may greatly slow down access to reading the memory stick (multiplication by 10 of the catalogue time).	Delete the files supplied with the memory stick and limit the number of sub-folders in the file structure on the memory stick.
When I connect my iPhone as a telephone and to the USB port at the same time, I am unable to play the music files.	When the iPhone connects automatically as a telephone, it forces the streaming function. The streaming function takes the place of the USB function which is then not useable, there is a period without sound of the track being played with Apple® players.	Disconnect and reconnect to the USB port (the USB function takes priority over streaming).
The CD is ejected automatically or is not played by the player.	The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play.	Check that the CD is inserted in the player the right way up. Check the condition of the CD: the CD cannot be played if it is too badly damaged. Check the content in the case of a recorded CD: refer to the advice in the "AUDIO" section. The audio system's CD player does not play DVDs. Some recorded CDs will not be played by the audio system because they are not of adequate quality.
	The CD has been recorded in a format that is not compatible with the player (udf...).	
	The CD is protected by an anti-pirating protection system which is not recognised by the audio system.	
There is a long waiting period following the insertion of a CD or connection of a USB memory stick.	When a new medium is inserted, the system reads a certain amount of data (directory, title, artist, etc.). This may take from a few seconds to a few minutes.	This phenomenon is normal.

QUESTION	ANSWER	SOLUTION
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio equipment settings (bass, treble, ambiences) are unsuitable.	Set the treble or bass level to 0, without selecting an ambience.
Some characters in the media information are not displayed correctly while playing.	The audio system does not display some types of characters.	Use standard characters to name tracks and folders.
Playing of streaming files does not start.	The peripheral device connected does not support automatic play.	Start the playback from the device.
The names of tracks and the track length are not displayed on the screen when streaming audio.	The Bluetooth profile does not allow the transfer of this information.	




## Settings

QUESTION	ANSWER	SOLUTION
In changing the setting of treble and bass the equalizer setting is deselected.	The selection of an equalizer setting imposes the balance settings. Modifying one without the other is not possible.	Modify the balance or equalizer settings to obtain the desired musical ambience.
In changing the equalizer setting, treble and bass return to zero.		
When changing the balance settings, the distribution setting is deselected.	The selection of a distribution setting imposes the balance settings. Modifying one without the other is not possible.	Modify the balance or distribution settings to obtain the desired musical ambience.
When changing an distribution setting, the balance setting is deselected.		

QUESTION	ANSWER	SOLUTION
There is a difference in sound quality between the different audio sources.	For optimum sound quality, the audio settings for Loudness, Ambience, Treble, Bass, Volume can be adapted to the different sound sources, which may result in audible differences when changing source.	Check that the audio settings (Loudness, Ambience, Treble, Bass, Volume) are adapted to the sources listened to. Adjust Balance, Treble and Bass to the middle position, select the "None" musical ambience and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.
With the engine off, the system switches off after a few minutes of use.	When the engine is switched off, the system's operating time depends on the state of charge of the battery. The switch-off is normal: the system switches to economy mode and switches off to prevent discharging of the vehicle's battery.	Start the vehicle's engine to increase the battery charge.

## Telephone

QUESTION	ANSWER	SOLUTION
I cannot connect my Bluetooth telephone.	The telephone's Bluetooth function may be switched off or the telephone may not be visible.	Check that your telephone's Bluetooth function is switched on. Check in the telephone settings that it is "visible to all".
	The Bluetooth telephone is not compatible with the system.	You can check the compatibility of your telephone at <a href="http://www.peugeot.co.uk">www.peugeot.co.uk</a> (services).
The volume of the telephone connected in Bluetooth mode is inaudible.	The volume depends both on the system and on the telephone.	Increase the volume of the audio system, to maximum if required, and increase the volume of the telephone if necessary.
	The ambient noise level has an influence on the quality of telephone communication.	Reduce the ambient noise level (close the windows, reduce the booster fan speed, slow down...).
Some contacts are duplicated in the list.	The options for synchronizing contacts are synchronizing the contacts on the SIM card, the contacts on the telephone, or both. When both synchronizations are selected, some contacts may be duplicated.	Select "Display SIM card contacts" or "Display telephone contacts".
Contacts are not shown in alphabetical order.	Some telephones offer display options. Depending on the settings chosen, contacts can be transferred in a specific order.	Modify the display setting in the telephone directory.
The system does not receive SMS text messages.	The Bluetooth mode does not permit sending SMS text messages to the system.	

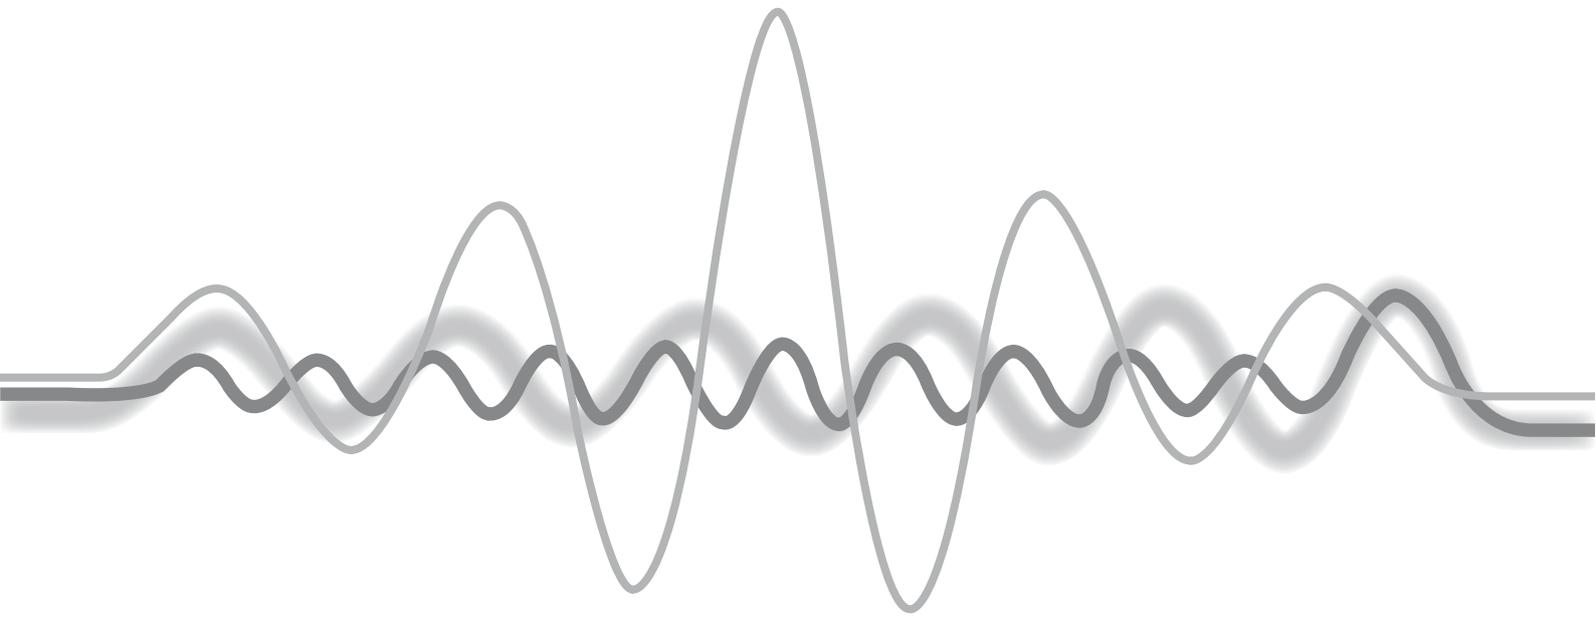

# Audio system / Bluetooth®

10



	Contents
First steps	296
Steering mounted controls	297
Radio	298
Media	300
Telephone	304
Audio settings	307
Configuration	308
Screen menu map(s)	309
Frequently asked questions	310

! As a safety measure, the driver must only carry out operations which require prolonged attention while the vehicle is stationary. When the engine is switched off and to prevent discharging of the battery, the system switches off after activation of energy economy mode.

# First steps



On / Off, volume adjustment.



Select the source:

Radio: FM1, FM2, AM, CD, USB, AUX, Streaming.

Telephone: accept an incoming call. Telephone, press and hold: end a call, access the calls log for the connected telephone.



Adjust audio settings: sound ambience, treble, bass, loudness, distribution, left/right balance, front/rear balance, automatic volume.



Automatic search for a lower radio frequency.  
Select the previous CD, USB track.  
Navigation in a list.  
Press and hold: fast back.



Display the list of stations received, the CD/USB tracks or folders.  
Press and hold: update the list of stations received.



Abandon the current operation.  
Go up one level (menu or folder).



Automatic search for a higher radio frequency.  
Select the next CD, USB track.  
Navigation in a list.  
Press and hold: fast forward.



Open the main menu.



Select a preset radio station.  
Radio, press and hold: preset a radio station.  
Other than radio: see the corresponding sections.



Eject CD.

# Steering mounted controls



Radio: select the previous / next preset station.  
 CD / USB: select the genre / artist / folder / playlist from the list depending on classification.  
 Select the previous / next item in a menu.



Radio: automatic search for a higher frequency.  
 CD / MP3 / USB: select the next track.  
 CD / USB: press and hold: fast forward.



Change the audio sound.  
 Confirm a selection.  
 Start/end call with the telephone.  
 Press and hold: access to the call log.



Radio: automatic search for a lower frequency.  
 CD / MP3 / USB: select the previous track.  
 CD / USB: press and hold: fast back.



Volume increase.



Volume decrease.



Mute: cut the sound by simultaneously pressing the volume increase and decrease buttons.  
 Restore the sound: by pressing one of the two volume buttons.

# Radio

## Presetting a station

 Press **SRC/TEL** repeatedly to select the FM1, FM2 or AM waveband.

 Press and hold one of the buttons to preset the station being listened to. The name of the station is displayed and an audible signal confirms the preset.

**i** The exterior environment (hills, buildings, tunnel, car park, below ground...) may prevent reception, even in RDS station tracking (alternative frequencies) mode. This phenomenon is normal in the propagation of radio waves and is in no way indicative of a fault with the audio system.

## Selecting a station

 Press a button to listen to the corresponding preset station.

## Managing a list

 Press **LIST** to display the list of stations received in alphabetical order.

 Select the desired radio station using one of the buttons.

 Confirm with "**OK**".

 Briefly press one of the buttons to change to the next or previous letter.

 Press and hold on **LIST** to build or update the list of stations; audio reception is cut momentarily.

## Entering a frequency

 Press on **MENU**.

 Select "**Radio**".

 Select "**Write freq.**".

 Press **+**.

or

 press **-** to select the desired frequency.

 Confirm with "**OK**".

## RDS

**i** RDS, if activated, enables you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

**MENU** With source FM1 or FM2, press **MENU**.

 Select "**Radio**".

 Select or deselect "**RDS**" to switch RDS on or off.

**OK** Confirm with "**OK**" to save the setting.

## Receiving TA messages

**i** The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, USB, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.

**MENU** Press **MENU**.

 Select "**Radio**".

 Select or deselect "**TA**" to activate or deactivate the reception of traffic messages.

**OK** Confirm with "**OK**" to save the setting.

## Displaying RADIO TEXT

**i** Radio text is information transmitted by the radio station related to the current programme or song.

**MENU** With the radio displayed on the screen, press **MENU**.

 Select "**Radio**".

 Select or deselect "**TXT**" to activate or deactivate the display of Radio Text.

**OK** Confirm with "**OK**" to save the setting.

# Media


## USB player



This unit comprises a USB port and a Jack auxiliary socket, depending on model.

**!** The system constitutes playlists (in temporary memory) the creation time for which can be from a few seconds to several minutes at the first connection. Limiting the number of non-music files and the number of folders reduces this waiting time. The playlists are updated every time the ignition is switched off or a USB memory stick is connected. The lists are memorised: if there is no change in the lists, the next loading time will be shorter.

**i** At a first connection, the order suggested is by folder. When connecting again, the order previously chosen is retained.

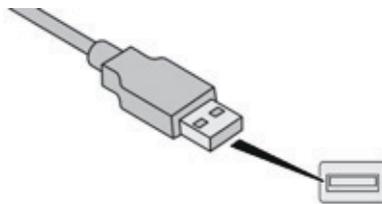

Connect a USB memory stick to the USB port or connect a USB device to the USB port using a suitable cable (not supplied).

**SRC / /**

Press **SRC/TEL** repeatedly to select "**USB**".



Press one of these buttons to select the next or previous track in the list.



Press one of these buttons to select the next or previous folder in the order chosen.



Press and hold one of these buttons for fast forward or back.

**LIST**

Press **LIST** to display the structure of the folders in the compilation.



Select a line in the list.

**OK**

Confirm with "**OK**".



Up a level in the menu.

**MENU**

Press **MENU**.



Select "**Media**".



Select or deselect "**TA**" to switch traffic announcements on or off.



Select the play mode: "**Normal**", "**Random**", "**Random all**" or "**Repeat**".

## Auxiliary socket (AUX)



Connect the portable device (MP3 player...) to the Jack auxiliary socket using an audio cable (not supplied).

Press **SRC/TEL** repeatedly to select "**AUX**".

First adjust the volume on the portable device (to a high level). Then adjust the volume on your audio system. Control is from the portable device.

! Do not connect a given device to both the Jack auxiliary socket and the USB port at the same time.

## CD player

Insert a CD into the player, play starts automatically.

Insert an MP3 compilation CD into the CD player.

The audio system searches for audio tracks, which can take from a few to several dozen seconds before play starts.

Press the **SRC/TEL** button repeatedly to select "**CD**".

Press one of these buttons to go to the previous or next track in the list.

Press one of these buttons to select the previous or next folder according to the category chosen.

Press and hold one of these buttons for fast forward or back.

**LIST**

Press **LIST** to display the folder structure of the compilation.



Select a line in the list.

**OK**

Confirm with "**OK**".

Return to the top level of the folder structure to select the type of tracks.

- By **Folders** (CD or USB): all folders containing audio files recognised on the peripheral device, in alphabetical order without following the folder structure.
- By **Artist** (USB only): all of the artist names defined in the ID3 Tags, in alphabetical order.
- By **Genre** (USB only): all of the genres defined in the ID3 Tags.
- By **Playlist** (CD or USB): if playlists have been saved.

## Information and advice

The audio system will only play files with ".mp3", ".wma" and ".wav" on a CD and can play files with ".ogg" extension only on USB.

It is recommended that file names be of no more than 20 characters and avoiding special characters (ex : " ? ; ù) so as to avoid any problem reading or displaying the files.

In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select standards ISO 9660 level 1.2 or Joliet.

If the disc is recorded in another format, it may not be played correctly.

It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet standard is recommended.

The playlists accepted on CD, MP3, iPod and USB connection are types ".m3u" and ".wpl". The number of files recognised is limited to 5 000 in 500 folders on a maximum of 8 levels.

On a single disc, the CD player can read up to 255 MP3 files spread over 8 folder levels with a maximum of 192 folders. However, it is recommended that this be kept to 2 levels so as to limit the time taken to access and play the CD.

During play, the folder structure is not observed.

Do not connect a hard disk or USB device other than audio players to the USB port. This may cause damage to your installation.

Use only USB memory sticks formatted FAT32 (File Allocation Table).

**i** The use of genuine Apple® USB cables is recommended to ensure correct operation.

## Bluetooth® audio streaming

Streaming allows music files on a telephone to be heard via the vehicle's speakers.

Connect the telephone: see the "**Telephone**" section.

In the "**Bluetooth: Audio**" menu, select the telephone to connect.  
The audio system connects automatically to a newly paired telephone.

**SRC /**


Activate the streaming source by pressing the **SRC/TEL\*** button.

Control of playback is via the audio system. The control of common tracks is possible via the audio system control buttons and the steering mounted controls\*\*. Contextual information can be displayed in the screen.

The audio quality depends on the quality of the transmission from the telephone.

- \* In certain cases, the play of audio files must be initiated from the keypad.
- \*\* If the telephone supports the function.

## Connecting Apple® players

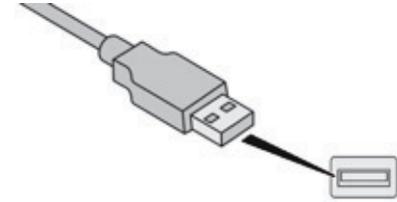

Connect the Apple® player to the USB port using a suitable cable (not supplied). Play starts automatically.

Management of the device is via the audio system controls.

The classifications available are those on the portable player connected (artists / albums / genres / playlists/ audiobooks / podcasts).

The software version of the audio system may not be compatible with the generation of your Apple® player.

# Telephone

## Pairing a Bluetooth telephone

**!** For safety reasons and because they require prolonged attention on the part of the driver, the operations for pairing of the Bluetooth mobile telephone with the Bluetooth hands-free system of your audio system must be carried out with the vehicle stationary and the ignition on.

Visit [www.peugeot.co.uk](http://www.peugeot.co.uk) for more information (compatibility, more help, ...).

Activate the telephone's Bluetooth function and ensure that it is set as visible to all (refer to the telephone instructions).



**MENU**

Press the **MENU** button.



Select **"Bluetooth"**.



Select **"Search"**.

A window is displayed with **"Searching device"**.

**i** The services available depend on the network, the SIM card and the compatibility of the Bluetooth telephone used. Consult your telephone's manual and your operator to find out which services are available to you.



Select the telephone to be paired from the list.



**OK**

Confirm with **"OK"**.

Only one telephone can be paired at a time.

In some cases, the Bluetooth address of the telephone may appear instead of the name of the telephone.



A virtual keypad is displayed on the screen: choose a 4 digit code.



**OK**

Confirm with **"OK"**.

A message is displayed in the screen of the telephone: enter the same code and confirm.

If pairing fails, try again; the number of attempts is not limited.

A message appears in the screen to confirm the result of the connection.

**i** Pairing can also be initiated from the telephone by searching for detected Bluetooth devices.

**i** The directory and the calls list can be accessed after the synchronisation period (if the telephone is compatible). Automatic connection must be configured in the telephone to allow the connection each time the vehicle is started.

## Managing connections

 Press the **MENU** button.

 Select "**Bluetooth**".

 Select "**BT management**" and confirm. The list of paired telephones is displayed.

 Indicates connection of the audio profile.

 Indicates connection of the hands-free profile.

 In the list, select a telephone to pair.

 Confirm with "**OK**".

 Select or deselect:

- "**Tel.**": hands-free connection
- "**Audio**": play audio files

 "**OK**" to confirm the choice.

 "**Delete**" to delete the pairing.

 It is not possible to pair more than 5 telephones. Press **MENU** and select "**Bluetooth**". Select "**BT management**". If 5 telephones are already paired, select the telephone to delete by pressing "**OK**" and selecting "**Delete**" (refer to the "Managing connections" section).

## Making a call

### From the directory

 Press the **MENU** button.

 Select "**Telephone**".

 Select "**Call**".

 Select "**Directory**".

 Select the desired number.

 Confirm with "**OK**" to start the call.

## Making a call

### Recently called numbers\*

 Press and hold **SRC/TEL** to display the calls list.

**i** For access to the calls list, it is also possible to press **MENU**, select **"Telephone"**, then select **"Call"**, and finally select **"Calls list"**.

 In the list of calls, select the number and choose **"Missed calls"**, **"Dialed calls"** or **"Answered calls"**.

 Scroll through the calls list.

**OK** Confirm with **"OK"**.

 Press one of these buttons to go to the previous or next page in the list.

**OK** **"OK"** starts the call.

**i** The calls list includes the calls sent from and by from the vehicle via the connected telephone. It is possible to make a call directly from the telephone; stop the vehicle as a safety measure.

## Receiving a call

An incoming call is announced by a ring and a superimposed display in the screen.

Press **SRC/TEL**.

or

 select **"YES"** to accept the call,

or

 select **"NO"** to reject the call.

 Pressing and holding the back button,

or

 on **SRC/TEL** also rejects an incoming call.

\* Depending on the compatibility of the telephone.

## Managing calls

### Hang up



In the contextual menu, select "**Hang up**" to end the call.

**SRC / TEL**

Pressing and holding on **SRC/TEL** also ends the call.

### Secret - Mute

(so that the caller cannot hear)

In the contextual menu:



Select "**Micro OFF**" to switch off the microphone.



Select "**Micro OFF**" to switch the microphone on again.

### Combined mode

(to leave the vehicle without ending the call)

From the contextual menu:



Select "**Combined mode**" to transfer the call to the telephone.



Select "**Combined mode**" to transfer the call to the vehicle.

**i** In certain cases, the combined mode has to be activated from the telephone. The Bluetooth connection will be restored automatically if the ignition has been switched off, then on again (depending on the compatibility of the telephone).

## Audio settings



Press **⌘** to display the audio settings menu.

Press **⌘** to go to the next setting.

The settings available are:

- AMBIANCE: BASS, TREBLE and LOUDNESS.
- BALANCE (left/right balance), FADER (front/rear balance)
- SOUND DIST. (driver or passenger).
- AUTO VOLUME.

**i** The distribution, or spatialisation of sound, is an audio process which allows the sound quality to be improved according to the setting chosen, corresponding to the position of the listeners in the vehicle.

**i** The AMBIANCE, TREBLE and BASS audio settings are different and independent for each sound source.



# Configuration

## Display and language settings

### MENU

Press the **MENU** button.



Select "**Config.**".



Select "**Displaying**" to activate or deactivate scrolling text.



Select "**Language**" to modify the display language.



Select "**Version**" for information on the software.



Select "**System**" when you want to install an update. Information can be obtained from a PEUGEOT dealer.



Select "**Unit**" to modify the units for temperature (Celsius, Fahrenheit).



# Screen menu map(s)

## MENU

### 1 Radio

- 2 TA
- 2 RDS
- 2 TXT
- 2 Write freq.

### 1 Media

- 2 Normal
- 2 Random
- 2 Random all
- 2 Repeat
- 2 TA

### 1 Telephone

- 2 Call
- 3 Directory
- 3 Calls list
- 4 Missed calls
- 4 Dialed calls
- 4 Answered calls

### 2 Phone status

### 1 Bluetooth

### 2 BT management

### 2 Search

### 1 Config.

- 2 Displaying
- 3 Scrolling text

### 2 Language

- 3 Deutsch
- 3 English
- 3 Español
- 3 Français
- 3 Italiano
- 3 Nederlands
- 3 Português
- 3 Português-Brasil
- 3 Русский
- 3 Türkçe

### 2 Version

### 2 System

### 2 Unit

- 3 Celsius
- 3 Fahrenheit

## Frequently asked questions


The following tables contain answers to the most frequently asked questions.

QUESTION	ANSWER	SOLUTION
<p>There is a difference in sound quality between the different audio sources (radio, CD...).</p>	<p>For optimum sound quality, the audio settings (volume, bass, treble, ambience, loudness) can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).</p>	<p>Check that the audio settings (volume, bass, treble, ambience, loudness) are adapted to the sources listened to. It is advisable to adjust audio settings (bass, treble, Front-Rear balance, Left-Right balance) to the middle position, select the musical ambience and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.</p>
<p>When changing the settings for treble and bass, the ambience setting is deselected. When changing the ambience setting, treble and bass are reset to zero.</p>	<p>Choosing an ambience imposes settings for treble and bass. Modifying one without the other is only possible with a personalised ambience.</p>	<p>Modify the treble and bass settings or the ambience setting to obtain the desired sound quality.</p>
<p>When changing the balance setting, distribution is deselected.</p>	<p>Choosing the "driver" distribution setting imposes a balance setting.</p>	<p>Modify the balance setting or the distribution setting to obtain the desired sound quality.</p>

QUESTION	ANSWER	SOLUTION
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 MHz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Activate the RDS function to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a failure of the audio equipment.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a PEUGEOT dealer.
Sound cut-outs of 1 to 2 seconds in radio mode.	During this brief sound cut-out, the RDS searches for any frequency permitting better reception of the station.	Deactivate the RDS function if the phenomenon is too frequent and always on the same route.
Traffic announcement TA is displayed. I do not receive any traffic information.	The radio station does not broadcast traffic information.	Tune to a radio station which broadcasts traffic information.
The stored stations are not found (no sound, 87.5 MHz is displayed...).	An incorrect waveband is selected.	Press the SRC/TEL button to return to the waveband (FM1 or FM2) on which the stations are stored.

QUESTION	ANSWER	SOLUTION
The CD is ejected automatically or is not played by the player.	The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play. The CD is protected by an anti-pirating protection system which is not recognised by the audio equipment.	<ul style="list-style-type: none"> <li>- Check that the CD is inserted in the player the right way up.</li> <li>- Check the condition of the CD: the CD cannot be played if it is too damaged.</li> <li>- Check the content in the case of a recorded CD: consult the advice in the "Audio" section.</li> <li>- The audio equipment's CD player does not play DVDs.</li> <li>- Due to their quality level, certain writeable CDs will not be played by the audio system.</li> </ul>
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio settings (bass, treble, ambience) are unsuitable.	Set the treble or bass level to 0, without selecting an ambience.
The Bluetooth connection is cut.	The battery of the peripheral may not be sufficiently charged.	Recharge the battery of the peripheral device.
The message "USB device error" is displayed on the screen.	The USB memory stick is not recognised.	Use only USB memory sticks formatted to FAT 32 (28-bit file allocation table).
A telephone connects automatically, disconnecting another telephone.	Automatic connection overrides manual connection.	Modify the telephone settings to remove automatic connection.

QUESTION	ANSWER	SOLUTION
An iPod is not recognised when connecting to the USB port.	The iPod is of a generation that is not compatible with the USB connection.	
The hard disk or device is not recognised when connecting to the USB port.	Some hard disks and devices need a power supply greater than is provided by the audio system.	Connect the device to the 230 V socket, the 12 V socket or an external power supply. <b>Caution:</b> ensure that the device does not transmit a voltage greater than 5 V (risk of destruction of the system).
When streaming, the sound cuts momentarily.	Some telephones prioritise connection of the "hands-free" profile.	Delete the "hands-free" connection profile to improve streaming.
In "Random all" play, not all of the tracks are played.	In "Random all" play, the system can only take into account up to 999 tracks.	
With the engine off, the audio system switches off after a few minutes of use.	When the engine is switched off, the audio system operating time depends on the battery charge. The switch-off is normal: the audio system switches to economy mode and switches off to prevent discharging the vehicle's battery.	Start the vehicle's engine to increase the battery charge.
The message "the audio system is overheated" appears on the display.	In order to protect the installation if the surrounding temperature is too high, the audio system switches to an automatic thermal protection mode leading to a reduction of the volume or stopping of the playing of the CD.	Switch the audio system off for a few minutes to allow the system to cool.

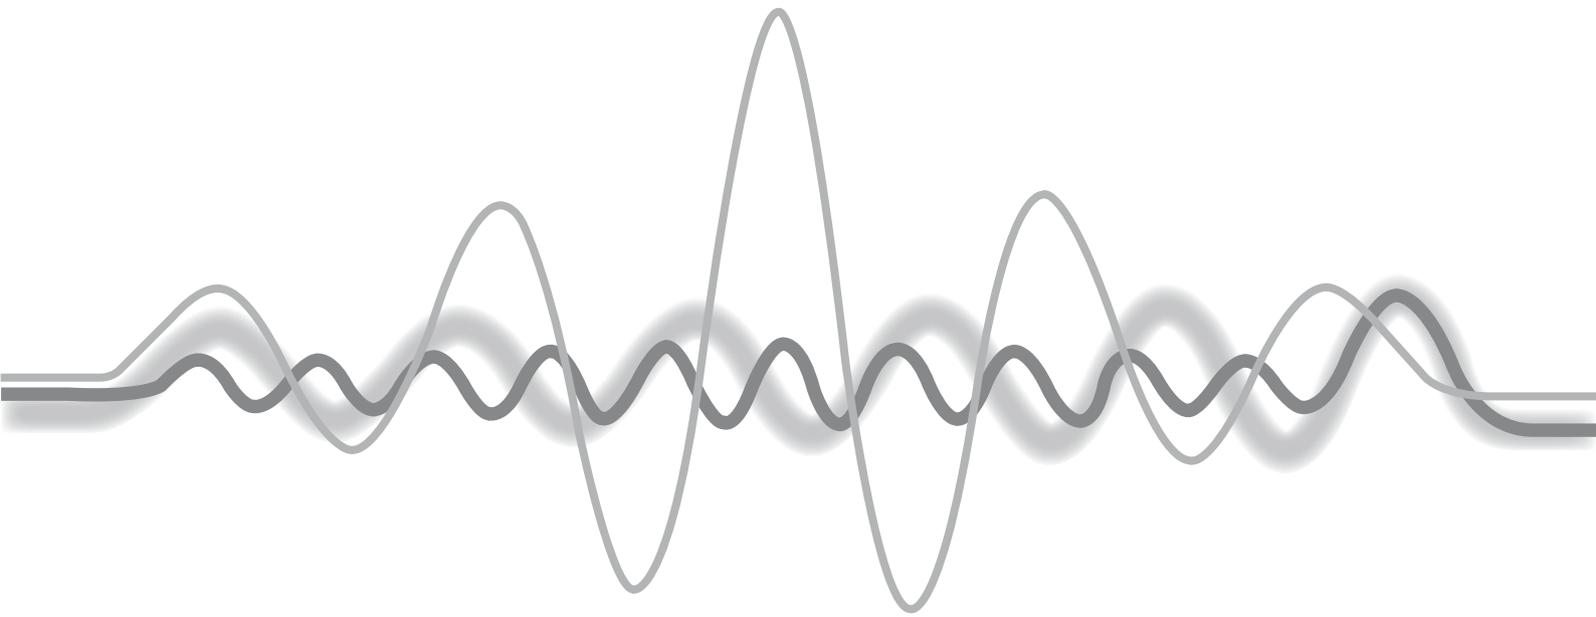



# Audio system

10



	Contents
First steps	316
Steering mounted controls	317
Radio	318
Media	320
Audio settings	322
Screen menu map(s)	323
Frequently asked questions	324

! As a safety measure, the driver must only carry out operations which require prolonged attention while the vehicle is stationary. When the engine is switched off and to prevent discharging of the battery, the system switches off after activation of economy mode.

# First steps



On / Off, volume adjustment.

SRC/BAND

Selection of source:  
FM1, FM2, AM, CD, AUX.



Adjust audio settings:  
sound ambience, treble, bass,  
loudness, left/right balance,  
automatic volume.



Automatic search for a lower/higher  
radio frequency.  
Select the next CD track.  
Navigation in a list.  
Press and hold: fast forward or back.

**LIST**

Display the list of stations received,  
the CD/MP3 tracks or folders.  
Press and hold: update the list of  
stations received.



Manual search step by step for a  
higher radio frequency.  
Select the next MP3 track.  
Navigation in a list.



Manual search step by step for a  
lower radio frequency.  
Select the previous MP3 track.  
Navigation in a list.



Abandon the current operation.  
Go up one level (menu or folder).



Automatic search step by step for a  
higher radio frequency.  
Select the next CD track.  
Navigation in a list.  
Press and hold: fast forward.

**MENU**

Open the main menu.



Select a preset radio station.  
Radio, press and hold: preset a radio  
station.



Eject CD.

# Steering mounted controls



Radio: select the previous / next preset station.  
Select the previous / next item in a menu.



Radio: automatic search for a lower frequency.  
CD / MP3: select the previous track.  
CD: press and hold: fast back.



Radio: automatic search for a higher frequency.  
CD / MP3: select the next track.  
CD: press and hold: fast forward.



Volume up.



Volume down.



Change audio source.  
Confirm a selection.



Mute on: cut the sound by simultaneously pressing the volume up and down buttons.  
Mute off: press one of the volume buttons.

# Radio

## Presetting a station

 Press the **SRC/BAND** button repeatedly to select the FM1, FM2 or AM waveband.

 Press and hold a button to preset the station being listened to. The name of the station is displayed and an audible signal confirms that it has been preset.

**i** The external environment (hills, buildings, tunnels, basement car parks) may block reception, including in RDS mode. This is a normal effect of the way in which radio waves are transmitted and does not indicate any failure of the audio equipment.

## Selecting a station

 Press a button to listen to the corresponding preset station.

## Managing the list

**LIST** Press **LIST** to display the list of stations received, in alphabetical order.

 Select the desired radio station by pressing one of the buttons.

**OK** Confirm with **OK**.

 Briefly press one of the buttons to change to the next or previous letter.

**LIST** Press and hold on **LIST** to construct or update the list of stations; the sound is interrupted temporarily.

## RDS

**i** RDS, if displayed, enables you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage by an RDS station may not be assured throughout the country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

**MENU** Press **MENU**.

 Select **"Radio"**.

**OK** Confirm with **OK**.

 Select **"RDS"**.

**OK** Confirm with **OK**.



Select "**On**" or "**Off**" to switch RDS on or off.

**OK**

Confirm with **OK**.

## Receiving TA messages

**i** The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source (Radio, CD, ...) is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.



Select "**On**" or "**Off**" to switch on or off the reception of traffic announcements.

**OK**

Confirm with **OK**.

**MENU**

Press **MENU**.



Select "**Radio**".

**OK**

Confirm with **OK**.



Select "**Traffic TA**".

**OK**

Confirm with **OK**.

## Display RADIO TEXT

**i** Radio Text is information transmitted by the radio station on the station or on the song being played.

Press **MENU**.

**MENU**



Select "**Radio**".



Confirm with **OK**.

**OK**



Select "**INFO TEXT**".



Confirm with **OK**.

**OK**



Select "**On**" or "**Off**" to switch radio text on or off.

**OK**

Confirm with **OK**.

## Media

### Auxiliary socket (AUX)



Connect the portable device (MP3 player...) to the auxiliary Jack socket using an audio cable (not supplied).

Press the **SRC/BAND** button repeatedly and select "**AUX**".

First adjust the volume on your portable device (to a high level). Then adjust the volume on your audio system. Control is from the portable device.

### CD player

Insert a CD into the player, play starts automatically.

Insert an MP3 compilation in the CD player. The audio system searches for audio tracks, which can take from a few to several dozen seconds before play starts.

Press the **SRC/BAND** button repeatedly to select "**CD**".



Press one of these buttons to select a track in the list.



Press one of these buttons to select the previous or next folder according to the category chosen.



Press and hold one of these buttons for fast forward or back.



## Playing a compilation

**LIST**

Press **LIST** to display the folder structure for the compilation.



Select a line in the list.

**OK**

Confirm with "**OK**".



Jump a page.



Select a folder / Playlist.

**OK**

Start play of the chosen track.



Go up one level.

Go back to the first level to select the track classification:

- By **Folders**: all folders containing audio files recognised on the peripheral device, in alphabetical order, ignoring the folder structure.
- By **Playlist**: depending on the playlists saved.



The play modes available are:

- Normal: the tracks are played in order, depending on the classification of the selected files.
- Random: the tracks in an album or folder are played in a random order.
- Random all: all of the tracks saved in the media are played in random order.
- Repeat: the tracks played are only those from the current album or folder.

## Play mode

**MENU**

Press **MENU**.



Select "**Media**".

**OK**

Confirm with **OK**.



Select the desired play mode.

**OK**

Confirm with **OK** to save the changes.

## Information and advice

The audio system can only play files with ".mp3", ".wma" or ".wav" extensions.

It is advisable to restrict file names to 20 characters without using special characters (e.g. " ? ; ù) to avoid any playing or displaying problems.

In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select standards ISO 9660 level 1.2 or Joliet.

If the disc is recorded in another format, it may not be played correctly.

It is recommended that the same recording standard is always used for a given disc, with as low a speed as possible (4x maximum) for optimum sound quality.

In the particular case of a multi-session CD, the Joliet standard is recommended.

Playlists accepted are types .m3u and .pls. The system can recognise up to 5 000 files in 500 folders on 8 levels.

On a given disc, the CD player can read up to 255 MP3 files spread over 8 levels. However, it is advisable to keep to a limit of two levels to reduce the access time before the CD is played.

The folder structure is not observed during playback.

## Audio settings



Press  to display the audio settings menu.

The settings available are:

- AMBIANCE,
- BASS,
- TREBLE,
- LOUDNESS,
- BALANCE (L/R),
- AUTO VOLUME.



Select the settings to adjust.



Confirm with **OK**.



Adjust the setting.



Confirm with **OK**.



The AMBIANCE, TREBLE and BASS settings are different and independent for each sound source.



# Screen menu map(s)

## MENU

- 1 **Radio**
- 2 Traffic
- 2 RDS
- 2 TEXT INFO
  
- 1 **Media**
- 2 Play
- 3 Normal
- 3 Random
- 3 Random all
- 3 Repeat
- 2 TEXT INFO

- 1 **Displaying**
- 2 SCROLLING
  
- 1 **Unit**
- 2 Celsius
- 2 Fahrenheit
  
- 1 **Language**

10

## Frequently asked questions

The following tables contain answers to the most frequently asked questions.

QUESTION	ANSWER	SOLUTION
<p>There is a difference in sound quality between the different audio sources (radio, CD...).</p>	<p>For optimum sound quality, the audio settings (Volume, Bass, Treble, Ambiance, Loudness) can be adapted to the different sound sources, which may result in audible differences when changing source (radio, CD...).</p>	<p>Check that the audio settings (Volume, Bass, Treble, Ambiance, Loudness) are adapted to the sources listened to. It is advisable to set the AUDIO functions (Bass, Treble, Front-Rear Fader, Left-Right Balance) to the middle position, select the musical ambience "None" and set the loudness correction to the "Active" position in CD mode or to the "Inactive" position in radio mode.</p>
<p>When changing the settings for treble and bass, the ambiance setting is deselected. When changing the ambiance setting, treble and bass are reset to zero.</p>	<p>Choosing an ambiance imposes settings for treble and bass. Modifying one without the other is not possible.</p>	<p>Modify the treble and bass settings or the ambiance setting to obtain the desired sound quality.</p>

QUESTION	ANSWER	SOLUTION
The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 MHz is displayed...).	The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.	Switch on the RDS function to enable the system to check whether there is a more powerful transmitter in the geographical area.
	The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.	This phenomenon is normal and does not indicate a failure of the audio equipment.
	The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).	Have the aerial checked by a PEUGEOT dealer.
Sound cut-outs of 1 to 2 seconds in radio mode.	During this brief sound cut-out, the RDS searches for any frequency permitting better reception of the station.	Switch off the RDS function if the phenomenon is too frequent and always on the same route.
The traffic announcement (TA) is displayed. I do not receive any traffic information.	The radio station does not broadcast traffic information.	Tune to a radio station which broadcasts traffic information.
The stored stations are not found (no sound, 87.5 MHz is displayed...).	An incorrect waveband is selected.	Press the SRC button to return to the waveband (AM, FM1, FM2) on which the stations are stored.

QUESTION	ANSWER	SOLUTION
The CD is ejected automatically or is not played by the player.	The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play. The CD is protected by an anti-pirating protection system which is not recognised by the audio equipment.	<ul style="list-style-type: none"> <li>- Check that the CD is inserted in the player the right way up.</li> <li>- Check the condition of the CD: the CD cannot be played if it is too damaged.</li> <li>- Check the content in the case of a recorded CD: consult the advice in the "Audio" section.</li> <li>- The audio system's CD player does not play DVDs.</li> <li>- Due to their quality level, certain writeable CDs will not be played by the audio system.</li> </ul>
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio settings (bass, treble, ambiance) are unsuitable.	Set the treble or bass level to 0, without selecting an ambiance.
In "Random all" play, not all of the tracks are played.	In "Random all" play, the system can only take into account up to 999 tracks.	
With the engine off, the audio system switches off after a few minutes of use.	When the engine is switched off, the audio system operating time depends on the battery charge. The switch-off is normal: the audio system switches to economy mode and switches off to prevent discharging the vehicle's battery.	Start the vehicle's engine to increase the battery charge.
The message "the audio system is overheated" appears on the display.	In order to protect the installation if the surrounding temperature is too high, the audio system switches to an automatic thermal protection mode leading to a reduction of the volume or stopping of the playing of the CD.	Switch the audio system off for a few minutes to allow the system to cool.

**A**

Accessories .....	162
Access to rear seats .....	36
Active City Brake.....	141
AdBlue® .....	20, 174
Adjusting headlamps .....	85
Adjusting head restraints .....	50
Adjusting seats.....	49, 51
Adjusting the air distribution .....	60, 62, 63
Adjusting the air flow.....	60, 62, 63
Adjusting the date .....	33
Adjusting the seat belt height .....	93
Adjusting the temperature .....	59, 61, 63
Adjusting the time .....	33
Advice on driving .....	117, 160
Airbags .....	23, 96
Airbags, curtain.....	98, 99
Airbags, front.....	96, 99
Airbags, lateral.....	98, 99
Air conditioning, digital .....	63
Air conditioning, manual .....	61
Air intake .....	56, 60, 62, 65, 63
Air vents .....	56
Alarm .....	41
Anti-lock braking system (ABS).....	90
Anti-theft .....	45, 118
Armrest, front.....	52
Assistance call .....	223
Assistance, emergency braking .....	90
Audio streaming (Bluetooth).....	254, 256, 303
Audio system.....	295, 315
Auxiliary .....	72, 254, 300, 320

**B**

Battery.....	208-211
Battery, charging.....	210
Battery, remote control .....	44, 45
Blind, panoramic roof.....	70
BlueHDI.....	20, 174, 214
Bluetooth (telephone).....	282, 304
Bonnet.....	167
Boot.....	43
Brake discs/pads.....	173
Brake lamps .....	199, 200
Brake warning lamp .....	18
Braking assistance system .....	90
Braking, automatic emergency.....	141
Bulbs (changing) .....	195

**C**

Cable, audio .....	74, 254, 300, 320
Capacity, fuel tank .....	154
CarPlay connection.....	275, 276
CD .....	254, 301
Central locking .....	37
Changing a bulb .....	195
Changing a fuse.....	202
Changing a wheel .....	188
Changing a wiper blade .....	164
Changing the remote control battery.....	44
Checking the engine oil level.....	171
Checking the levels.....	25, 89, 168, 172, 180

Checking tyre pressures (using the kit) .....	186
--	-----

Checks .....	121, 168, 169, 173
Child lock.....	114
Children (safety).....	95, 100-114
Child seats .....	100, 113
Child seats, conventional.....	106
Child seats, ISOFIX .....	110
Closing the boot .....	43
Closing the doors.....	37
Connected services.....	266
Connection, Bluetooth .....	282, 304
Connection, MirrorLink™ .....	270
Connection, Wi-Fi network .....	268
Control, electric windows.....	46
Control, emergency boot release.....	43
Control, heated seats.....	52
Controls, at steering.....	228, 297, 319
Control stalk, lighting .....	77, 80
Control stalk, wipers .....	87
Courtesy lamp.....	68
Cruise control.....	136, 139
Cup holder.....	71

**D**

DAB (Digital Audio Broadcasting) - Digital radio.....	252
Date (setting).....	33
Daytime running lamps.....	83, 195-197
Deactivating the passenger airbag.....	97, 102

Deadlocking .....39  
 Demisting/defrosting ..... 58, 64, 66  
 Dials and gauges ..... 11  
 Diesel .....157  
 Dimensions .....218  
 Dipstick..... 170, 171  
 Direction  
   indicators ..... 80, 84, 195, 196, 199, 200  
 Display screen,  
   instrument panel ..... 12, 129  
 Driving abroad.....85  
 Driving economically..... 115  
 Dynamic stability control  
   (DSC) .....19, 90, 91

## E

Eco-driving ..... 115  
 Electronic brake force  
   distribution (EBFD) .....90  
 Emergency braking  
   assistance (EBA) .....90  
 Emergency call .....222  
 Emergency warning lamps .....90, 182  
 Emissions control system, SCR ..... 21, 174  
 Engine compartment .....168, 169  
 Engine, Diesel ..... 15, 157, 169, 214  
 Engine, petrol ..... 157, 168  
 Environment ..... 44, 115, 151, 172, 178, 208

## F

Filling the fuel tank .....154, 156, 157  
 Filter, air ..... 173  
 Filter, oil ..... 173  
 Filter, particle .....155  
 Filter, passenger compartment..... 57, 173  
 Fitting a wheel .....193  
 Fitting roof bars .....165  
 Fittings, boot ..... 73  
 Fittings, interior ..... 71  
 Flap, fuel filler.....154, 156  
 Flashing indicators .....84, 196  
 Foglamp, rear .....81, 199, 200  
 Foglamps, front ..... 81, 86, 198  
 Frequency (radio) .....250, 298, 318  
 Fuel .....157  
 Fuel consumption..... 115  
 Fuel tank.....154, 156  
 Fusebox, dashboard ..... 204, 206  
 Fusebox, engine compartment .....207  
 Fuses.....202

## G

Gauge, fuel..... 11, 154  
 Gearbox, automatic .....126, 208  
 Gearbox, electronic .....123, 131  
 Gearbox, manual ..... 122, 131  
 Gear lever, manual gearbox .....122  
 Gear shift indicator .....129  
 Glove box ..... 71  
 Guide-me-home.....36, 79, 80

## H

Hazard warning lamps .....90, 182  
 Headlamps, automatic illumination .....79  
 Headlamps .....77, 195-197  
 Head restraints, front .....50  
 Head restraints, rear .....54, 55  
 Heating .....59, 61, 63  
 Hill start assist.....130

## I

Identification, vehicle .....220  
 Ignition .....120  
 Immobiliser, electronic ..... 45, 118  
 Indicator, coolant temperature .....25  
 Indicator, engine oil level ..... 170, 171  
 Indicator lamps, operation .....14  
 Indicators, direction ..... 84, 196, 199, 200  
 Inflating tyres ..... 115, 220  
 Inflating tyres and accessories  
   (using the kit) .....186  
 Input, auxiliary..... 74, 254, 300, 320  
 Instruments and controls ..... 11, 48  
 Internet browser .....267  
 Isofix mountings .....109

**J**

Jack.....	188
Jukebox.....	257
Jump starting.....	209

**K**

Key with remote control.....	35, 45, 118
Kit, hands-free.....	282, 304
Kit, temporary puncture repair.....	183

**L**

Labels, identification.....	220
Lamps, parking.....	80
Level, AdBlue® additive.....	174
Level, brake fluid.....	170
Level, Diesel additive.....	155
Level, engine coolant.....	25
Level, engine oil.....	170, 171
Levels and checks.....	25, 89, 168-173, 180
Level, screenwash fluid.....	89
Light-emitting diodes - LEDs.....	200

Lighting, cornering.....	86
Lighting dimmer.....	34
Lighting, guide-me home.....	36, 79, 80
Lighting, interior.....	68, 69
Lighting, mood.....	69
Loading.....	115, 165
Load reduction mode.....	161
Locating your vehicle.....	36
Low fuel level.....	22, 154

**M**

Maintenance, routine.....	115
Map reading lamps.....	68
Markings, identification.....	220
Mat.....	71
Menu.....	230, 323
Menus (Touch screen).....	225, 229
Mirror, rear view.....	76
Mirrors, door.....	75
Misfuel prevention.....	156
Mountings, Isofix.....	109
MP3 CD.....	254, 301

**N**

Navigation.....	230
Number plate lamps.....	201

**O**

Opening the bonnet.....	167
Opening the boot.....	43
Opening the doors.....	35
Opening the fuel filler flap.....	154
Opening the panoramic roof blind.....	70

**P**

Pads, brake.....	121, 173
Paint colour code.....	220
Paint, matt.....	181
Parcel shelf, rear.....	74
Park Assist.....	147
Parking brake.....	121
Petrol.....	157
PEUGEOT Connect Assistance.....	223
PEUGEOT Connect Packs.....	223
PEUGEOT Connect SOS.....	222
Plates, identification.....	220
Player, Apple®.....	256
Player, MP3 CD.....	254, 301

Player, USB .....254  
 Port, USB ..... 72, 254, 300  
 Pre-heater, Diesel .....15  
 Pressures, tyres .....220  
 Pre-tensioning seat belts .....95  
 Priming the fuel system .....214  
 Protecting children .....95, 100-114  
 Puncture .....183

Replacing the air filter ..... 173  
 Replacing the oil filter ..... 173  
 Replacing the passenger  
   compartment filter ..... 57, 173  
 Reservoir, screenwash .....89  
 Resetting the service indicator .....28  
 Reversing camera .....146  
 Reversing lamps .....199, 200  
 Risk areas (update) .....241  
 Roof bars .....165  
 Roof, panoramic .....70  
 Running out of fuel (Diesel) .....214

Settings (Menus) .....258  
 Sidelamps .....77, 80, 83, 195-197, 199, 200  
 Side repeater .....199  
 Snow chains .....158  
 Socket, 12 V accessory .....72  
 Sockets, audio ..... 72, 254, 300, 320  
 Speed limiter .....134, 139  
 Starting the engine .....118  
 Starting the vehicle .....118, 119, 123, 126  
 Starting using another battery .....209  
 Station, radio .....250, 298, 318  
 Stay, bonnet .....167  
 Steering mounted controls,  
   audio .....228, 297, 317  
 Stopping the vehicle .....118  
 Stop & Start .....16, 66, 131, 147,  
   154, 167, 208, 211

## R

Radio .....250, 298, 318  
 Radio, digital (Digital Audio  
   Broadcasting - DAB) .....252  
 Range, AdBlue .....176  
 RDS .....251, 299, 318  
 Rear screen, demisting .....67  
 Recharging the battery .....210  
 Recirculation, air .....60, 62, 65  
 Reduction of electrical load .....161  
 Regeneration of the particle filter .....155  
 Reinitialisation of the under-inflation  
   detection system .....153  
 Reinitialising the remote control .....44  
 Reminder, key in ignition .....120  
 Reminder, lighting on .....82  
 Remote control .....35, 45  
 Removing a wheel .....191  
 Removing the mat .....71  
 Replacing bulbs .....195  
 Replacing fuses .....202

## S

Safety,  
   children .....95, 100-114  
 Screen, instrument panel .....30, 31  
 Screen menu map .....230, 244,  
   258, 266, 272, 276, 278, 309, 323  
 Screenwash .....89  
 Screenwash, rear .....88  
 SCR (Selective Catalytic  
   Reduction) .....174  
 Seat belts .....93-95, 106  
 Seats, front .....36, 49, 51  
 Seats, heated .....52  
 Seats, rear .....53, 54  
 Serial number, vehicle .....220  
 Service indicator .....26  
 Servicing .....115

## T

Tables of fuses .....202  
 Tank, AdBlue® additive .....174  
 Tank, fuel .....154, 156  
 Telephone .....278, 304  
 Temperature, coolant .....25

---

**V**

Third brake lamp .....	201
Three flashes (direction indicators) .....	84
Time (setting) .....	33
TMC (Traffic info) .....	242
Tools .....	188, 202, 212
Touch screen .....	29, 31, 153
Touch screen (Menus) .....	225, 229
Towbar .....	159, 160
Towing another vehicle .....	213
Traction control (ASR) .....	19, 90
Traffic information (TA) .....	243, 299
Traffic information (TMC) .....	242
Trailer .....	159, 160
Trajectory control systems .....	90
Triangle, warning .....	182
Trip computer .....	30, 31
Tyres .....	115, 218
Tyre under-inflation detection .....	151

Ventilation .....	56-58, 61, 115
Voice recognition .....	271, 275

---

**W**


---

**U**

Under-inflation (detection) .....	151
Unlocking .....	35
Unlocking the boot .....	43
Updating risk areas .....	241
Updating the date .....	33
Updating the time .....	33
USB .....	72, 254, 309

Warning and indicator lamps .....	14
Warning lamp, braking system .....	18
Warning lamp, Diesel engine pre-heater .....	15
Warning lamp, SCR emissions control system .....	21
Wheel, spare .....	188
Window controls .....	46
Wiper blades (changing) .....	164
Wiper, rear .....	88
Wipers .....	16, 87
Wipers, automatic rain sensitive .....	87











This handbook describes all of the equipment available in the whole range.

Your vehicle will be fitted with some of this equipment described in this document, depending on its trim level, version and the specification for the country in which it is sold.

The descriptions and illustrations are given without any obligation. Automobiles PEUGEOT reserves the right to modify the technical specifications, equipment and accessories without having to update this edition of the handbook.

This document is an integral part of your vehicle. It should be passed on to the new user in the event of sale or transfer. In addition, there are labels present in your vehicle to warn you of the need for certain precautions to take for your safety; don't remove them, they will be useful again for a new owner.

 
Automobiles PEUGEOT declares, by application of the provisions of the European regulation (Directive 2000/53) relating to End of Life Vehicles, that it achieves the objectives set by this regulation and that recycled materials are used in the manufacture of the products that it sells.

Reproduction or translation of all or part of this document is prohibited without written authorisation from Automobiles PEUGEOT.

For any work on your vehicle, use a qualified workshop that has the technical information, competence and equipment required, which a PEUGEOT dealer is able to provide.

### **We draw your attention to the following points:**

- The fitting of electrical equipment or accessories not listed by PEUGEOT may cause faults and failures with the electrical system of your vehicle. Contact a PEUGEOT dealer for information on the range of recommended accessories.
- As a safety measure, access to the diagnostic socket, used for the vehicle's electronic systems, is reserved strictly for PEUGEOT dealers or qualified workshops, equipped with the special tools required (risk of malfunctions of the vehicle's electronic systems that could cause breakdowns or serious accidents). The manufacturer cannot be held responsible if this advice is not followed.
- Any modification or adaptation not intended or authorised by Automobiles PEUGEOT or carried out without meeting the technical requirements defined by the manufacturer would lead to the suspension of the legal and contractual warranties.



**PEUGEOT**

Automobiles PEUGEOT - Siège Social : 75, avenue de la Grande-Armée 75016 PARIS  
Tél. 33 (0)1 40 66 55 11 - Fax 33 (0)1 40 66 54 14

Adresse postale : Automobiles PEUGEOT B.P. 01 75761 PARIS cedex 16 - Adresse Internet : <http://www.peugeot.com>

Société Anonyme au capital de 172 771 770 Euros - R.C.S. PARIS B 552 144 503. SIRET 552 144 503 00018. APE 341 Z

Printed in the EU  
Anglais  
01-16



Warning / indicator lamp		State	Cause	Action / Observations
	<b>Low fuel level</b>	fixed with the needle in the red zone.	There remains approximately <b>5 litres</b> of fuel in the tank. At this point, you begin to use the fuel reserve.	Refuel as soon as possible to avoid running out of fuel. This warning lamp will come on every time the ignition is switched on, until a sufficient addition of fuel is made.
		flashing with the needle in the red zone.	There remains very little fuel in the tank.	Fuel tank capacity: approximately <b>50 litres (45 litres</b> for the BlueHDi Diesel engine). Never continue to drive until you run out of fuel, as this could damage the emission control and injection systems.
	<b>Engine oil pressure</b>	fixed.	There is a fault with the engine lubrication system.	You must stop as soon it is safe to do so. Park, switch off the ignition and contact a PEUGEOT dealer or a qualified workshop.
	<b>Battery charge*</b>	fixed.	The battery charging circuit has a fault (dirty or loose terminals, slack or cut alternator belt, ...).	The warning lamp should go off when the engine is started. If it does not go off, contact a PEUGEOT dealer or a qualified workshop.
  	<b>Under-inflation</b>	fixed.	The pressure in one or more wheels is too low.	Check the pressure of the tyres as soon as possible. This check should preferably be carried out when the tyres are cold.
		flashing then fixed, accompanied by the Service warning lamp.	The tyre pressure monitoring system has a fault or no sensor is detected on one of the wheels.	Under-inflation detection is not assured. Have the system checked by a PEUGEOT dealer or a qualified workshop.

\* Depending on the country of sale.

## Fuel tank

Fuel tank capacity: approximately **50 litres** (**45 litres** for the BlueHDi Diesel engine).

### Low fuel level



When the low fuel level is reached this warning lamp comes on in the instrument panel. There remains **approximately 5 litres** of fuel in the tank. When the warning lamp flashes, there is **very little fuel left**.


You must refuel as soon as possible to avoid running out of fuel.

For more information on **Running out of fuel (Diesel)**, refer to the corresponding section.

**i** The key cannot be removed from the lock until the cap is refitted. Removing the filler cap may cause an inrush of air. This vacuum is perfectly normal and results from the sealing of the system.

**!** With Stop & Start, never refuel with the system in STOP mode; you must switch off the ignition with the key.


### Refuelling

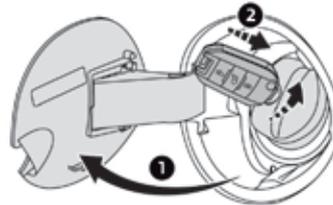

1. Open the filler flap.
2. Remove the filler cap.
3. Hook the filler cap.

A self-adhesive label on the inner face of the filler flap reminds you of the type of fuel to use depending on your engine.

Additions of fuel must be of at least 5 litres to be registered by the fuel gauge.

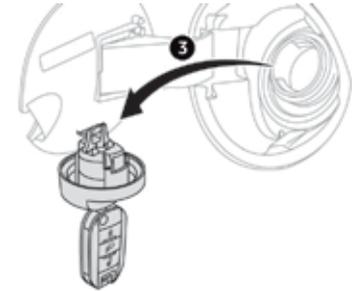

To fill the tank safely:

- ☞ **the engine must be switched off,**
- ☞ open the fuel filler flap 1,
- ☞ insert the key in the cap 2, then turn it to the left,
- ☞ remove the cap and hook it onto the clip located on the inside of the flap 3,
- ☞ fill the tank, **but do not continue after the 3rd cut-off of the pump**; this could cause malfunctions.

When you have filled the tank:

- ☞ put the cap back in place,
- ☞ turn the key to the right, then remove it from the cap,
- ☞ close the flap.

**!** If you have put in the wrong fuel for the engine of your vehicle, you must have the fuel tank drained and filled with the correct fuel before starting the engine.

## Fuel supply cut-off

Your vehicle is fitted with a safety system that cuts off the supply of fuel in the event of an impact.

## Diesel Particle filter

### SERVICE

The start of saturation of the particle filter is indicated by the fixed illumination of this warning lamp accompanied by a warning message in the screen (if a display screen is fitted).

As soon as the traffic conditions permit, regenerate the filter by driving at a speed of at least 40 mph (60 km/h) until the warning lamp goes off.

If the warning lamp stays on, this indicates a low additive level.

**i** On a new vehicle, the first particle filter regeneration operations may be accompanied by a "burnt" smell, which is normal.

Following prolonged operation of the vehicle at very low speed or at idle, you may, in exceptional circumstances, notice the emission of water vapour at the exhaust on acceleration. This does not affect the behaviour of the vehicle or the environment.

## Diesel additive

### SERVICE


A low additive level is indicated by illumination of the service warning lamp, accompanied by an audible warning and a message in the screen (if a display screen is fitted).

### Topping-up

This additive must be topped-up by a PEUGEOT dealer or a qualified workshop without delay.

# Emergency or assistance call

## Type 1

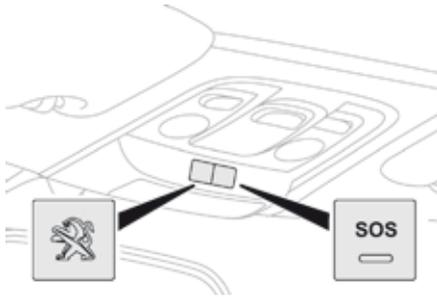

## PEUGEOT Connect SOS



In an emergency, press this button for more than 2 seconds. Flashing of the green indicator lamp and a voice message confirm that the call has been made to the "PEUGEOT Connect SOS"<sup>\*\*</sup> centre.

Pressing this button again immediately cancels the call.

The green indicator lamp goes off.

The green indicator lamp remains on (without flashing) when communication is established. It goes off at the end of the call.

PEUGEOT Connect SOS immediately locates your vehicle, makes contact with you in your language<sup>\*\*</sup> and - if necessary - organises sending of the appropriate emergency services<sup>\*\*</sup>. In countries where the service is not operational, or if the locating service has been expressly declined, the call is directed straight to the emergency services (112) without location.

**!** If an impact is detected by the airbag control unit, and independently of the deployment of any airbags, an emergency call is made automatically.

**i** If you benefit from the PEUGEOT Connect Packs offer with the SOS and assistance pack included, there are additional services available to you in your personal space, via the Internet website for your country.

\* Depending on the terms and conditions for the service, available from dealers, and technological and technical limits.

\*\* Depending on the geographic cover for "PEUGEOT Connect SOS", "PEUGEOT Connect Assistance" and the official national language selected by the owner of the vehicle.

The list of countries covered by PEUGEOT CONNECT services is available at dealers or on the website in your country.

## Operation of the system



When the ignition is switched on, the green indicator lamp comes on for 3 seconds indicating that the system is operating correctly.



If the orange indicator lamp flashes then goes off: the system has a fault.

If the orange indicator lamp is on fixed: the back-up battery should be replaced.

In both cases, the emergency and assistance calls service may not work.

Contact a qualified repairer as soon as possible.

**i** The fault with the system does not prevent the vehicle being driven.

## PEUGEOT Connect Assistance



Press this button for more than 2 seconds to request assistance if the vehicle breaks down. A voice message confirms that the call has been made\*\*.

Pressing this button again immediately cancels the request.

The cancellation is confirmed by a voice message.

## Geo-location



You can deactivate geo-location by simultaneously pressing the "PEUGEOT Connect SOS" and "PEUGEOT Connect Assistance" buttons, followed by a press on "PEUGEOT Connect Assistance" to confirm.

To reactivate geo-location, simultaneously press the "PEUGEOT Connect SOS" and "PEUGEOT Connect Assistance" buttons again, followed by a press on "PEUGEOT Connect Assistance" to confirm.

**i** If you purchased your vehicle outside the Brand's dealer network, we suggest that you have a dealer check and, if desired, modify the configuration of these services. In a multi-lingual country, configuration is possible in the official national language of your choice.


**i** For technical reasons, particularly to improve the quality of PEUGEOT CONNECT services to customers, the manufacturer reserves the right to carry out updates to the vehicle's on-board telematic system.

\*\* Depending on the geographic cover for "PEUGEOT Connect SOS", "PEUGEOT Connect Assistance" and the official national language selected by the owner of the vehicle.

The list of countries covered by PEUGEOT CONNECT services is available at dealers or on the website in your country.

# Emergency or assistance call

## Type 2

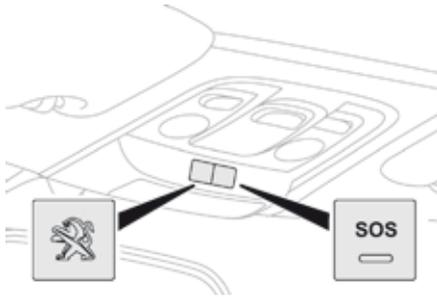

## PEUGEOT Connect SOS



In an emergency, press this button for more than 2 seconds. Flashing of the green LED and a voice message confirm that the call has been made to the "PEUGEOT Connect SOS" call centre\*.

Pressing this button again immediately cancels the request.  
The green LED goes off.

The green LED remains on (without flashing) when communication is established. It goes off at the end of the call.

"PEUGEOT Connect SOS" immediately locates your vehicle, starts communication with you in your language\*\*, and where necessary sends the appropriate public emergency services\*\*. In countries where the service is not available, or when the locating service has been expressly declined, the call is sent directly to the emergency services (112) without the vehicle location.

**!** If an impact is detected by the airbag control unit, and independently of the deployment of any airbags, an emergency call is made automatically.

**i** If you benefit from the PEUGEOT Connect Packs offer with the SOS and assistance pack included, there are additional services available to you in your personal space, via the Internet website for your country.

\* Subject to the general conditions for the service available from dealers and subject to technological and technical limitations.

\*\* Depending on the geographical cover of "PEUGEOT Connect SOS", "PEUGEOT Connect Assistance" and the official national language selected by the owner of the vehicle.

The list of countries covered and PEUGEOT CONNECT services is available from dealers or on the website in your country.

## Operation of the system



When the ignition is switched on, the green LED comes on for 3 seconds indicating that the system is operating correctly.

### For all countries except Russia, Belarus and Kazakhstan.



The red indicator lamp flashes then goes off: there is a system fault.

The red indicator lamp is on continuously: replace the back-up battery.

### For Russia, Belarus and Kazakhstan.



The red indicator lamp is on continuously: there is a system fault.

The red indicator lamp flashes: replace the back-up battery.

In either case, the emergency and assistance calls may not function.

Contact a qualified repairer as soon as possible.

**i** A fault with the system does not prevent the vehicle being driven.

## PEUGEOT Connect Assistance

 


Press this button for more than 2 seconds to request assistance if the vehicle breaks down. A voice message confirms that the call has been made\*\*.

Pressing this button again immediately cancels the request.

The cancellation is confirmed by a voice message.

## Geo-location



You can deactivate geo-location by simultaneously pressing the "PEUGEOT Connect SOS" and "PEUGEOT Connect Assistance" buttons, followed by a press on "PEUGEOT Connect Assistance" to confirm.

To reactivate geo-location, simultaneously press the "PEUGEOT Connect SOS" and "PEUGEOT Connect Assistance" buttons again, followed by a press on "PEUGEOT Connect Assistance" to confirm.

**i** If you purchased your vehicle outside the Brand's dealer network, we invite you to have a dealer check the configuration of these services and, if desired, modified to suit your wishes. In a multi-lingual country, configuration is possible in the official national language of your choice.

**i** For technical reasons and in particular to improve the quality of "PEUGEOT CONNECT services" services to customers, the manufacturer reserves the right to carry out updates to the vehicle's on-board telematic system.

\*\* Depending on the geographical cover of "PEUGEOT Connect SOS", "PEUGEOT Connect Assistance" and the official national language selected by the owner of the vehicle.

The list of countries covered and PEUGEOT CONNECT services is available from dealers or on the website in your country.

## 7-inch touch screen

### GPS satellite navigation - Multimedia audio - Bluetooth® telephone



	Contents
First steps	6
Steering mounted controls	8
Menus	9
Navigation	10
Navigation - Guidance	18
Traffic	22
Radio Media	24
Radio	30
DAB (Digital Audio Broadcasting) radio	32
Media	34
Settings	38
Connected services	46
MirrorLink™	46
CarPlay®	50
Telephone	52
Frequently asked questions	60

**i** The system is protected in such a way that it will only operate in your vehicle.


**!** As a safety measure, the driver should only carry out operations which require prolonged attention while the vehicle is stationary. The display of an energy economy mode message signals that electrical systems operating are going into standby. Refer to the energy economy mode section.

# First steps


Use the buttons to the left of the touch screen for access to the menu carousels, then press the virtual buttons in the touch screen. Each menu is displayed in one or two pages (primary page and secondary page).



**i** In very hot conditions, the system may go into stand-by (screen and sound completely off) for a minimum period of 5 minutes.

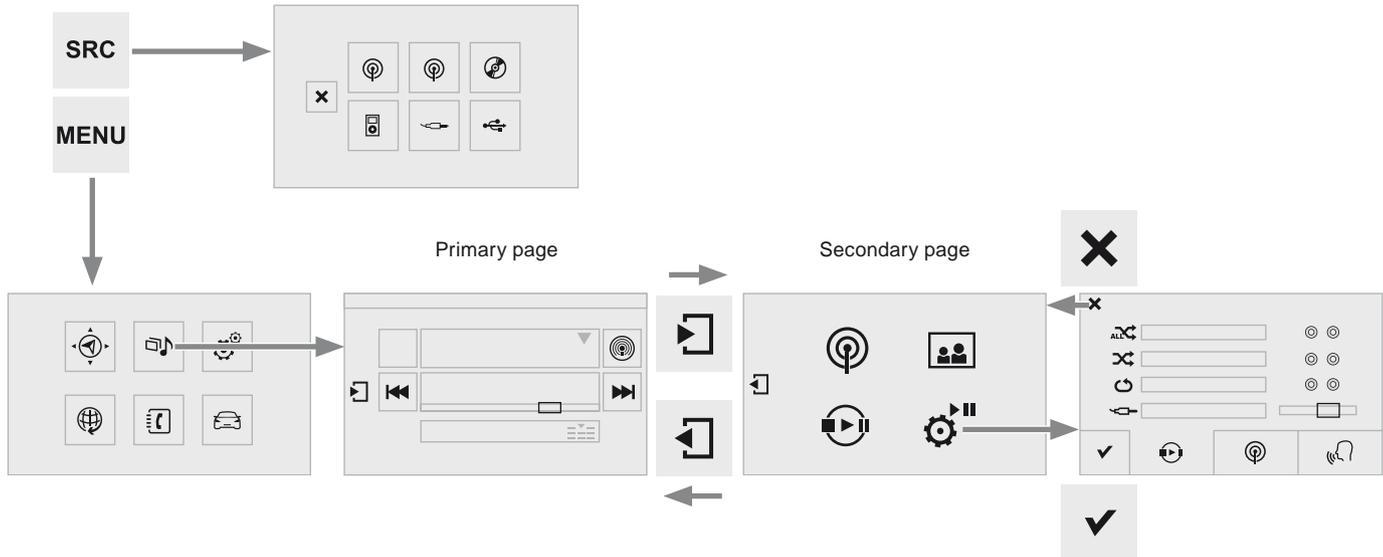


Short-cuts: using the touch buttons in the upper band of the touch screen, it is possible to go directly to the selection of audio source, the list of stations (or titles, depending on the source).

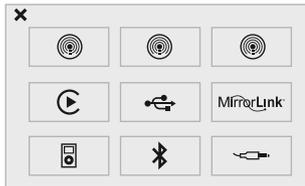

Selection of audio source (depending on version):

- FM /DAB\* /AM stations\*.
- USB memory stick.
- CD player (located in the glove box)\*.
- Smartphone via MirrorLink™ or CarPlay®.
- Telephone connected by Bluetooth\* and with Bluetooth\* audio streaming.
- Media player connected to the auxiliary socket (jack, cable not supplied).

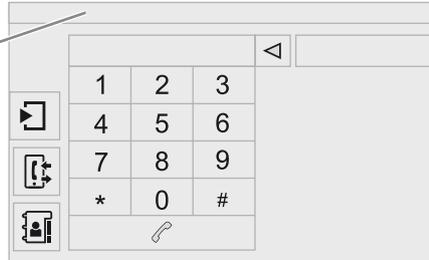

### MENU

Press on **Menu** to display the menu carousel.

### SRC

Press on **SRC** to display the audio sources carousel.

Volume adjustment (each source is independent, including traffic announcements (TA) and navigation instructions).



With the engine running, press to mute the sound.

With the ignition off, press to switch the system on.

**i** In very hot conditions, the volume may be limited to protect the system. The return to normal takes place when the temperature in the passenger compartment drops.

**i** The screen is of the "resistive" type, it is necessary to press firmly, particularly for "flick" gestures (scrolling through a list, moving the map...). A simple wipe will not be enough. Pressing with more than one finger is not recognised. The screen can be used when wearing gloves. This technology allows use at all temperatures.

**!** To clean the screen, use a soft non-abrasive cloth (spectacles cloth) without any additional product. Do not use pointed objects on the screen. Do not touch the screen with wet hands.

\* Depending on equipment.

# Steering mounted controls



Press: mute on / off.



Increase volume.



Decrease volume.



Change audio source: radio, media.



Radio, rotate: automatic search for the previous / next station.  
Radio, press: preset stations.  
Media, rotate: previous / next track.  
Press: confirm a selection.



Telephone: start or answer a call.  
Call in progress: telephone menu (end call, secret mode, hands-free mode).  
Telephone, press and hold: reject an incoming call, end a call in progress; other than call in progress, telephone menu.  
Radio: display the list of stations.  
Media: display the list of tracks.  
Radio, press and hold: update the list of stations received.

# Menus



## Navigation


(Depending on equipment)



Enter navigation settings and choose a destination.




## Radio Media

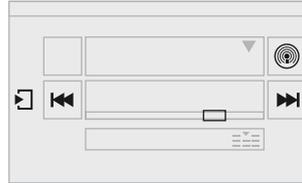

Select an audio source, a radio station, display photographs.



## Settings

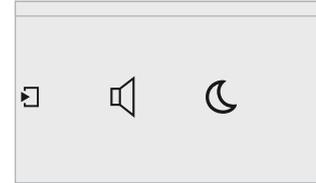


Adjust the settings for sound (balance, ambience, ...) and the display (language, units, date, time, ...).



## Connected services


(Depending on equipment)

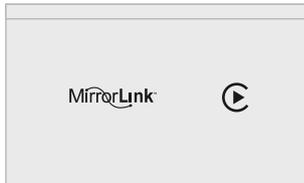

Operate certain applications on your smartphone via MirrorLink™ or CarPlay®.




## Telephone

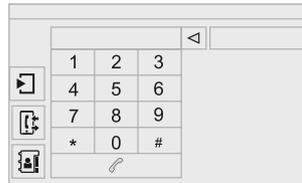

Connect a telephone by Bluetooth®. Access to the CarPlay® function after connection of your smartphone by USB cable.




## Driving

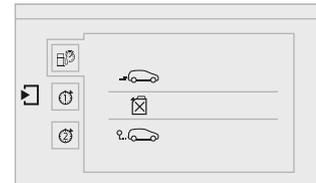


Access to the trip computer. Activate, deactivate or enter settings for certain vehicle functions.




Level 1		Level 2		Level 3		Comments
  <p style="text-align: center;"><b>Navigation</b> ↓ <b>Settings</b> <b>Navigation</b></p>	 <p><b>Enter destination</b></p>	 <p><b>Route settings</b></p>	 Fastest	Choose the navigation criteria. The map displays the route chosen according to these criteria.		
			 Shortest			
			 Time/distance			
			 Ecological			
			 Tolls			
			 Ferries			
			 Traffic			
			 Strict-Close			
			 Show route on map		Display the map and start navigation.	
			 Confirm	Save the options.		
	 <b>Save current location</b>			Save the current address.		
	 <b>Stop navigation</b>			Delete the navigation information.		
	 <b>Voice synthesis</b>			Choose the volume for voice and announcement of street names.		
	 <b>Diversion</b>			Detour from your initial route by a determined distance.		
 <p style="text-align: center;"><b>Navigation</b></p>				Display in text mode		
				Zoom in.		
				Zoom out.		
					Display in full screen mode. Use the arrows to move the map.	
				Switch to 2D map.		

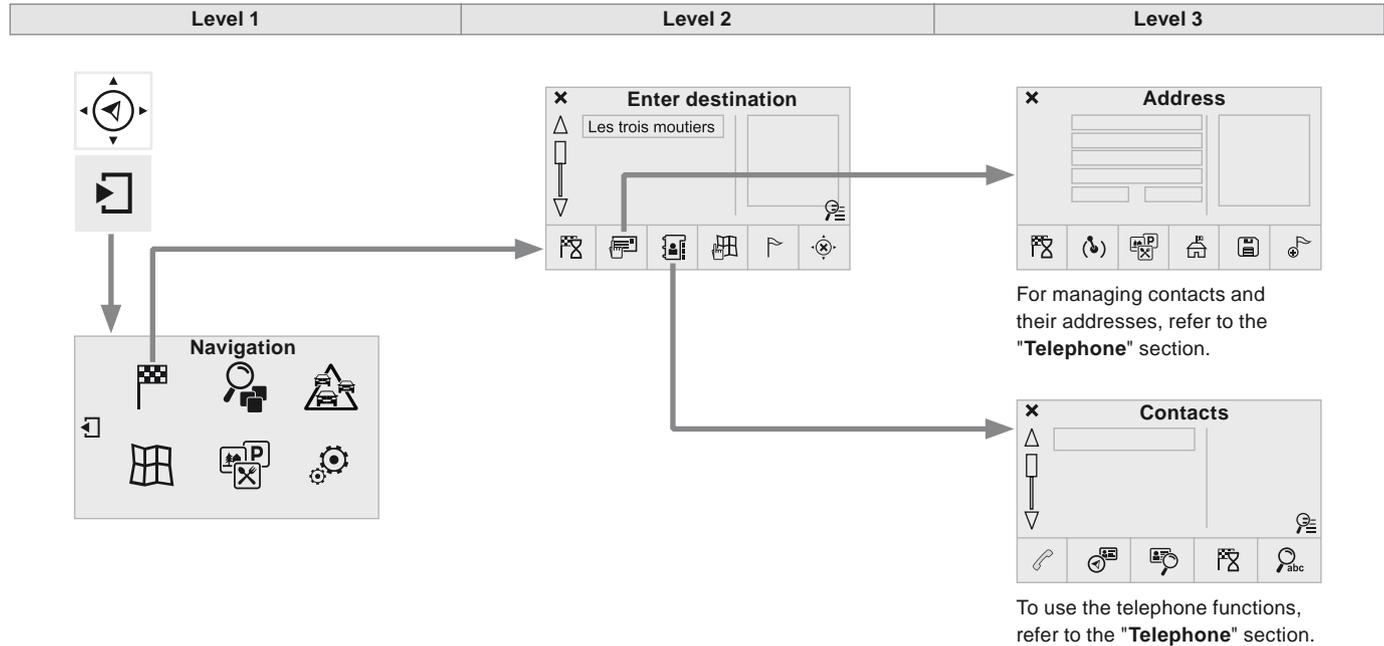

Level 1		Level 2		Level 3		Comments
  	<p style="text-align: center;"> <b>Navigation</b>  ↓  <b>Secondary page</b>  ↓  <b>Enter destination</b> </p>	 <b>Address</b>		 Current loc.	Address settings	
				 Point of interest		
				 Town center		
				 Save	Save the current address.	
				 Add waypoint	Add a waypoint to the route.	
				 Navigate to	Press to calculate the route.	
		 <b>Contacts</b>		 Addresses	Select a contact then calculate the route.	
				 View		
				 Navigate to		
				 Search for contact		
 Call						
 <b>On the map</b>			Display the map and zoom to view the roads.			
		 <b>Itinerary</b>	Create, add or delete a waypoint or view the itinerary.			
		 <b>Stop</b>	Delete navigation information.			
		 <b>Navigate to</b>	Press to calculate the route.			

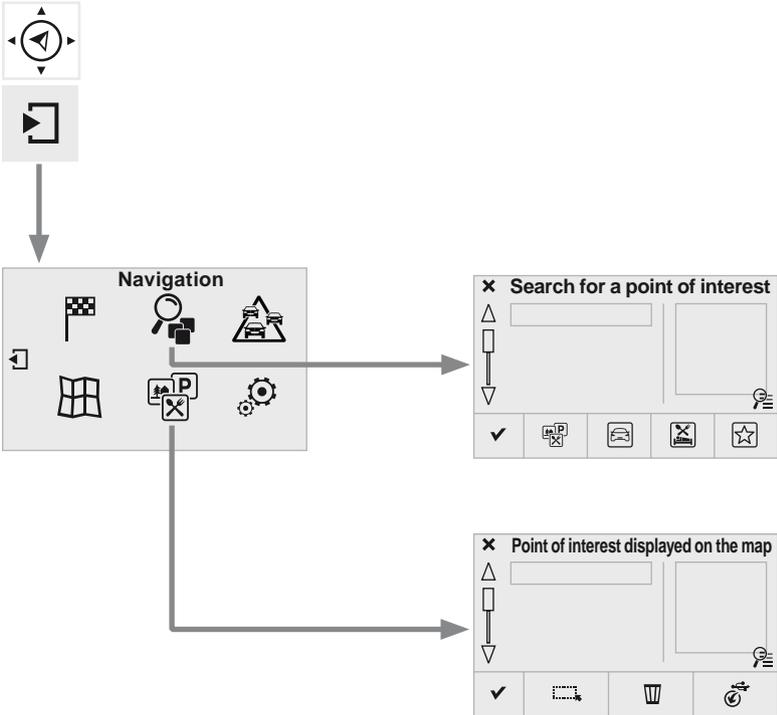

Level 1		Level 2		Level 3	Comments
  	Navigation	 All POIs		List of categories available. After choosing the category, select the points of interest.	
	↓	 Motor			
	Secondary page	 Dining/hotels			
	↓	 Personal			
	Search for POI	<input checked="" type="checkbox"/> Search		Save the settings.	
  	Navigation	 Select all		Choose the display settings for POIs.	
	↓	 Delete			
	Secondary page	 Import POIs			
	Show POIs	<input checked="" type="checkbox"/> Confirm		Save the options.	

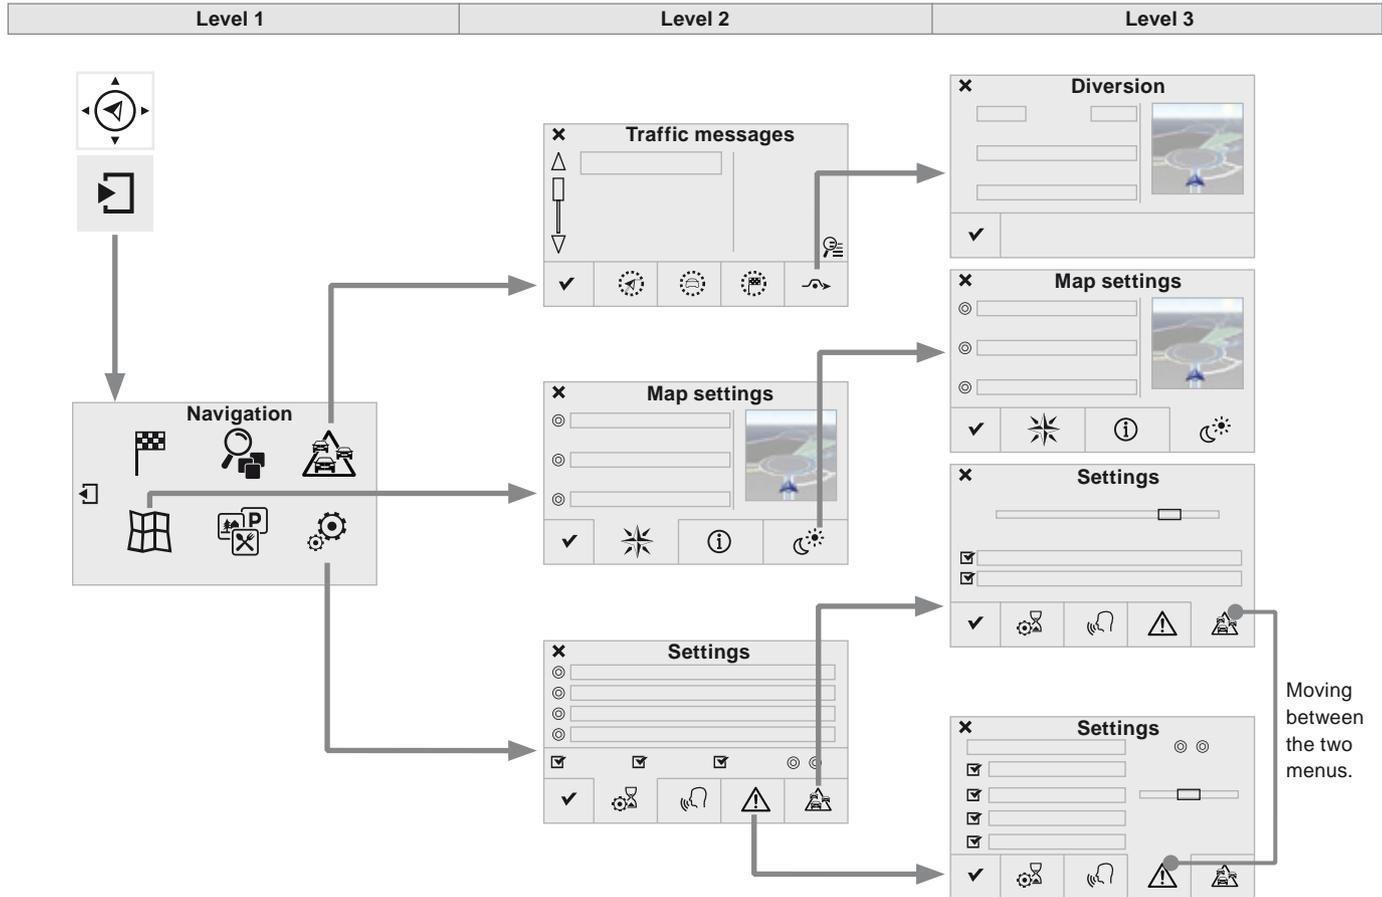

Level 1		Level 2		Level 3		Comments	
  	<b>Navigation</b> ↓ <b>Secondary page</b> ↓ <b>Traffic messages</b>	 <b>On the route</b>				Settings for the choice of messages and the filter radius.	
		 <b>Around vehicle</b>					
		 <b>Near destination</b>					
		 <b>Detour</b>	<input type="radio"/>	Detour over a distance	<input type="radio"/>		Recalculate route
		<input checked="" type="checkbox"/> <b>Finish</b>					
  	<b>Navigation</b> ↓ <b>Secondary page</b> ↓ <b>Map settings</b>	 <b>Orientation</b>		<input type="radio"/>	Flat view north heading	Choose the display and orientation of the map.	
				<input type="radio"/>	Flat view vehicle heading		
				<input type="radio"/>	Perspective view		
		 <b>Maps</b>					
		 <b>Aspect</b>	<input type="radio"/>	"Day" map colour	<input type="radio"/>		"Night" map colour
				<input type="radio"/>	Automatic day/night		
		<input checked="" type="checkbox"/> <b>Confirm</b>					
  	<b>Navigation</b> ↓ <b>Secondary page</b> ↓ <b>Settings</b>	 <b>Route settings</b>				Enter settings and choose the volume for the voice and announcement of street names.	
		 <b>Voice</b>					
		 <b>Alarm!</b>					
		 <b>Traffic options</b>					
		<input checked="" type="checkbox"/> <b>Confirm</b>					Save your selections.

# Navigation - Guidance

## Choosing a new destination

### Towards a new destination



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Enter destination**".



Select "**Address**".

▼	FRANCE	⊞
▼	PARIS	⊞
▼	Blvd Hossein	⊞
N°/R	20	⊞

Select the "**Country**:" from the list offered, then in the same way the "**City**:" or its post code, the "**Road**:", the "**N**°:". Confirm each time.



Select "**Save**" to save the address entered as a contact entry. The system allows up to 200 entries.



Select "**Navigate to**".



Choose the navigation criteria: "**Fastest**" or "**Shortest**" or "**Time/distance**" or "**Ecological**".



Choose the restriction criteria: "**Tolls**", "**Ferries**", "**Traffic**", "**Strict**", "**Close**".



Select "**Confirm**".

Or



Press on "**Show route on map**" to start navigation.



To delete navigation information, press on "**Settings**".



Press on "**Stop navigation**".



To resume navigation press on "**Settings**".



Press on "**Resume guidance**".

## Towards a recent destination



 
Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Enter destination**".



Select an address from the list offered.



Select "**Navigate to**".



Select the criteria then "**Confirm**" or press "**Show route on map**" to start navigation.

## Towards a contact



To be able to use navigation "towards a contact in the directory", it is first necessary to enter the address for your contact.



Press on **Navigation** to display the primary page.



 
Press on the secondary page.



Select "**Enter destination**".



Select "**Contacts**".



Select a destination from the contacts in the list offered.



Select "**Navigate to**".



Select the criteria then "**Confirm**" to start navigation.

## Towards GPS coordinates



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Enter destination**".



Select "**Address**".



Enter the "**Longitude**:" then the "**Latitude**:".



Select "**Navigate to**".



Select the criteria then "**Confirm**" or press "**Show route on map**" to start navigation.

## Towards a point on the map



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Enter destination**".



Select "**On the map**".

Zooming in on the map shows points with information.

A long press on a point opens its content.

## Towards points of interest (POI)

Points of Interest (POI) are listed in different categories.



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Search for POI**".



Select "**All POIs**".

Or



"**Motor**".

Or



"**Dining/hotels**".

**i** An annual mapping update allows new points of interest to be presented to you.  
You can also update the Risk areas / Danger areas every month.  
The detailed procedure is available on:  
<http://peugeot.navigation.com>.

## Risk areas / Danger zone alert settings



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Settings**".



Select "**Alarm!**" (Alert).

It is then possible to activate Risk areas alerts then:

- "Audible warning"
- "Alert only when navigating"
- "Alert only for overspeed"
- "Display speed limits"
- Timing: the choice of timing allows the time before giving a Risk areas alert to be defined.



Select "**Confirm**".

**!** This series of alerts and displays is only available if Risk areas have first been downloaded and installed on the system.

## Traffic

### Traffic information

#### Display of messages



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Traffic messages**".

Choose filter settings for:



"**On the route**",



"**Around**",



"**Near destination**", filters to fine-tune the list of messages.

Press again to remove the filter.



Select the message from the list offered.



Select the magnifying glass to have voice information.

**i** TMC (Traffic Message Channel) messages on GPS-Navigation contain traffic information transmitted in real time.

## Setting filters



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Settings**".



Select "**Traffic options**".



Select:

- "**Be advised of new messages**",
- "**Speak messages**".

Then enter the filter radius.



Select "**Confirm**".

**i** We recommend a filter radius of:

- 12 miles (20 km) in urban areas,
- 30 miles (50 km) on motorways.

## Receiving TA messages



Press on **Navigation** to display the primary page.



Press on the secondary page.



Select "**Settings**".




Select "**Voice**".

Off  On


Activate / Deactivate "**Traffic (TA)**".

**i** The TA (Traffic Announcement) function gives priority to TA alert messages. To operate, this function needs good reception of a radio station transmitting this type of message. When a traffic report is transmitted, the current audio source is interrupted automatically to play the TA message. Normal playback of the audio source resumes at the end of the transmission of the message.


# Radio Media

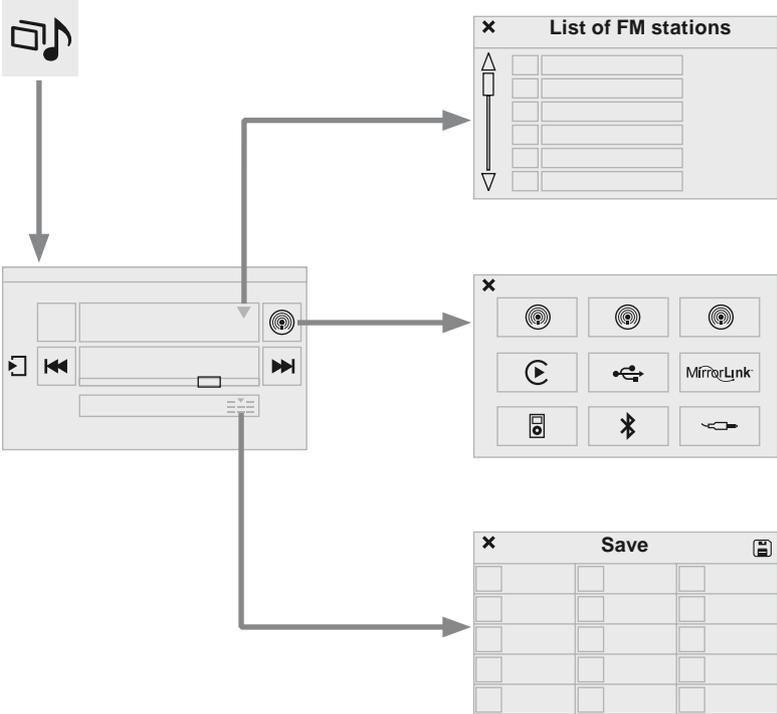

Level 1		Level 2		Comments
 	<b>Radio Media</b> ↓ <b>List</b>		<b>List of FM stations</b>	Press on a radio station to select it.
 	<b>Radio Media</b> ↓ <b>Source</b>	 <b>FM Radio</b>  <b>DAB Radio</b>  <b>AM Radio</b>  <b>USB</b>  <b>CD</b>  <b>MirrorLink™</b>  <b>CarPlay®</b>  <b>iPod</b>  <b>Bluetooth</b>  <b>AUX</b>		Select change of source.
 	<b>Radio Media</b> ↓ <b>Save</b>			Press an empty location to Save it.

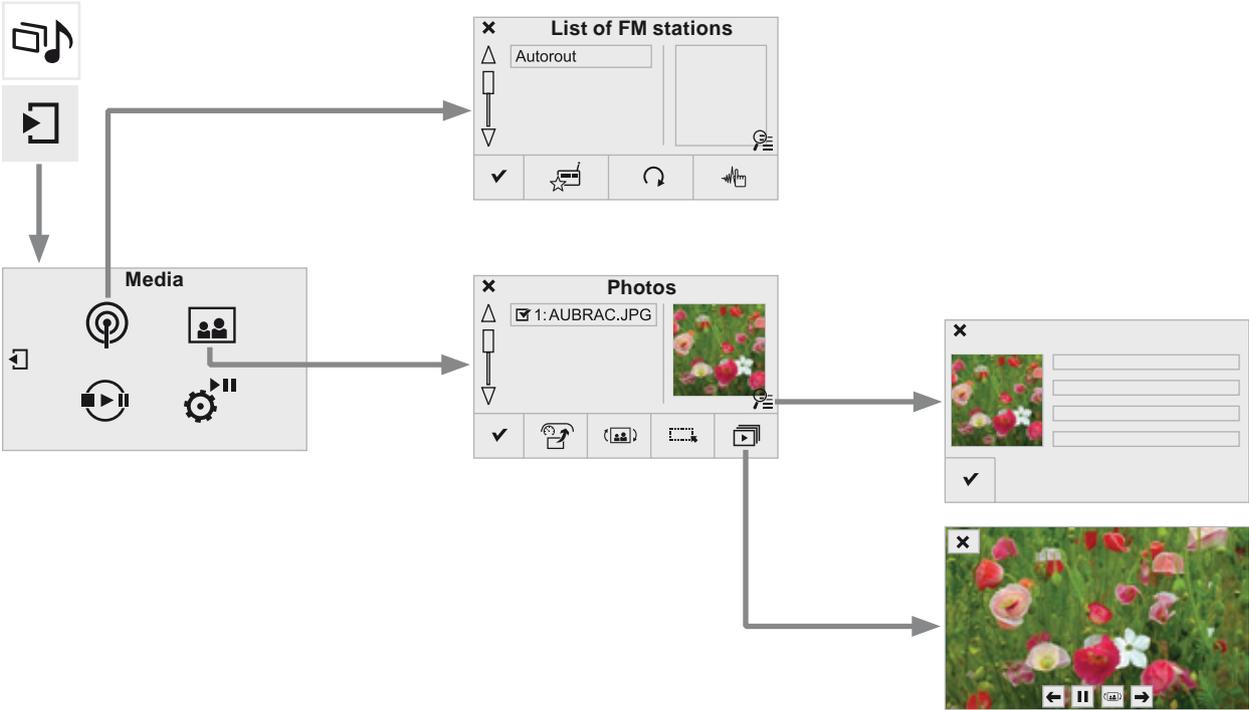

Level 1		Level 2		Level 3		Comments
  	<p>Radio Media ↓ Secondary page ↓ Radio list</p>	 Save				Press a radio station to select it.
		 Update list				Update the list of stations received.
		 Frequency				Enter the desired radio frequency.
		 Confirm				Save the settings.
  	<p>Radio Media ↓ Secondary page ↓ Photos</p>	 Home screen				Display the selected photo in the home page.
		 Rotate				Rotate the photo 90°.
		 Select all				Select all the photos in the list. Press again to deselect.
		 Slideshow	 Previous photo.			Display the photos in sequence, full-screen. The system supports the following image formats: .gif, .jpg, .bmp, .png.
			 Pause / Play.			
			 Next photo.			
 Full screen				Display the selected photo full-screen.		

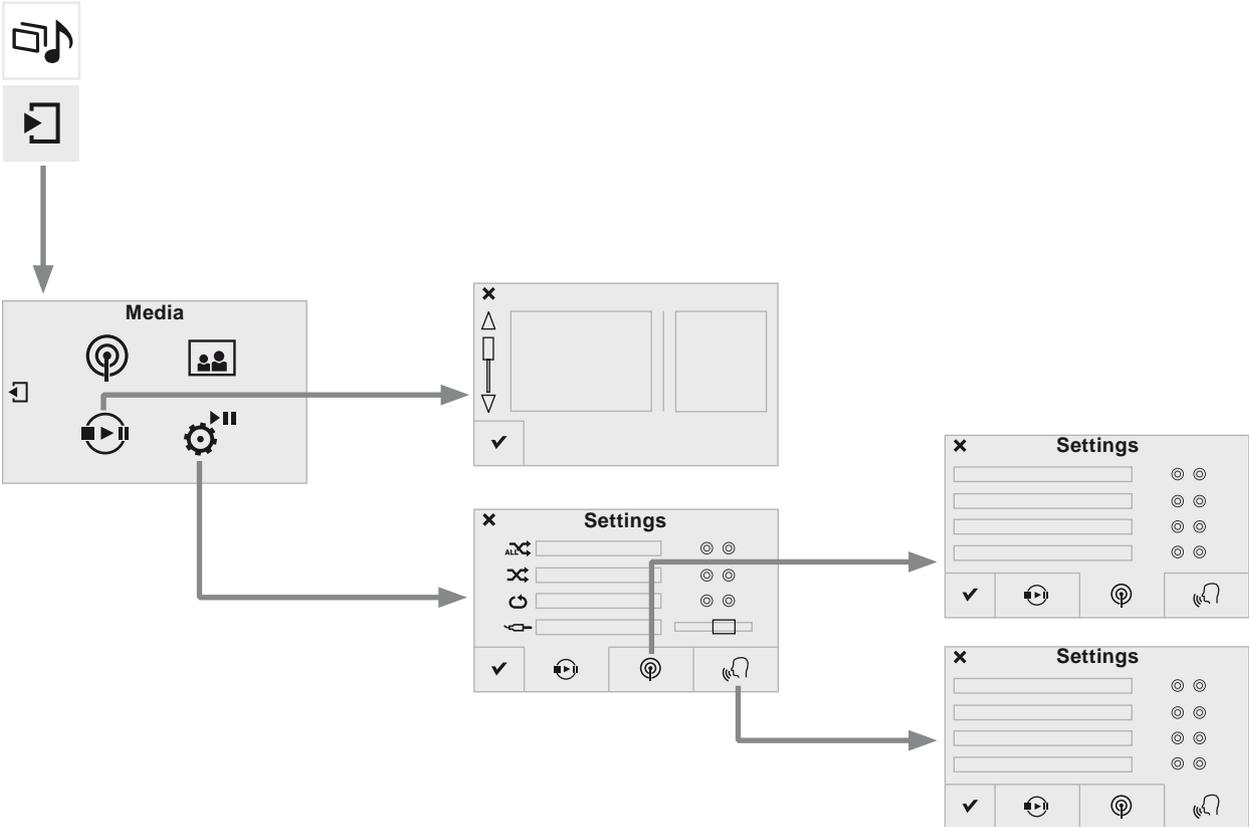

Level 1		Level 2		Level 3		Comments	
	<b>Radio Media</b>					Presentation of the last media used.	
	<b>Secondary page</b>						
	<b>Media list</b>						
	<b>Radio Media</b> ↓ <b>Secondary page</b> ↓ <b>Settings</b>		<b>Media</b> ↓ <b>Settings</b>	 Shuffle (all tracks)	Choose the play settings.		
				 Shuffle (current album)			
				 Repeat			
				 Aux. amplification			
			<b>Radio</b> ↓ <b>Settings</b>	<input type="checkbox"/> RDS options	Activate or deactivate the settings.		
				<input type="checkbox"/> DAB/FM station tracking			
				<input type="checkbox"/> Display Radio Text			
				<input type="checkbox"/> Digital radio slideshow display			
			<b>Announcements</b> ↓ <b>Settings</b>	<input type="checkbox"/> Traffic announcements (TA)	Activate or deactivate the settings.		
				<input type="checkbox"/> News - Weather			
				<input type="checkbox"/> Sport - Programm info			
				<input type="checkbox"/> Flash - Unforeseen events			
			<b>Confirm</b>				Save the settings.

# Radio

## Selecting a station



Press on **Radio Media** to display the primary page.



Select "**List**" in the primary page.

Or



 
Press on **Radio Media** to display the primary page.



Press on the secondary page.



Select "**Radio list**" in the secondary page.



Select a radio station from the list offered.



Select "**Update list**" to refresh the list.

To select a preset radio station.



Press on **Radio Media** to display the primary page.



Select "**Save**".



Select a preset radio station in the list.



If necessary, select change of source.



Select "**FM Radio**".

Or



"**AM Radio**".

**!** Radio reception may be affected by the use of electrical equipment not approved by PEUGEOT, such as a USB charger connected to the 12 V socket. The exterior environment (hills, buildings, tunnel, car park, below ground...) may prevent reception, even in RDS station tracking mode. This phenomenon is normal in the propagation of radio waves and is in no way indicative of a fault with the audio system.


## Changing a radio frequency



 Press on **Radio Media** to display the primary page.



**By automatic frequency search**



Press **←** or **→** to move the cursor for an automatic search down or up for a radio frequency.

**THEN**



Select change source.



Select "**FM Radio**".

Or



"**AM Radio**".

OR



Press on **Radio Media** to display the primary page.



Press on the secondary page.



Press on **Frequency**.

THEN



Enter the frequency in full (e.g.: 92.10 MHz) using the keypad then **"Confirm"**.

FRANCE BLEU

### Changing radio station

Pressing the name of the current radio station brings up a list.

To change radio station press the name of the desired station.

## Presetting a station

Select a radio station or frequency (refer to the corresponding section).



Press on **"Save"** (preset).

Mémoire 1

Select a number in the list to preset the previously chosen radio station.

A long press on a number saves (presets) the station.

Or



A press on this button presets all of the stations one after the other.

## Recalling preset stations



Press on **Radio Media** to display the primary page.



Select **"Save"** (preset).

## Activating / Deactivating RDS



Press on **Radio Media** to display the primary page.



Press on the secondary page.



Select **"Settings"**.




Select **"Radio"**.

Off  On

Activate/deactivate **"RDS options"**.

**i** RDS, if activated, allows you to continue listening to the same station by automatic retuning to alternative frequencies. However, in certain conditions, coverage of an RDS station may not be assured throughout the entire country as radio stations do not cover 100 % of the territory. This explains the loss of reception of the station during a journey.

# DAB (Digital Audio Broadcasting) radio

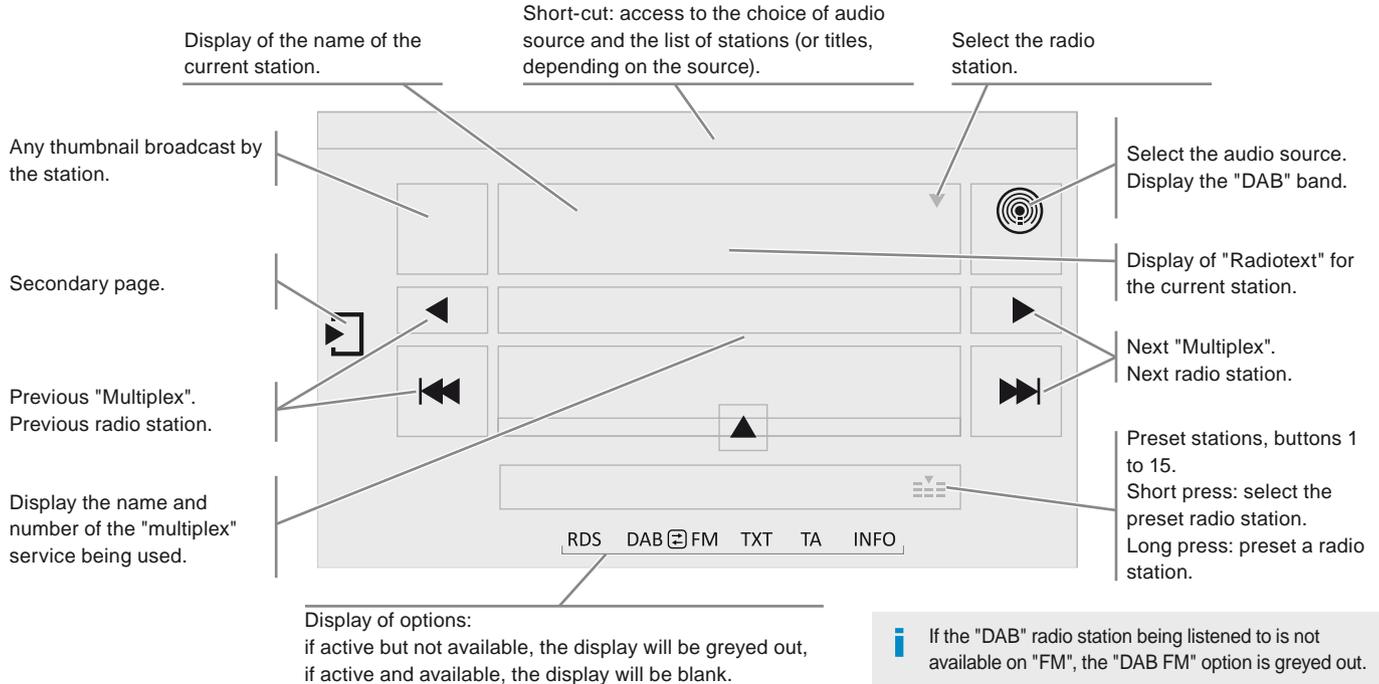

**!** Journaline® is a text-based information service designed for digital radio systems. It provides text-based information structured around topics and sub-topics. This service is available from the "LIST OF DAB STATIONS" page.

## Digital radio

- ! Digital radio provides higher quality reception and also the graphical display of current information on the radio station being listened to. Select "List" in the primary page.  
The range of multiplexes available is displayed in alphabetical order.



Press on **Radio Media** to display the primary page.



Select change of source.



Select "**DAB Radio**".



Select "**List**" in the primary page.

or

Select "**Radio list**" in the secondary page.

Select the radio station from the list offered.

## DAB / FM auto tracking

- i "DAB" does not cover 100% of the territory.  
When the digital radio signal is poor, "DAB/FM station tracking" allows you to continue listening to the same station, by automatically switching to the corresponding "FM" analogue station (if there is one).



Press on **Radio Media** to display the primary page.



Press on the secondary page.



Select "**Settings**".



Select "**Radio**".




Select "**Digital/FM auto tracking**" then "**Confirm**".

- i If "DAB/FM station tracking" is activated, there is a difference of a few seconds when the system switches to "FM" analogue radio with sometimes a variation in volume.  
When the digital signal is restored, the system automatically changes back to "DAB".

- ! If the "DAB" station being listened to is not available on "FM" ("**DAB/FM**" option greyed out), or "DAB/FM station tracking" is not activated, the sound will cut out while the digital signal is too weak.

# Media

## USB port

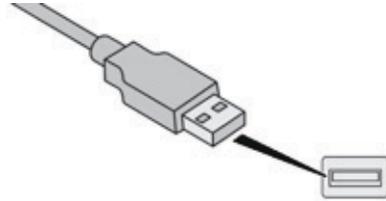

Insert the USB memory stick into the USB port or connect the USB device to the USB port using a suitable cable (not supplied).

**!** To protect the system, do not use a USB hub.

The system builds playlists (in temporary memory), an operation which can take from a few seconds to several minutes at the first connection. Reduce the number of non-music files and the number of folders to reduce the waiting time. The playlists are updated every time the ignition is switched off or on connection of a USB memory stick. The lists are memorised: if they are not modified, the subsequent loading time will be shorter.

## Auxiliary socket (AUX)



This source is only available if the "Auxiliary socket" option has been activated in the "Media" settings.

Connect the portable device (MP3 player...) to the auxiliary Jack socket using an audio cable (not supplied).

First adjust the volume of your portable device (to a high level). Then adjust the volume of your audio system. Display and management of the controls are via the portable device.

## CD player

Insert the CD in the player.

## Selecting the source



Press on **Radio Media** to display the primary page.



Select change of source.



Choose the source.



The steering mounted **SRC** (source) button can be used to go to the next media source, available if the source is active.



Press on **OK** to confirm the selection.

## Information and advice

The audio system will only play audio files with ".wma", ".aac", ".flac", ".ogg" and ".mp3" file extensions and with a bit rate of between 32 Kbps and 320 Kbps.

It also supports VBR (Variable Bit Rate) mode. No other type of file (.mp4, etc.) can be played. ".wma" files must be of the standard wma 9 type.

The sampling rates supported are 32, 44 and 48 KHz.

It is advisable to restrict file names to 20 characters, without using of special characters (e.g. " " ? ; ù) to avoid any playing and displaying problems.

In order to be able to play a recorded CDR or CDRW, when recording it is preferable to select the ISO 9660 level 1, 2 or Joliet standard.

If the disc is recorded in another format it may not be played correctly.

It is recommended that the same recording standard is always used for an individual disc, with as low a speed as possible (4x maximum) for optimum sound quality.


In the particular case of a multi-session CD, the Joliet standard is recommended.

Use only USB memory sticks formatted FAT 32 (file allocation table).

 To protect the system, do not use a USB hub.

 It is recommended that the USB cable for the portable device is used.

 The system supports USB mass storage devices, BlackBerry® devices or Apple® players via USB ports. The adaptor cable is not supplied. Control of the peripheral device is with the audio system controls. Other peripherals, not recognised on connection, must be connected to the auxiliary socket using a Jack cable (not supplied).

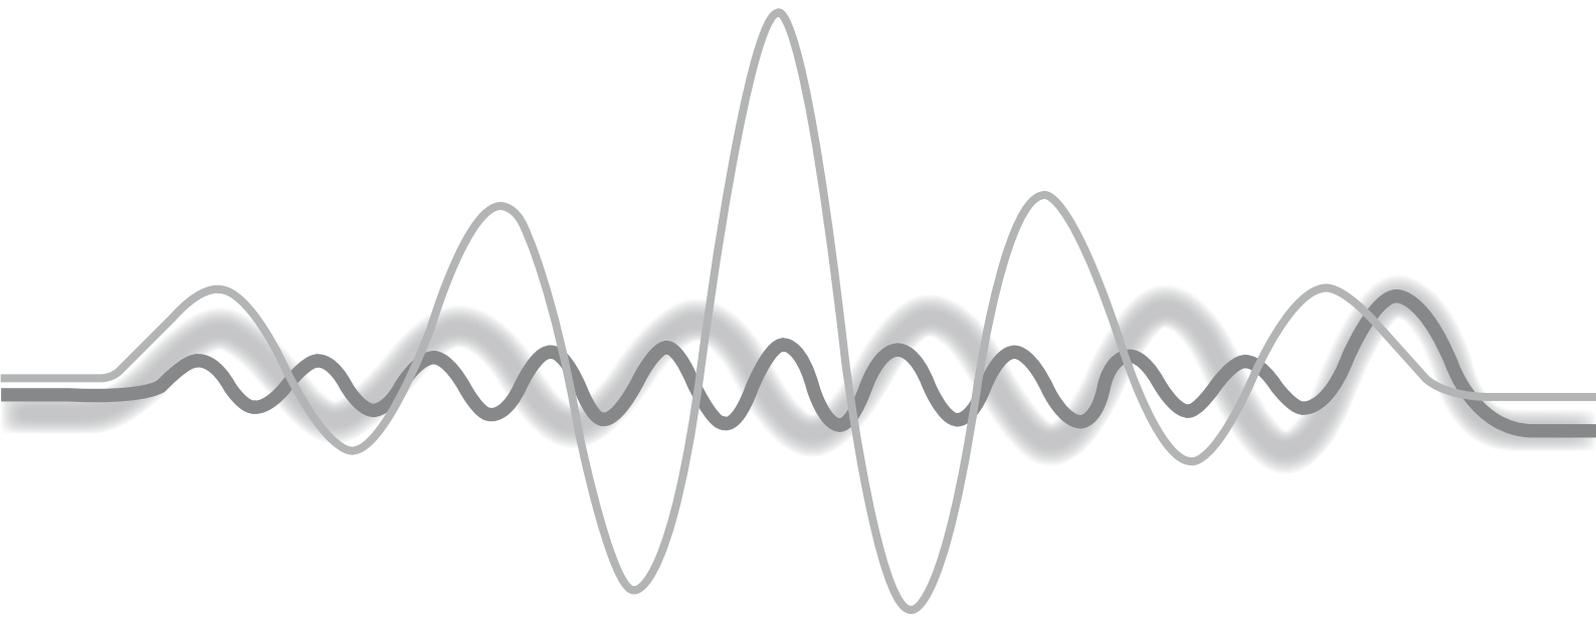

## Bluetooth® audio streaming

Streaming allows audio files on your telephone to be played through the vehicle's speakers.


Connect the telephone: see the "**Telephone**" section, then "**Bluetooth**".  
Choose the "**Audio**" or "**All**" profile.

If play does not start automatically, it may be necessary to start the audio playback from the telephone.

Control is from the peripheral device or by using the audio system buttons.

**!** Once connected in streaming mode, the telephone is considered to be a media source.  
It is recommended that you activate "**Repeat**" on the Bluetooth® peripheral.

## Connecting Apple® players

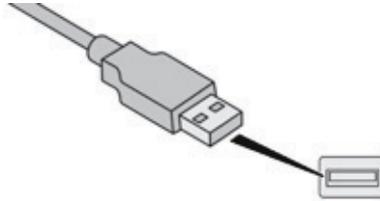


Connect the Apple® player to the USB port using a suitable cable (not supplied).  
Play starts automatically.

Control is via the audio system.


**i** The classifications available are those of the portable device connected (artists / albums / genres / playlists / audiobooks / podcasts).  
The default classification used is by artist. To modify the classification used, return to the first level of the menu then select the desired classification (playlists for example) and confirm to go down through the menu to the desired track.

The version of software in the audio system may not be compatible with the generation of your Apple® player.


# Settings

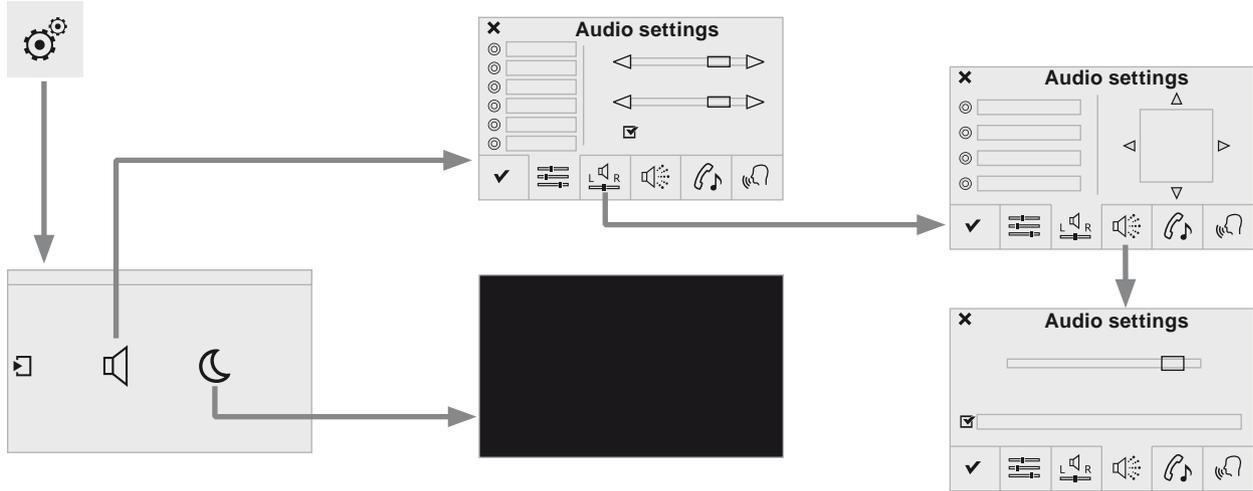

Level 1		Level 2		Comments
 	<b>Settings</b> ↓ <b>Audio settings</b>		<b>Ambience</b>	Choose the sound ambience.
			<b>Balance</b>	Sound distribution using the Arkamys® system.
			<b>Sound effects</b>	Set the volume or activate the link to vehicle speed.
			<b>Ringtones</b>	Set the telephone ringtone and volume.
			<b>Voice</b>	Set the volume and voice for speaking street names.
			<b>Confirm</b>	Save your settings.
 	<b>Settings</b> ↓ <b>Turn off screen</b>			Function that turns off the display. Pressing the screen reactivates it.

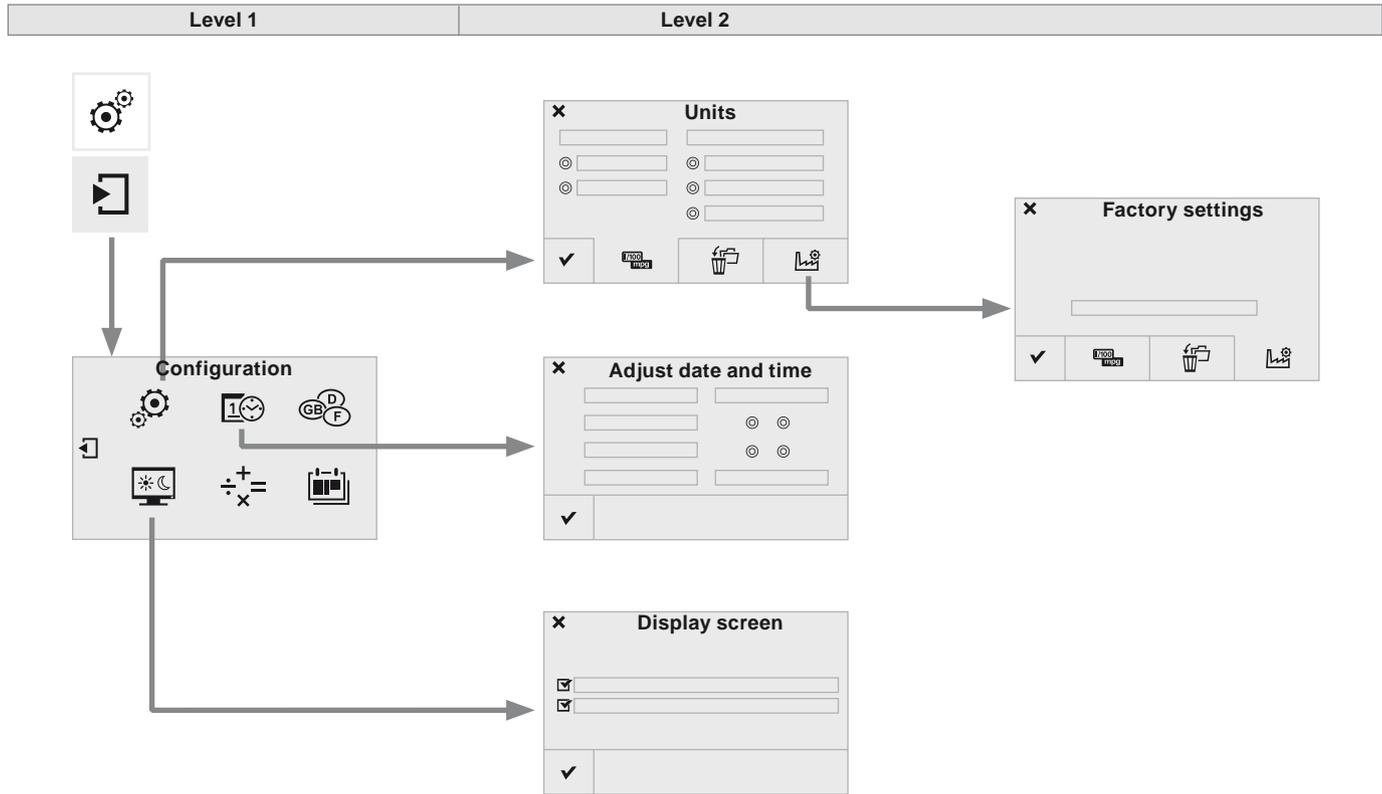

Level 1		Level 2		Comments
  	<b>Settings</b> ↓ <b>Secondary page</b> ↓ <b>System Settings</b>	 <b>Units</b>	Set the units used to display distance, fuel consumption and temperature.	
		 <b>Delete data</b>	Select the desired data in the list then press Delete.	
		 <b>Factory settings</b>	Return to factory settings.	
		✓ <b>Confirm</b>	Save the settings.	
  	<b>Settings</b> ↓ <b>Secondary page</b> ↓ <b>Time/Date</b>	✓ <b>Confirm</b>	Set the date and time then confirm.	
  	<b>Settings</b> ↓ <b>Secondary page</b> ↓ <b>Screen settings</b>	<input checked="" type="checkbox"/> <b>Activate automatic text scrolling</b> <input checked="" type="checkbox"/> <b>Activate animations</b> ✓ <b>Confirm</b>	Activate or deactivate the setting then confirm.	

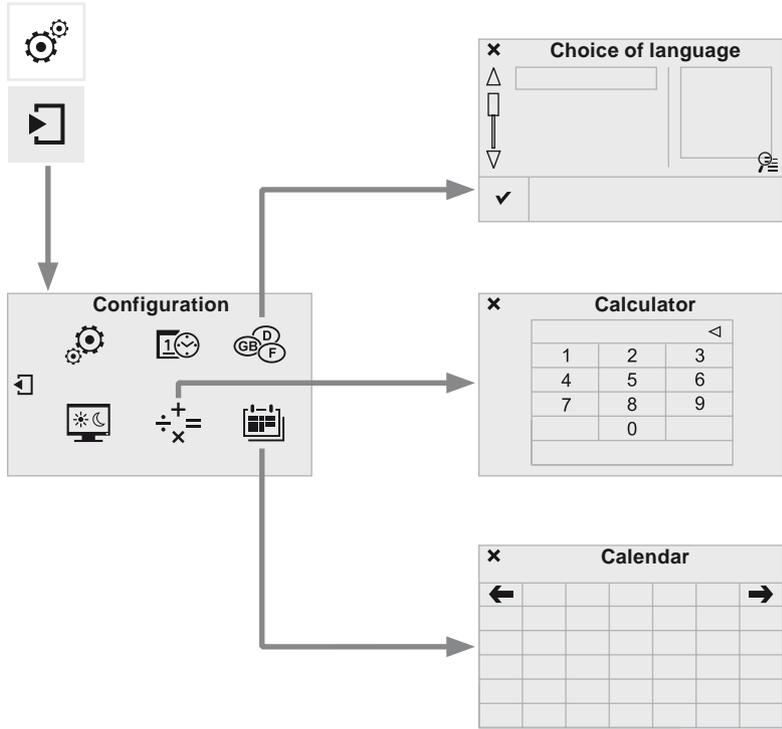

Level 1		Level 2		Comments
  	<b>Settings</b> ↓ <b>Secondary page</b> ↓ <b>Languages</b>	✓	Confirm	Select the language then confirm.
  	<b>Settings</b> ↓ <b>Secondary page</b> ↓ <b>Calculator</b>			Select the calculator.
  	<b>Settings</b> ↓ <b>Secondary page</b> ↓ <b>Calendar</b>			Select the calendar.

## Audio settings



Press on **Settings** to display the primary page.



Select "**Audio settings**".



Select "**Ambience**".

Or



"**Balance**"

Or



"**Sound effects**"

Or



"**Ringtones**"

Or



"**Voice**".

**!** The distribution (or spatialisation using the Arkamys® system) of sound is an audio process that allows the audio quality to be adapted to the number of passengers in the vehicle. Available only with the 6-speaker configuration.

**!** The audio settings (**Ambience**, **Bass**, **Treble**: and **Loudness**) are different and independent for each sound source. The settings for **Distribution** and **Balance** are common to all sources.

- !**
- "**Ambience**" (choice of 6 musical ambiances)
  - "**Bass**:"
  - "**Treble**:"
  - "**Loudness**" (Activate/Deactivate)
  - "**Distribution**" ("**Driver**", "**All passengers**", "**Front only**")
  - "**Audible response from touch screen**"
  - "**Volume linked to speed**" (Activate/Deactivate)

**i** On-board audio: Arkamys® Sound Staging optimises sound distribution in the passenger compartment.

## Modifying system settings



Press on **Settings** to display the primary page.



Press on the secondary page.



Select "**System Settings**".



Select "**Units**" to change the units of distance, fuel consumption and temperature.



Select "**Delete data**" to delete the list of recent destinations, personal points of interest, contacts in the list.



Choose the item then select "**Delete**".



Select "**Factory settings**" to return to the original settings.



Press on **Settings** to display the primary page.



Press on the secondary page.



Select "**Screen settings**".



Activate or deactivate "**Activate automatic text scrolling**" and "**Activate animations**".



Press on **Settings** to display the primary page.



Press on the secondary page



Select "**Time/Date**" to change the time zone, synchronisation with GPS, the time and its format, then the date.



The system does not manage changes between summer time and winter time automatically (according to country).



Select "**Languages**" to change language.




Select "**Calculator**" to display a calculator.



Select "**Calendar**" to display a calendar.

# Connected services

## MirrorLink™

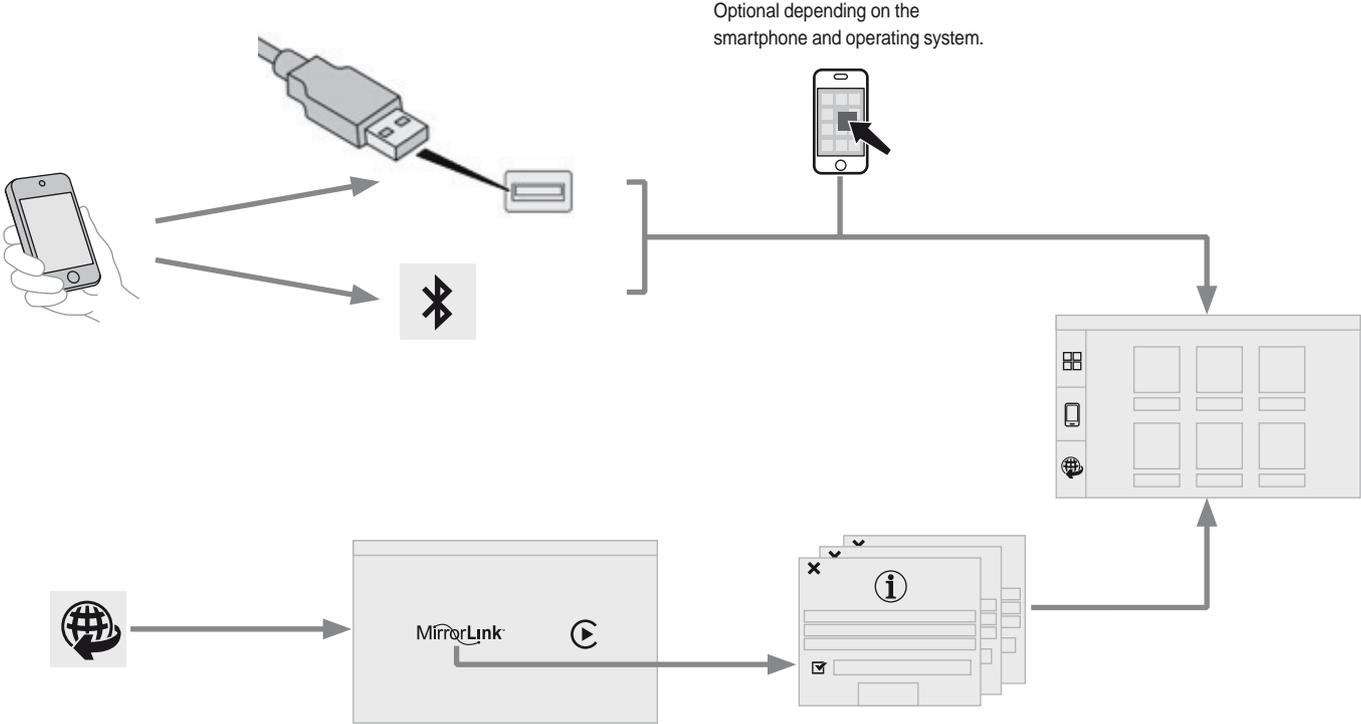

## MirrorLink™ smartphone connection

**!** As a safety measure and because it requires sustained attention by the driver, using a smartphone when driving is prohibited. All operations must be done with the **vehicle stationary**.

**i** The synchronisation of a smartphone allows applications on a smartphone that are adapted to the MirrorLink™ technology to be displayed in the vehicle's screen. The principles and standards are constantly evolving. For the communication process between the smartphone and the system to work correctly, the smartphone must be unlocked; update the operating system of your smartphone as well as the date and time in the smartphone and the system. For the list of eligible smartphones, connect to the brand's internet website in your country.

**!** As a safety measure, applications can only be viewed with the vehicle stationary; display is interrupted once the vehicle is moving.

**i** Please note:

- if your smartphone is supported, to make it "MirrorLink™" compatible, some phone manufacturers nevertheless invite you to first download a dedicated application.



When connecting a smartphone to the system, it is recommended that Bluetooth® be started on the smartphone



Connect a USB cable. The smartphone charges when connected by a USB cable.



From the system, press on "**Connected services**" to display the primary page.



Press on "**MirrorLink™**" to start the application in the system.



Start the application on the smartphone (optional, depending on the smartphone and operating system).

**OK**

During the procedure, several screen pages relating to certain functions are displayed. Accept to start and end the connection.


Once connection is established, an page is displayed with the applications already downloaded to your smartphone and adapted to MirrorLink™ technology. If only one application has been downloaded to the smartphone, it starts automatically.

Access to the different audio sources remains accessible in the margin of the MirrorLink™ display, using touch buttons in the upper bar. Access to the menus for the system is possible at any time using the dedicated buttons

### Voice recognition


Press the end of the lighting control stalk to start voice recognition of your smartphone via the system.

Voice recognition requires a compatible smartphone connected to the vehicle by Bluetooth®.

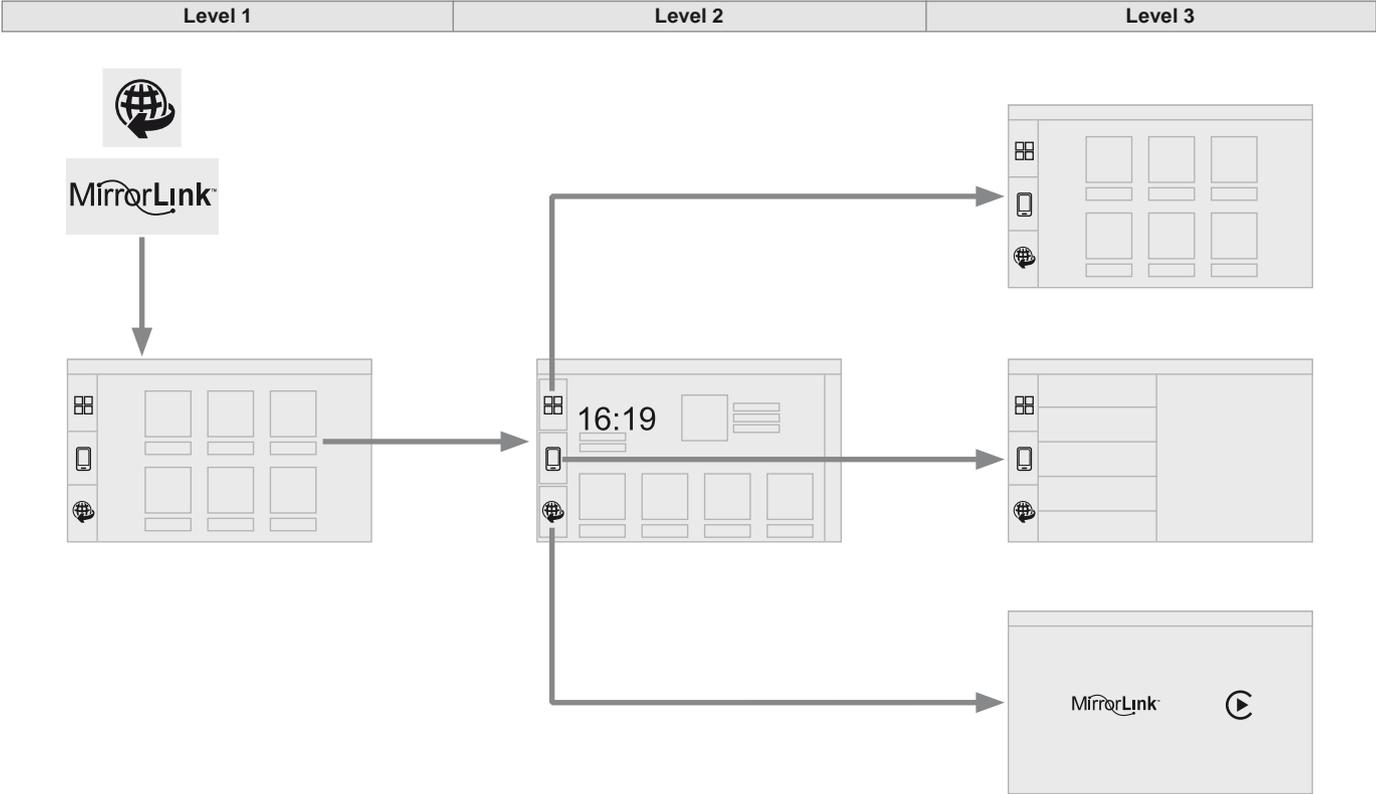

Level 1		Level 2		Level 3		Comments
 	<p><b>Connected services</b></p> <p>↓</p> <p><b>MirrorLink™</b></p>					Access or return to the applications already downloaded to your smartphone and adapted to MirrorLink™ technology.
						Access to a menu list depending on the application chosen. "Back": abandon the current operation, go up one level. "Home": access or return to the "Car mode" page.
						Access to the "Connected services" primary page.

# CarPlay®

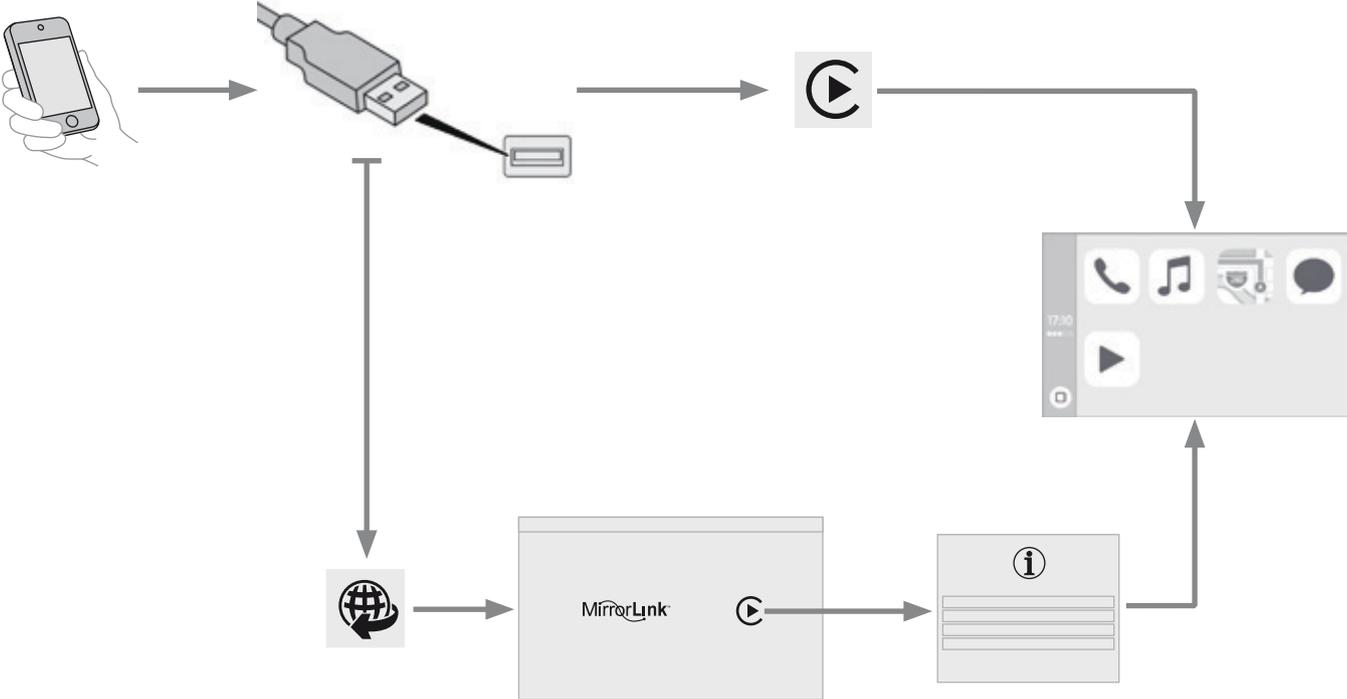

## CarPlay® smartphone connection

**!** As a safety measure and because it requires sustained attention by the driver, using a smartphone when driving is prohibited. All operations must be done with the **vehicle stationary**.

**i** The synchronisation of a smartphone allows applications on a smartphone that are adapted to the CarPlay® technology to be displayed on the vehicle's screen. As the principles and standards are constantly evolving, it is recommended that you update the operating system of your smartphone. For the list of eligible smartphones, connect to the brand's internet website in your country.

**i** As a safety measure, applications can only be viewed with the vehicle stationary; display is interrupted once the vehicle is moving.



Connect a USB cable. The smartphone charges when connected by a USB cable.



On connecting the USB cable, the **"Telephone"** function changes to **"CarPlay"** in the menu carousel. Press on **"CarPlay"** to display the CarPlay® interface.

Or



Connect the USB cable. The smartphone is charged while connected by the USB cable.



From the system, press on **"Connected services"** to display the primary page.



Press on **"CarPlay"** to display the CarPlay® interface.

**i** During the procedure, one or more screen pages relating to certain functions are displayed on connection.


When the telephone menu is displayed, connection of the USB cable causes the display to automatically change to CarPlay mode.

When another menu is displayed, on connection of a USB cable a message is displayed in the upper bar, indicating that CarPlay mode has been activated. Press Open to display CarPlay mode.

### Voice recognition

Press the end of the lighting control stalk to start voice recognition of your smartphone via the system.

# Telephone

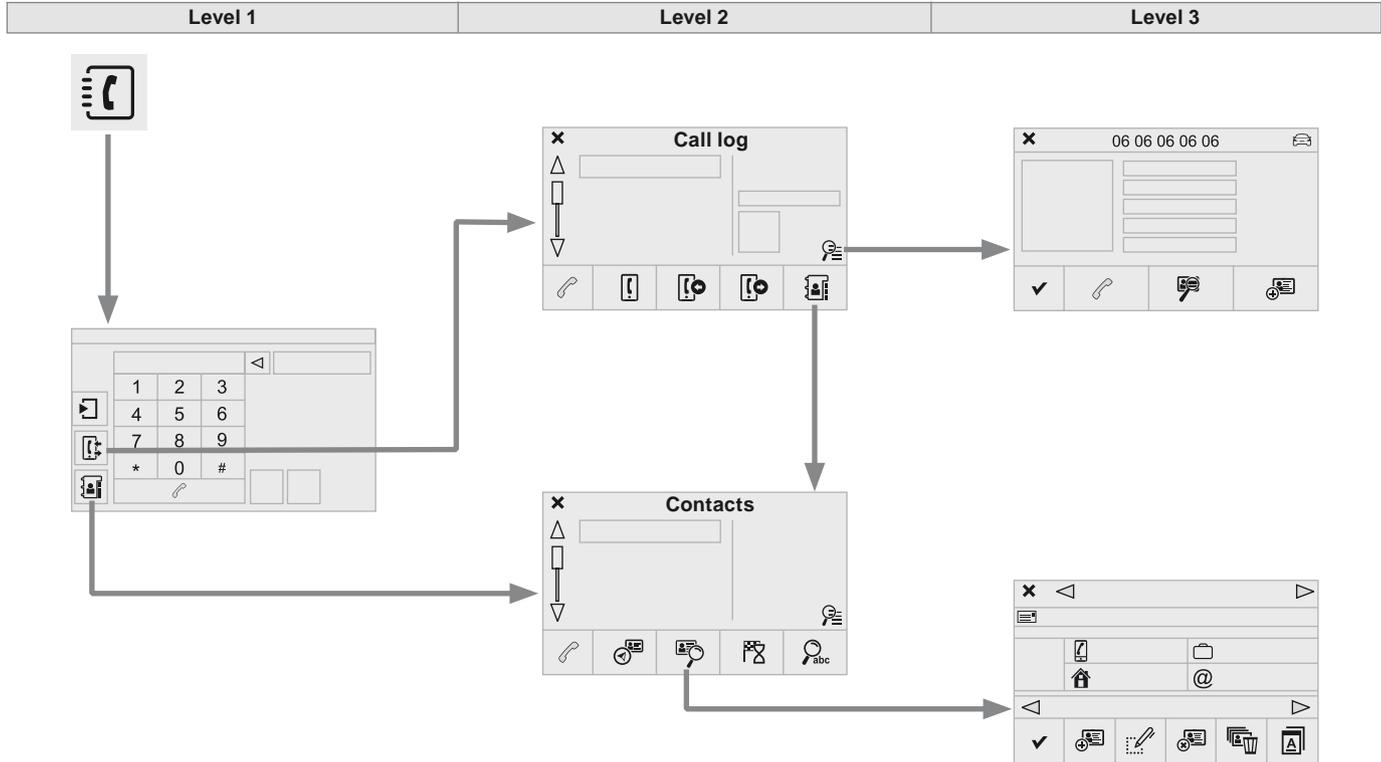

Level 1		Level 2		Level 3		Comments
 	<p>Telephone ↓ Call log</p>	 All calls				After making choices, start the call.
		 Incoming calls				
		 Outgoing calls				
		 Contacts				
		 Magnifying glass	 View			
			 Create			
 Call						
 	<p>Telephone ↓ Contacts</p>	 Addresses				After making choices, start the call.
		 View	 Create			
			 Modify			
			 Delete			
			 Delete all			
			 By name			
			 Confirm			
		 Navigate to				
		 Search for contact				
 Call						



Level 1		Level 2		Level 3		Comments
  	Telephone connection ↓ Secondary page ↓ Bluetooth connection	 <b>Search</b>				Start the search for another peripheral device to connect.
		 <b>Connect/Disconnect</b>				Start or stop the Bluetooth® connection to the selected peripheral device.
		 <b>Update</b>				Import the contacts from the selected telephone to store them in the audio system.
		 <b>Delete</b>				Delete the selected telephone.
		 <b>Confirm</b>				Save the settings.
  	Telephone connection ↓ Secondary page ↓ Search for devices			<input checked="" type="checkbox"/> Telephone		Start the search for peripheral devices.
		<b>Devices detected</b>		<input checked="" type="checkbox"/> Audio streaming		
				<input checked="" type="checkbox"/> Internet		
  	Telephone connection ↓ Secondary page ↓ Telephone Options	 <b>Put on hold</b>				Cut the microphone temporarily so that the contact cannot hear your conversation with a passenger.
		 <b>Update</b>				Import the contacts from the selected telephone to save then in the audio system.
		 <b>Ringtones</b>				Choose the telephone ringtone and volume.
		 <b>Memory info.</b>				Contact records used and free, percentage of storage space used by internal contacts and Bluetooth® contacts.
		 <b>Confirm</b>				Save the settings.

## Pairing a Bluetooth® telephone

**!** For reasons of safety and because they require prolonged attention on the part of the driver, the operations for pairing the Bluetooth® mobile telephone to the hands-free system of the audio system must be carried out with the **vehicle stationary**.

### Procedure (short) from the telephone

In the Bluetooth® menu of your device, select the system name in the list of devices detected.

Enter a code of at least 4 figures in the device and confirm.

**✓** Enter this same code in the system, select **"OK"** and confirm.

### Procedure from the system

Activate the telephone's Bluetooth® function and ensure that it is "visible to all" (telephone configuration).



Press on **Telephone** to display the primary page.



Press on the secondary page.



Select **"Bluetooth connection"**.



Select **"Search for devices"**.  
The list of telephones detected is displayed.



If the telephone is not detected, it is recommended that you switch the Bluetooth® function on your telephone off and then on again.



Select the name of the desired peripheral from the list and **"Confirm"**.



Enter a code of at least 4 figures for the connection then **"Confirm"**.

Enter this same code in the telephone then accept the connection.

The system offers to connect the telephone:

- in **"Telephone"** (hands-free kit, telephone only),
- in **"Audio streaming"** (streaming: wireless playing of audio files from the telephone),
- in **"Internet"** (internet browsing, only if your telephone is compatible with the "DUN" Dial-Up Networking Bluetooth® standard).

Select one or more profiles and confirm.

**!** The services available depend on the network, the SIM card and the compatibility of the Bluetooth® telephone used. Check the telephone manual and with your network provider for details of the services available to you.

**!** The ability of the system to connect with only one profile depends on the telephone. The three profiles may all connect by default.

Visit [www.peugeot.co.uk](http://www.peugeot.co.uk) for more information (compatibility, additional help, ...).



The recognised telephone appears in the list.

Depending on your telephone, you may be asked to accept automatic connection every time the ignition is switched on.

**!** Depending on the type of telephone, the system will ask you to accept or not the transfer of your contacts.



If not, select "**Update**".

On return to the vehicle, if the last telephone connected is present again, it is reconnected automatically and within around 30 seconds after switching on the ignition the pairing is done without any action on your part, with (Bluetooth® activated).

To modify the automatic connection mode, select the telephone in the list then select the desired profile.

## Connecting a Bluetooth® peripheral device

### Automatic reconnection

On switching on the ignition, the telephone connected when the ignition was last switched off is automatically reconnected, if this connection mode had been activated during the pairing procedure.

The connection is confirmed by the display of a message and the name of the telephone.

### Manual connection



Press on **Telephone** to display the primary page.



Press on the secondary page.



Select "**Bluetooth**" to display the list of paired peripherals.

Select the peripheral to connect.



Press on "**Search for devices**".

The connection is confirmed by the display of a message and the name of the telephone.

## Managing paired telephones

**i** This function allows the connection or disconnection of a peripheral device as well as the deletion of a pairing.



Press on **Telephone** to display the primary page.



Press on the secondary page.



Select "**Bluetooth**" to display the list of paired peripheral devices.

Select the peripheral in the list.



Select "**Search for devices**"

Or



"**Connect / Disconnect**" to start or end the Bluetooth connection with the selected device.

Or



"**Delete**" to delete the pairing.

## Receiving a call

An incoming call is announced by a ring and a superimposed display in the screen.



Make a short press on the steering mounted **TEL** button to accept an incoming call.



Make a long press



on the steering mounted **TEL** button to reject the call.

Or



Select "**End call**".

## Making a call

**!** Using the telephone is not recommended while driving. Park the vehicle. Make the call using the steering mounted controls.

### Calling a new number



Press on **Telephone** to display the primary page.



Enter the phone number using the digital keypad. Press "**Call**" to start the call.

### Calling a contact



Press on **Telephone** to display the primary page.



Or make a long press



on the steering mounted **TEL** button.



Select "**Contacts**".

Select the desired contact from the list offered.



Select "**Call**".

## Calling a recently used number



Press on **Telephone** to display the primary page.



Select "**Call log**".

Select the desired contact from the list offered.



It is always possible to make a call directly from the telephone; park the vehicle first as a safety measure.

## Managing contacts / entries



Press on **Telephone** to display the primary page.



Select "**Contacts**".



Select "**View**".



Select "**Create**" to add a new contact, observing the "international format".

Or



"**Modify**" to edit the selected contact.

Or



"**Delete**" to delete the selected contact.

Or



"**Delete all**" to delete all information for the selected contact.



Select "**By name**" to view the list of contacts.

## Frequently asked questions

The following table groups together the answers to the most frequently asked questions concerning your audio system.

### Navigation

QUESTION	ANSWER	SOLUTION
The route calculation is not successful.	The route settings may conflict with the current location (exclusion of toll roads on a toll motorway).	Check the route settings in the "Navigation" menu.
The POIs do not appear.	The POIs have not been selected.	Select the POIs in the list of POIs.
The Risk areas audible warning does not work.	The audible warning is not active.	Activate audible warnings in the "Navigation" menu.
The system does not suggest a detour around an incident on the route.	The guidance criteria do not take account of TMC messages.	Select the "Information" function in the list of route settings.
I receive a Risk areas alert which is not on my route.	Other than guidance, the system announces all Risk areas positioned in a cone located in front of the vehicle. It may provide an alert for Risk areas located on nearby or parallel roads.	Zoom in on the map to view the exact position of the Risk areas. Select "On the route" to no longer receive alerts other than navigation instructions or to reduce the time for the announcement.

QUESTION	ANSWER	SOLUTION
Certain traffic jams along the route are not indicated in real time.	On starting, it is several minutes before the system begins to receive the traffic information.	Wait until the traffic information is being received correctly (display of the traffic information icons on the map).
	The filters are too restrictive.	Modify the settings.
	In certain countries, only major routes (motorways...) are listed for the traffic information.	This phenomenon is normal. The system is dependent on the traffic information available.
The altitude is not displayed.	On starting, the initialisation of the GPS may take up to 3 minutes to receive more than 4 satellites correctly.	Wait until the system has started up completely so that there is GPS coverage by at least 4 satellites.
	Depending on the geographical environment (tunnel...) or the weather, the conditions of reception of the GPS signal may vary.	This phenomenon is normal. The system is dependent on the GPS signal reception conditions.

## Radio

QUESTION	ANSWER	SOLUTION
<p>The quality of reception of the radio station listened to gradually deteriorates or the stored stations do not function (no sound, 87.5 Mhz is displayed...).</p>	<p>The vehicle is too far from the transmitter used by the station listened to or there is no transmitter in the geographical area through which the vehicle is travelling.</p>	<p>Activate the "RDS" function by means of the short-cut menu to enable the system to check whether there is a more powerful transmitter in the geographical area.</p>
	<p>The environment (hills, buildings, tunnels, basement car parks...) block reception, including in RDS mode.</p>	<p>This phenomenon is normal and does not indicate a fault with the audio system.</p>
	<p>The aerial is absent or has been damaged (for example when going through a car wash or into an underground car park).</p>	<p>Have the aerial checked by a PEUGEOT dealer.</p>
<p>I cannot find some radio stations in the list of stations received.</p>	<p>The station is not received or its name has changed in the list.</p>	<p>Press and hold the "List" button at the steering mounted controls to update the list of stations received or press on the system update function: "Update list".</p>
	<p>Some radio stations send other information in place of their name (the title of the song for example). The system interprets this information as the name of the station.</p>	
<p>The name of the radio station changes.</p>		

## Media

QUESTION	ANSWER	SOLUTION
Playback of my USB memory stick starts only after a very long wait (around 2 to 3 minutes).	Some files supplied with the memory stick may greatly slow down access to reading the memory stick (multiplication by 10 of the catalogue time).	Delete the files supplied with the memory stick and limit the number of sub-folders in the file structure on the memory stick.
When I connect my iPhone as a telephone and to the USB port at the same time, I am unable to play the music files.	When the iPhone connects automatically as a telephone, it forces the streaming function. The streaming function takes the place of the USB function which is then not useable, there is a period without sound of the track being played with Apple® players.	Disconnect and reconnect to the USB port (the USB function takes priority over streaming).
The CD is ejected automatically or is not played by the player.	The CD is inserted upside down, is unplayable, does not contain any audio data or contains an audio format which the player cannot play.	Check that the CD is inserted in the player the right way up.
	The CD has been recorded in a format that is not compatible with the player (udf...).	Check the condition of the CD: the CD cannot be played if it is too badly damaged.
	The CD is protected by an anti-pirating protection system which is not recognised by the audio system.	Check the content in the case of a recorded CD: refer to the advice in the "AUDIO" section. The audio system's CD player does not play DVDs. Some recorded CDs will not be played by the audio system because they are not of adequate quality.
There is a long waiting period following the insertion of a CD or connection of a USB memory stick.	When a new medium is inserted, the system reads a certain amount of data (directory, title, artist, etc.). This may take from a few seconds to a few minutes.	This phenomenon is normal.

QUESTION	ANSWER	SOLUTION
The CD player sound is poor.	The CD used is scratched or of poor quality.	Insert good quality CDs and store them in suitable conditions.
	The audio equipment settings (bass, treble, ambiences) are unsuitable.	Set the treble or bass level to 0, without selecting an ambience.
Some characters in the media information are not displayed correctly while playing.	The audio system does not display some types of characters.	Use standard characters to name tracks and folders.
Playing of streaming files does not start.	The peripheral device connected does not support automatic play.	Start the playback from the device.
The names of tracks and the track length are not displayed on the screen when streaming audio.	The Bluetooth profile does not allow the transfer of this information.	

## Settings

QUESTION	ANSWER	SOLUTION
In changing the setting of treble and bass the equalizer setting is deselected.	The selection of an equalizer setting imposes the balance settings. Modifying one without the other is not possible.	Modify the balance or equalizer settings to obtain the desired musical ambience.
In changing the equalizer setting, treble and bass return to zero.		
When changing the balance settings, the distribution setting is deselected.	The selection of a distribution setting imposes the balance settings. Modifying one without the other is not possible.	Modify the balance or distribution settings to obtain the desired musical ambience.
When changing an distribution setting, the balance setting is deselected.		
When the "All passengers" mode is selected, the distribution is not as I would like.	The choice of an "All passengers" distribution setting can be programmed.	Modify the distribution setting using the slider on the touch screen.